

## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b>   | <b>1</b>  |
| <b>1 Identification</b>  | <b>1</b>  |
| 1.1 Engine number/engine data  | 1         |
| <b>2 Safety information</b>  | <b>2</b>  |
| 2.1 Safety precautions when working on the fuel supply system                          | 2         |
| 2.2 Safety precautions when working on vehicles with start/stop system                 | 2         |
| 2.3 Safety precautions when using testers and measuring instruments during a road test | 3         |
| 2.4 Safety precautions when working on the cooling system                              | 3         |
| 2.5 Safety precautions when working on the exhaust system                              | 3         |
| 2.6 Safety precautions when working on the ignition system                             | 4         |
| 2.7 Safety precautions when working on the subframe                                    | 4         |
| <b>3 Repair instructions</b>   | <b>5</b>  |
| 3.1 Rules for cleanliness  | 5         |
| 3.2 Foreign material in engine   | 5         |
| 3.3 Contact corrosion  | 5         |
| 3.4 Routing and attachment of pipes, hoses and wiring                                  | 6         |
| 3.5 Installing radiators and condensers  | 6         |
| 3.6 Nuts, bolts  | 6         |
| 3.7 Identification plates  | 6         |
| 3.8 Use of impact wrenches   | 7         |
| <b>10 - Removing and installing engine</b>   | <b>8</b>  |
| <b>1 Removing and installing engine</b>  | <b>8</b>  |
| 1.1 Removing engine  | 8         |
| 1.2 Securing engine to engine and gearbox support                                      | 8         |
| 1.3 Installing engine  | 9         |
| <b>2 Assembly mountings</b>  | <b>10</b> |
| <b>3 Engine cover panel</b>  | <b>11</b> |
| 3.1 Removing and installing engine cover panel   | 11        |
| <b>13 - Crankshaft group</b>   | <b>13</b> |
| <b>1 Cylinder block (pulley end)</b>   | <b>13</b> |
| 1.1 Assembly overview - cylinder block (pulley end)                                    | 13        |
| 1.2 Removing and installing poly V-belt  | 20        |
| 1.3 Removing and installing poly V-belt tensioner                                      | 23        |
| 1.4 Removing and installing vibration damper   | 24        |
| 1.5 Removing and installing bracket for ancillaries                                    | 32        |
| <b>2 Cylinder block (gearbox end)</b>  | <b>34</b> |
| 2.1 Assembly overview - cylinder block (gearbox end)                                   | 34        |
| 2.2 Removing and installing drive plate  | 36        |
| 2.3 Removing and installing sealing flange (gearbox end)                               | 37        |
| 2.4 Renewing needle bearing in drive plate   | 45        |
| <b>3 Crankshaft</b>  | <b>48</b> |
| 3.1 Assembly overview - crankshaft   | 48        |
| 3.2 Crankshaft dimensions  | 51        |
| 3.3 Allocation of main bearing shells  | 51        |
| 3.4 Measuring axial clearance of crankshaft  | 53        |
| 3.5 Measuring radial clearance of crankshaft   | 54        |
| 3.6 Removing and installing sender wheel   | 54        |
| <b>4 Balance shaft</b>   | <b>56</b> |
| 4.1 Assembly overview - balance shaft  | 56        |
| 4.2 Removing and installing balance shaft  | 57        |



|           |   |            |
|-----------|---|------------|
| 4.3       | Renewing oil seal for balance shaft (inlet side)                  | 64         |
| <b>5</b>  | <b>Pistons and conrods</b>  | <b>67</b>  |
| 5.1       | Assembly overview - pistons and conrods                           | 67         |
| 5.2       | Removing and installing pistons                                   | 71         |
| 5.3       | Removing and installing oil spray jets                            | 73         |
| 5.4       | Checking pistons and cylinder bores                               | 74         |
| 5.5       | Separating parts of new conrod                                    | 77         |
| 5.6       | Checking radial clearance of conrod bearings                      | 78         |
| <b>15</b> | <b>- Cylinder head, valve gear</b>                                | <b>79</b>  |
| <b>1</b>  | <b>Timing chain cover</b>   | <b>79</b>  |
| 1.1       | Assembly overview - timing chain cover                            | 79         |
| 1.2       | Removing and installing timing chain cover                        | 82         |
| 1.3       | Renewing oil seal for vibration damper                            | 87         |
| <b>2</b>  | <b>Chain drive</b>  | <b>90</b>  |
| 2.1       | Assembly overview - camshaft timing chains                        | 90         |
| 2.2       | Assembly overview - drive chain for balance shaft                 | 92         |
| 2.3       | Removing and installing bearing saddle                            | 95         |
| 2.4       | Removing camshaft timing chain from camshafts                     | 101        |
| 2.5       | Removing and installing camshaft timing chain                     | 113        |
| 2.6       | Removing and installing drive chain for balance shaft             | 127        |
| 2.7       | Checking timing chain   | 130        |
| 2.8       | Checking valve timing   | 133        |
| <b>3</b>  | <b>Cylinder head</b>  | <b>138</b> |
| 3.1       | Assembly overview - cylinder head                                 | 138        |
| 3.2       | Removing and installing cylinder head                             | 142        |
| 3.3       | Removing and installing non-return valve                          | 152        |
| 3.4       | Checking compression  | 152        |
| <b>4</b>  | <b>Valve gear</b>   | <b>155</b> |
| 4.1       | Assembly overview - valve gear                                    | 155        |
| 4.2       | Removing and installing camshaft                                  | 160        |
| 4.3       | Installing ball for slider  | 179        |
| 4.4       | Removing and installing cam adjustment actuators                  | 180        |
| 4.5       | Removing and installing camshaft control valve 1 N205             | 181        |
| 4.6       | Removing and installing valve stem oil seals                      | 182        |
| <b>5</b>  | <b>Inlet and exhaust valves</b>                                   | <b>194</b> |
| 5.1       | Checking valve guides   | 194        |
| 5.2       | Checking valves   | 195        |
| 5.3       | Valve dimensions  | 195        |
| <b>17</b> | <b>- Lubrication</b>  | <b>196</b> |
| <b>1</b>  | <b>Sump/oil pump</b>  | <b>196</b> |
| 1.1       | Assembly overview - sump/oil pump                                 | 196        |
| 1.2       | Engine oil  | 199        |
| 1.3       | Removing and installing lower part of sump                        | 199        |
| 1.4       | Removing and installing oil pump                                  | 202        |
| 1.5       | Removing and installing upper part of sump                        | 204        |
| 1.6       | Removing and installing oil level and oil temperature sender G266 | 208        |
| <b>2</b>  | <b>Engine oil cooler</b>  | <b>210</b> |
| 2.1       | Assembly overview - engine oil cooler                             | 210        |
| 2.2       | Removing and installing engine oil cooler                         | 210        |
| <b>3</b>  | <b>Crankcase breather</b>   | <b>212</b> |
| 3.1       | Assembly overview - crankcase breather system                     | 212        |
| 3.2       | Removing and installing oil separator                             | 213        |

|           |   |            |
|-----------|---|------------|
| <b>4</b>  | <b>Oil filter/oil pressure switches</b>                                   | <b>216</b> |
| 4.1       | Assembly overview - oil filter  | 216        |
| 4.2       | Assembly overview - oil pressure switches/oil pressure control            | 216        |
| 4.3       | Removing and installing oil pressure switch F22                           | 217        |
| 4.4       | Removing and installing oil pressure switch for reduced oil pressure F378 | 219        |
| 4.5       | Removing and installing valve for oil pressure control N428               | 220        |
| 4.6       | Checking oil pressure   | 221        |
| <b>19</b> | <b>Cooling</b>  | <b>223</b> |
| <b>1</b>  | <b>Cooling system/coolant</b>   | <b>223</b> |
| 1.1       | Connection diagram - coolant hoses  | 223        |
| 1.2       | Checking cooling system for leaks   | 223        |
| 1.3       | Draining and filling cooling system                                       | 228        |
| <b>2</b>  | <b>Coolant pump/thermostat assembly</b>                                   | <b>231</b> |
| 2.1       | Assembly overview - coolant pump/thermostat                               | 231        |
| 2.2       | Assembly overview - electric coolant pump                                 | 234        |
| 2.3       | Removing and installing electric coolant pump                             | 234        |
| 2.4       | Removing and installing coolant pump                                      | 234        |
| 2.5       | Detaching and attaching coolant pump at thermostat housing                | 236        |
| 2.6       | Removing and installing toothed belt for coolant pump                     | 239        |
| 2.7       | Removing and installing thermostat  | 240        |
| 2.8       | Checking thermostat   | 241        |
| 2.9       | Removing and installing coolant temperature sender G62                    | 241        |
| 2.10      | Removing and installing coolant valves                                    | 242        |
| <b>3</b>  | <b>Coolant pipes</b>  | <b>243</b> |
| <b>4</b>  | <b>Radiator/radiator fans</b>   | <b>244</b> |
| <b>21</b> | <b>Turbocharging/supercharging</b>  | <b>245</b> |
| <b>1</b>  | <b>Turbocharger</b>   | <b>245</b> |
| 1.1       | Assembly overview - turbocharger  | 245        |
| 1.2       | Removing and installing turbocharger                                      | 250        |
| 1.3       | Checking vacuum unit for turbocharger                                     | 253        |
| 1.4       | Renewing vacuum unit for turbocharger                                     | 255        |
| 1.5       | Adjusting vacuum unit for turbocharger                                    | 256        |
| <b>2</b>  | <b>Charge air system</b>  | <b>261</b> |
| 2.1       | Assembly overview - charge air system                                     | 261        |
| 2.2       | Assembly overview - hose connections for charge air system                | 261        |
| 2.3       | Removing and installing charge air cooler                                 | 263        |
| 2.4       | Removing and installing charge pressure sender G31                        | 263        |
| 2.5       | Checking charge air system for leaks                                      | 263        |
| <b>24</b> | <b>Mixture preparation - injection</b>                                    | <b>267</b> |
| <b>1</b>  | <b>Injection system</b>   | <b>267</b> |
| 1.1       | Overview of fitting locations - injection system                          | 267        |
| 1.2       | Checking fuel system for leaks  | 267        |
| <b>2</b>  | <b>Vacuum system</b>  | <b>268</b> |
| 2.1       | Checking vacuum system  | 268        |
| 2.2       | Checking dual non-return valve  | 268        |
| <b>3</b>  | <b>Air filter</b>   | <b>271</b> |
| <b>4</b>  | <b>Intake manifold</b>  | <b>272</b> |
| 4.1       | Assembly overview - intake manifold                                       | 272        |
| 4.2       | Removing and installing intake manifold                                   | 276        |
| 4.3       | Removing and installing throttle valve module J338                        | 277        |
| 4.4       | Cleaning throttle valve module  | 277        |



|           |   |            |
|-----------|---|------------|
| 4.5       | Checking intake manifold change-over function             | 278        |
| <b>5</b>  | <b>Injectors</b>  | <b>281</b> |
| 5.1       | Assembly overview - fuel rail with injectors              | 281        |
| 5.2       | Removing and installing fuel rail                         | 285        |
| 5.3       | Removing and installing injectors                         | 286        |
| 5.4       | Cleaning injectors  | 292        |
| 5.5       | Removing and installing cold-start valve N17              | 293        |
| <b>6</b>  | <b>Senders and sensors</b>                                | <b>295</b> |
| 6.1       | Removing and installing intake air temperature sender G42 | 295        |
| 6.2       | Removing and installing air mass meter G70                | 295        |
| 6.3       | Removing and installing fuel pressure sender G247         | 296        |
| 6.4       | Checking fuel pressure sender G247                        | 299        |
| <b>7</b>  | <b>High-pressure pump</b>                                 | <b>302</b> |
| 7.1       | Assembly overview - high-pressure pump                    | 302        |
| 7.2       | Removing and installing high-pressure pump                | 304        |
| <b>8</b>  | <b>Lambda probe</b>                                       | <b>308</b> |
| 8.1       | Assembly overview - Lambda probe                          | 308        |
| 8.2       | Removing and installing Lambda probe                      | 310        |
| <b>9</b>  | <b>Engine control unit</b>                                | <b>311</b> |
| 9.1       | Removing and installing engine control unit J623          | 311        |
| 9.2       | Wiring and component check                                | 311        |
| <b>26</b> | <b>- Exhaust system</b>                                   | <b>315</b> |
| <b>1</b>  | <b>Exhaust pipes/silencers</b>                            | <b>315</b> |
| 1.1       | Assembly overview - silencers                             | 315        |
| 1.2       | Separating exhaust pipes/silencers                        | 315        |
| 1.3       | Removing and installing front silencers                   | 315        |
| 1.4       | Removing and installing silencers                         | 315        |
| 1.5       | Stress-free alignment of exhaust system                   | 315        |
| 1.6       | Checking exhaust system for leaks                         | 315        |
| <b>2</b>  | <b>Emission control system</b>                            | <b>316</b> |
| 2.1       | Assembly overview - emission control system               | 316        |
| 2.2       | Removing and installing catalytic converter               | 318        |
| <b>3</b>  | <b>Secondary air system</b>                               | <b>319</b> |
| <b>28</b> | <b>- Ignition system</b>                                  | <b>320</b> |
| <b>1</b>  | <b>Ignition system</b>                                    | <b>320</b> |
| 1.1       | Assembly overview - ignition system                       | 320        |
| 1.2       | Removing and installing ignition coils with output stages | 321        |
| 1.3       | Removing and installing knock sensor 1 G61                | 324        |
| 1.4       | Removing and installing Hall senders                      | 324        |
| 1.5       | Removing and installing engine speed sender G28           | 325        |