

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Engine number/engine data .....	1
<b>2 Safety precautions</b> .....	<b>2</b>
2.1 Safety precautions when working on the fuel system .....	2
2.2 Safety precautions when working on vehicles with start/stop system .....	4
2.3 Safety precautions when using testers and measuring instruments during a road test .....	4
2.4 Safety precautions when working on the cooling system .....	4
2.5 Safety precautions when working on the SCR system .....	5
2.6 Safety precautions when working on the exhaust system .....	6
<b>3 Repair instructions</b> .....	<b>7</b>
3.1 Rules for cleanliness .....	7
3.2 General notes .....	7
3.3 General repair instructions .....	8
3.4 Adapting learnt values for SCR system .....	9
3.5 Foreign particles in engine .....	9
3.6 Contact corrosion .....	9
3.7 Routing and attachment of pipes, hoses and wiring .....	10
3.8 Installing radiators and condensers .....	10
3.9 Checking vacuum system .....	10
<b>10 - Removing and installing engine</b> .....	<b>12</b>
<b>1 Removing and installing engine</b> .....	<b>12</b>
1.1 Removing engine .....	12
1.2 Separating engine and gearbox .....	32
1.3 Securing engine to engine and gearbox support .....	41
1.4 Installing engine .....	45
<b>2 Assembly mountings</b> .....	<b>52</b>
2.1 Exploded view - assembly mountings .....	52
2.2 Supporting engine in installation position .....	54
2.3 Removing and installing engine mountings .....	56
2.4 Removing and installing gearbox mounting .....	67
2.5 Removing and installing torque reaction support and cross member .....	68
<b>3 Engine cover panel</b> .....	<b>70</b>
3.1 Removing and installing engine cover panel .....	70
<b>13 - Crankshaft group</b> .....	<b>71</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>71</b>
1.1 Exploded view - poly V-belt drive .....	71
1.2 Exploded view - sealing flange (pulley end) .....	77
1.3 Removing and installing poly V-belt .....	81
1.4 Removing and installing tensioner for poly V-belt .....	84
1.5 Removing and installing vibration damper .....	85
1.6 Renewing crankshaft oil seal (pulley end) .....	85
1.7 Removing and installing sealing flange (pulley end) .....	87
<b>2 Cylinder block (gearbox end)</b> .....	<b>92</b>
2.1 Exploded view - cylinder block (gearbox end) .....	92
2.2 Removing and installing drive plate .....	93
2.3 Removing and installing sender wheel .....	94
2.4 Checking sender wheel .....	95
2.5 Renewing crankshaft oil seal (gearbox end) .....	95
<b>3 Crankshaft</b> .....	<b>98</b>



3.1	Exploded view - crankshaft	98
3.2	Crankshaft dimensions	99
3.3	Allocation of main bearing shells	100
3.4	Measuring axial clearance of crankshaft	100
3.5	Measuring radial clearance of crankshaft	101
<b>4</b>	<b>Balance shaft</b>	<b>102</b>
4.1	Exploded view - balance shaft	102
4.2	Removing and installing balance shaft	102
4.3	Renewing roller bearing for balance shaft	104
<b>5</b>	<b>Pistons and conrods</b>	<b>106</b>
5.1	Exploded view - pistons and conrods	106
5.2	Removing and installing pistons	108
5.3	Measuring piston projection at TDC	109
5.4	Checking pistons and cylinder bores	112
5.5	Checking radial clearance of conrod bearings	113
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>114</b>
<b>1</b>	<b>Timing chain cover</b>	<b>114</b>
1.1	Exploded view - timing chain cover	114
1.2	Removing and installing timing chain cover	119
<b>2</b>	<b>Chain drive</b>	<b>127</b>
2.1	Exploded view - camshaft timing chains	127
2.2	Exploded view - drive chain for oil pump and high-pressure pump	129
2.3	Removing camshaft timing chain from camshafts	130
2.4	Removing and installing camshaft timing chain	138
2.5	Removing and installing drive chain for oil pump and high-pressure pump	148
<b>3</b>	<b>Cylinder head</b>	<b>150</b>
3.1	Exploded view - cylinder head	150
3.2	Exploded view - cylinder head cover	152
3.3	Removing and installing cylinder head	154
3.4	Removing and installing cylinder head cover	160
3.5	Removing and installing seals for injectors	166
3.6	Checking compression	167
<b>4</b>	<b>Valve gear</b>	<b>169</b>
4.1	Exploded view - valve gear	169
4.2	Measuring axial clearance of camshaft	171
4.3	Measuring radial clearance of camshaft	172
4.4	Removing and installing camshaft	173
4.5	Removing and installing valve stem oil seals	196
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>203</b>
5.1	Checking valve guides	203
5.2	Checking valves	204
5.3	Valve dimensions	205
<b>17</b>	<b>Lubrication</b>	<b>206</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>206</b>
1.1	Exploded view - sump/oil pump	206
1.2	Engine oil	210
1.3	Removing and installing sump (bottom section)	210
1.4	Removing and installing sump (top section)	212
1.5	Removing and installing oil pump	217
1.6	Removing and installing oil level and oil temperature sender G266	219
<b>2</b>	<b>Engine oil cooler</b>	<b>220</b>
2.1	Exploded view - engine oil cooler	220
2.2	Removing and installing engine oil cooler	221

2.3	Removing and installing mounting plate for engine oil cooler/coolant shut-off valve	222
2.4	Removing and installing temperature regulator for engine oil cooler	222
<b>3</b>	<b>Oil filter/oil pressure switches</b>	<b>224</b>
3.1	Exploded view - oil filter housing/oil pressure switch	224
3.2	Removing and installing oil pressure switch F22 / F378	225
3.3	Removing and installing oil temperature sender 2 G664	225
3.4	Checking oil pressure	226
3.5	Removing and installing oil filter housing	227
3.6	Removing and installing valve for oil pressure control N428	228
<b>19</b>	<b>Cooling</b>	<b>229</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>229</b>
1.1	Connection diagram - coolant hoses	229
1.2	Checking cooling system for leaks	236
1.3	Draining and filling cooling system	237
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>247</b>
2.1	Exploded view - coolant pump	247
2.2	Exploded view - thermostat	248
2.3	Exploded view - coolant temperature senders	249
2.4	Removing and installing coolant pump	249
2.5	Removing and installing map-controlled engine cooling system thermostat F265	250
2.6	Removing and installing coolant temperature sender G62	251
2.7	Removing and installing radiator outlet coolant temperature sender G83	251
2.8	Removing and installing temperature sender for engine temperature regulation G694	252
2.9	Removing and installing coolant valves	254
2.10	Removing and installing non-return valve	256
<b>3</b>	<b>Coolant pipes</b>	<b>259</b>
3.1	Exploded view - coolant pipes	259
3.2	Removing and installing coolant pipes	263
3.3	Removing and installing coolant lines for injector for reducing agent	273
<b>4</b>	<b>Radiator/radiator fans</b>	<b>275</b>
4.1	Exploded view - radiator/radiator fans	275
4.2	Removing and installing radiator	277
4.3	Removing and installing radiator cowl	282
4.4	Removing and installing radiator fan	284
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>285</b>
<b>1</b>	<b>Turbocharger</b>	<b>285</b>
1.1	Exploded view - turbocharger	285
1.2	Removing and installing turbocharger	291
1.3	Removing and installing turbocharger 1 control unit J724	295
<b>2</b>	<b>Charge air system</b>	<b>307</b>
2.1	Exploded view - charge air system	307
2.2	Exploded view - hose connections for charge air system	310
2.3	Removing and installing charge air cooler	310
2.4	Removing and installing charge pressure sender G31 / intake air temperature sender G42	315
2.5	Checking charge air system for leaks	316
<b>23</b>	<b>Mixture preparation - injection</b>	<b>320</b>
<b>1</b>	<b>Injection system</b>	<b>320</b>
1.1	Overview - fuel system	320
1.2	Overview of fitting locations - injection system	322
1.3	Filling and bleeding fuel system	330
1.4	Checking fuel system for leaks	331



<b>2</b>	<b>Vacuum system</b> .....	<b>332</b>
2.1	Connection diagram - vacuum system .....	332
2.2	Checking vacuum system .....	332
<b>3</b>	<b>Air cleaner</b> .....	<b>334</b>
3.1	Exploded view - air cleaner housing .....	334
3.2	Removing and installing air cleaner housing .....	335
<b>4</b>	<b>Intake manifold</b> .....	<b>338</b>
4.1	Exploded view - intake manifold .....	338
4.2	Removing and installing intake manifold .....	339
4.3	Removing and installing intake manifold flap motor V157 .....	344
4.4	Removing and installing throttle valve module J338 .....	346
<b>5</b>	<b>Injectors/high-pressure reservoir (rail)</b> .....	<b>347</b>
5.1	Exploded view - injectors .....	347
5.2	Checking injectors .....	349
5.3	Performing adaption of correction values for injectors .....	350
5.4	Checking for injectors sticking open .....	351
5.5	Checking return flow rate of injectors with engine running .....	352
5.6	Checking return flow rate of injectors at starter cranking speed .....	355
5.7	Checking restrictor in fuel return line .....	357
5.8	Removing and installing injectors .....	359
5.9	Removing and installing high-pressure pipes .....	363
5.10	Removing and installing high-pressure reservoir (rail) .....	365
<b>6</b>	<b>Senders and sensors</b> .....	<b>369</b>
6.1	Removing and installing fuel pressure regulating valve N276 .....	369
6.2	Checking fuel pressure regulating valve N276 .....	370
6.3	Removing and installing fuel pressure sender G247 .....	373
6.4	Removing and installing air mass meter G70 .....	375
6.5	Removing and installing pressure differential sender G505 .....	376
<b>7</b>	<b>High-pressure pump</b> .....	<b>378</b>
7.1	Exploded view - high-pressure pump .....	378
7.2	Removing and installing high-pressure pump .....	379
<b>8</b>	<b>Lambda probe</b> .....	<b>385</b>
8.1	Exploded view - Lambda probe .....	385
8.2	Removing and installing Lambda probe .....	388
8.3	Removing and installing control unit for NOx sender J583 with NOx sender G295 .....	389
8.4	Removing and installing control unit for NOx sender 2 J881 with NOx sender 2 G687 ..	391
<b>9</b>	<b>Engine control unit</b> .....	<b>392</b>
9.1	Removing and installing engine/motor control unit J623 .....	392
<b>26</b>	<b>- Exhaust system</b> .....	<b>394</b>
<b>1</b>	<b>Exhaust pipes/silencers</b> .....	<b>394</b>
1.1	Exploded view - silencer .....	394
1.2	Removing and installing front exhaust pipe .....	400
1.3	Separating exhaust pipes/silencers .....	402
1.4	Stress-free alignment of exhaust system .....	404
1.5	Checking exhaust system for leaks .....	405
<b>2</b>	<b>Emission control system</b> .....	<b>406</b>
2.1	Removing and installing particulate filter .....	406
2.2	Removing and installing SCR catalytic converter .....	409
<b>3</b>	<b>SCR (selective catalytic reduction) system</b> .....	<b>412</b>
3.1	Exploded view - reducing agent tank .....	412
3.2	Exploded view - reducing agent supply line .....	417
3.3	Exploded view - delivery unit for reducing agent .....	419
3.4	Exploded view - control unit for reducing agent metering system J880 .....	422

3.5	Draining reducing agent tank .....	422
3.6	Removing and installing reducing agent tank .....	425
3.7	Removing and installing delivery unit for reducing agent .....	427
3.8	Removing and installing injector for reducing agent N474 .....	431
3.9	Removing and installing active tank for reducing agent .....	433
3.10	Removing and installing passive tank for reducing agent .....	435
3.11	Removing and installing control unit for reducing agent metering system J880 .....	436
3.12	Removing and installing transfer pump for reducing agent V436 .....	437
<b>4</b>	<b>Exhaust gas temperature control .....</b>	<b>439</b>
4.1	Exploded view - exhaust gas temperature control .....	439
4.2	Removing and installing exhaust gas temperature senders .....	443
<b>5</b>	<b>Exhaust gas recirculation .....</b>	<b>451</b>
5.1	Exploded view - exhaust gas recirculation system .....	451
5.2	Removing and installing exhaust gas recirculation cooler .....	454
5.3	Removing and installing exhaust gas recirculation control motor V338 .....	455
5.4	Removing and installing exhaust gas recirculation temperature sensor G98 .....	456
<b>6</b>	<b>Exhaust manifolds .....</b>	<b>457</b>
6.1	Exploded view - exhaust manifold .....	457
6.2	Removing and installing exhaust manifolds .....	458
<b>28</b>	<b>Glow plug system .....</b>	<b>462</b>
<b>1</b>	<b>Glow plug system .....</b>	<b>462</b>
1.1	Exploded view - glow plug system .....	462
1.2	Removing and installing glow plug .....	463
1.3	Removing and installing Hall sender G40 .....	464
1.4	Removing and installing engine speed sender G28 .....	465