

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety precautions	3
2.1 Safety precautions when working on the fuel system	3
2.2 Safety precautions when working on vehicles with start/stop system	5
2.3 Safety precautions when using testers and measuring instruments during a road test	5
2.4 Safety precautions when working on the cooling system	6
2.5 Safety precautions when working on the SCR system	6
2.6 Safety precautions when working on the exhaust system	7
3 Repair instructions	8
3.1 Rules for cleanliness	8
3.2 General notes	8
3.3 General repair instructions	9
3.4 Adapting learnt values for SCR system	10
3.5 Foreign particles in engine	10
3.6 Contact corrosion	10
3.7 Routing and attachment of pipes, hoses and wiring	11
3.8 Installing radiators and condensers	11
10 - Removing and installing engine	12
1 Removing and installing engine	12
1.1 Removing engine	12
1.2 Separating engine and gearbox	40
1.3 Securing engine to engine and gearbox support	58
1.4 Installing engine	64
2 Assembly mountings	73
2.1 Exploded view - assembly mountings	73
2.2 Supporting engine in installation position	76
2.3 Removing and installing engine mountings	78
2.4 Removing and installing gearbox mounting	88
3 Engine cover panel	95
3.1 Removing and installing engine cover panel	95
13 - Crankshaft group	96
1 Cylinder block (pulley end)	96
1.1 Exploded view - poly V-belt drive	96
1.2 Exploded view - sealing flange (pulley end)	98
1.3 Removing and installing poly V-belt	100
1.4 Removing and installing poly V-belt tensioner	103
1.5 Removing and installing vibration damper	103
1.6 Renewing crankshaft oil seal (pulley end)	105
1.7 Removing and installing sealing flange (pulley end)	107
2 Cylinder block (gearbox end)	111
2.1 Exploded view - cylinder block (gearbox end)	111
2.2 Removing and installing drive plate	111
2.3 Removing and installing sender wheel	113
2.4 Checking sender wheel	114
2.5 Renewing crankshaft oil seal (gearbox end)	115
3 Crankshaft	118
3.1 Exploded view - crankshaft	118
3.2 Crankshaft dimensions	120

3.3	Allocation of main bearing shells	121
3.4	Measuring axial clearance of crankshaft	123
3.5	Measuring radial clearance of crankshaft	124
4	Auxiliary drive	126
4.1	Exploded view - auxiliary drive	126
4.2	Removing and installing spur gear drive	129
4.3	Renewing oil seal for power steering pump drive	134
5	Pistons and conrods	137
5.1	Exploded view - pistons and conrods	137
5.2	Removing and installing pistons	140
5.3	Measuring piston projection at TDC	142
5.4	Checking pistons and cylinder bores	144
5.5	Checking radial clearance of conrod bearings	146
5.6	Allocation of conrod bearing shells	146
15 - Cylinder head, valve gear	147	
1	Timing chain cover	147
1.1	Exploded view - timing chain cover	147
1.2	Removing and installing timing chain cover	150
1.3	Renewing oil seal for toothed belt drive sprocket	163
2	Chain drive	166
2.1	Exploded view - camshaft timing chains	166
2.2	Exploded view - drive chain for valve gear	168
2.3	Exploded view - drive chain for auxiliary drives	170
2.4	Removing camshaft timing chain from camshafts	170
2.5	Removing and installing camshaft timing chain	183
2.6	Removing and installing drive chain for valve gear	196
2.7	Removing and installing drive chain for auxiliary drive	198
3	Cylinder head	200
3.1	Exploded view - cylinder head	200
3.2	Exploded view - cylinder head cover	203
3.3	Removing and installing cylinder head	205
3.4	Removing and installing cylinder head cover	216
3.5	Checking compression	218
4	Valve gear	220
4.1	Exploded view - valve gear	220
4.2	Measuring axial clearance of camshaft	222
4.3	Measuring radial clearance of camshaft	223
4.4	Removing and installing camshaft	224
4.5	Removing and installing valve stem oil seals	231
5	Inlet and exhaust valves	241
5.1	Machining valve seats	241
5.2	Checking valve guides	241
5.3	Checking valves	242
5.4	Valve dimensions	242
17 - Lubrication	244	
1	Sump/oil pump	244
1.1	Exploded view - sump/oil pump	244
1.2	Engine oil	248
1.3	Removing and installing sump (bottom section)	248
1.4	Removing and installing sump (top section)	252
1.5	Removing and installing oil pump	257
1.6	Removing and installing oil level and oil temperature sender G266	259
2	Engine oil cooler	260

2.1	Removing and installing engine oil cooler	260
2.2	Removing and installing mounting plate for engine oil cooler, pressure control valve and oil filter housing	263
3	Crankcase breather	265
3.1	Removing and installing pressure control valve for crankcase breather system	265
4	Oil filter/oil pressure switches	267
4.1	Exploded view - oil filter housing/oil pressure switches	267
4.2	Removing and installing oil pressure switches/oil temperature sender	269
4.3	Checking oil pressure	271
4.4	Removing and installing oil filter housing	272
4.5	Removing and installing valve for oil pressure control N428	273
19 - Cooling		274
1	Cooling system/coolant	274
1.1	Connection diagram - coolant hoses	274
1.2	Checking cooling system for leaks	278
1.3	Draining and filling cooling system	281
2	Coolant pump/thermostat assembly	293
2.1	Exploded view - coolant pump/thermostat	293
2.2	Exploded view - electric coolant pump	295
2.3	Removing and installing electric coolant pump	297
2.4	Removing and installing coolant pump	300
2.5	Removing and installing thermostat	303
2.6	Checking thermostat	306
2.7	Removing and installing coolant temperature sender G62	307
2.8	Removing and installing radiator outlet coolant temperature sender G83	308
2.9	Removing and installing temperature sender for engine temperature regulation G694	309
2.10	Removing and installing coolant valves	310
3	Coolant pipes	316
3.1	Exploded view - coolant pipes	316
3.2	Removing and installing coolant pipes	321
4	Radiator/radiator fans	361
4.1	Exploded view - radiator/radiator fans	361
4.2	Removing and installing radiator	364
4.3	Removing and installing radiator fans	370
21 - Turbocharging/supercharging		371
1	Turbochargers	371
1.1	Exploded view - turbocharger	371
1.2	Removing and installing turbochargers	373
1.3	Removing and installing rotational speed sender 1 G653	389
1.4	Removing and installing rotational speed sender 2 G654	390
2	Charge air system	393
2.1	Exploded view - charge air system	393
2.2	Removing and installing charge air cooler	394
2.3	Removing and installing charge pressure sender G31 / intake air temperature sender G42	396
2.4	Checking charge air system for leaks	397
23 - Mixture preparation - injection		401
1	Injection system	401
1.1	Overview - fuel system	401
1.2	Overview of fitting locations - injection system	401
1.3	Filling and bleeding fuel system	412
2	Vacuum system	414
2.1	Connection diagram - vacuum system	414

2.2	Checking vacuum system	414
3	Air cleaner	416
3.1	Exploded view - air cleaner housing	416
3.2	Removing and installing air cleaner housing	417
4	Intake manifold	421
4.1	Exploded view - intake manifold	421
4.2	Removing and installing intake manifold (top section)	423
4.3	Removing and installing intake manifold (bottom section)	426
4.4	Removing and installing throttle valve module J338	428
5	Injectors/high-pressure reservoir (rail)	430
5.1	Exploded view - high-pressure reservoir (rail)	430
5.2	Checking injectors	433
5.3	Performing adaption of correction values for injectors	434
5.4	Checking for injectors sticking open	434
5.5	Measuring return flow rate of injectors with engine running	436
5.6	Checking return flow rate of injectors at starter cranking speed	441
5.7	Removing and installing injectors	445
5.8	Removing and installing high-pressure pipes	451
6	Senders and sensors	453
6.1	Checking fuel pressure regulating valve N276	453
6.2	Removing and installing fuel pressure regulating valve N276	454
6.3	Removing and installing fuel pressure sender G247	457
6.4	Removing and installing air mass meter G70	459
6.5	Removing and installing pressure differential sender	460
7	High-pressure pump	462
7.1	Exploded view - high-pressure pump	462
7.2	Removing and installing toothed belt for high-pressure pump	466
7.3	Removing and installing high-pressure pump	475
8	Lambda probe	478
8.1	Exploded view - Lambda probe	478
8.2	Removing and installing Lambda probe	482
8.3	Removing and installing NOx sender	486
9	Engine control unit	490
9.1	Wiring and component check	490
9.2	Removing and installing engine/motor control unit J623	493
26 - Exhaust system	497	
1	Exhaust pipes/silencers	497
1.1	Exploded view - silencers	497
1.2	Removing and installing front exhaust pipe	505
1.3	Removing and installing Y-pipe	507
1.4	Removing and installing silencers	510
1.5	Separating exhaust pipes/silencers	512
1.6	Stress-free alignment of exhaust system	513
1.7	Checking exhaust system for leaks	515
2	Emission control system	516
2.1	Removing and installing particulate filter	516
2.2	Removing and installing catalytic converter	525
3	SCR (selective catalytic reduction) system	536
3.1	Exploded view - reducing agent tank	536
3.2	Exploded view - reducing agent supply line	540
3.3	Exploded view - delivery unit for reducing agent	541
3.4	Exploded view - control unit for reducing agent metering system J880	543
3.5	Draining reducing agent tank	544

3.6	Removing and installing delivery unit for reducing agent	547
3.7	Removing and installing injector for reducing agent N474	549
3.8	Removing and installing active tank for reducing agent	551
3.9	Removing and installing passive tank for reducing agent	552
3.10	Removing and installing control unit for reducing agent metering system J880	554
3.11	Removing and installing transfer pump for reducing agent V436	555
4	Exhaust gas temperature control	557
4.1	Exploded view - exhaust gas temperature control	557
4.2	Removing and installing exhaust gas temperature sender	561
5	Exhaust gas recirculation	590
5.1	Exploded view - exhaust gas recirculation system	590
5.2	Removing and installing exhaust gas recirculation cooler	594
5.3	Removing and installing exhaust gas recirculation control motor V338/V339	596
5.4	Removing and installing exhaust gas recirculation temperature sensor G98	597
5.5	Cleaning exhaust gas recirculation system	597
6	Exhaust manifolds	612
6.1	Exploded view - exhaust manifold	612
6.2	Removing and installing exhaust manifolds	614
6.3	Removing and installing intermediate pipes	619
28 - Glow plug system	621	
1	Glow plug system	621
1.1	Exploded view - glow plug system	621
1.2	Removing and installing glow plug	621
1.3	Removing and installing Hall sender G40	622
1.4	Removing and installing engine speed sender G28	623