

Contents

23 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions when working on the SCR system	1
1.2 Adapting learnt value after draining reducing agent or renewing components	1
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on vehicles with start/stop system	4
1.5 Safety precautions when using testers and measuring instruments during a road test	4
1.6 Checking vacuum system	4
2 Injection system	6
2.1 Overview of fitting locations - injection system	6
2.2 Overview - fuel system	15
2.3 Filling and bleeding fuel system	18
2.4 Connection diagram - vacuum system	19
3 Air cleaner	20
3.1 Exploded view - air cleaner housing	20
3.2 Removing and installing engine cover panel	22
3.3 Removing and installing air filter element	22
3.4 Removing and installing air cleaner housing	24
4 Intake manifold	26
4.1 Exploded view - intake manifold	26
4.2 Removing and installing intake manifold	27
4.3 Removing and installing throttle valve module J338	32
4.4 Removing and installing intake manifold flap motor V157	33
5 High-pressure pump	36
5.1 Exploded view - high-pressure pump	36
5.2 Removing and installing high-pressure pump	37
5.3 Performing first fuel filling after installing high-pressure pump	42
6 Injectors	45
6.1 Exploded view - injectors	45
6.2 Checking injectors	48
6.3 Performing adaption of correction values for injectors	48
6.4 Checking return flow rate of injectors with engine running	49
6.5 Checking return flow rate of injectors at starter cranking speed	53
6.6 Checking for injectors sticking open	55
6.7 Checking restrictor in fuel return line	57
6.8 Removing and installing injectors	58
6.9 Installing high-pressure pipes	62
7 Senders and sensors	65
7.1 Removing and installing air mass meter G70	65
7.2 Checking fuel pressure regulating valve N276	66
7.3 Removing and installing fuel pressure regulating valve N276	68
7.4 Removing and installing fuel pressure sender G247	70
7.5 Removing and installing pressure differential sender G505	73
8 Lambda probe	75
8.1 Exploded view - Lambda probe (rest-of-world vehicles without SCR)	75
8.2 Exploded view - Lambda probe (USA vehicles with SCR)	76
8.3 Removing and installing Lambda probe G39 with Lambda probe heater Z19	77
8.4 Removing and installing control unit for NOx sender J583 with NOx sender G295	78
8.5 Removing and installing control unit for NOx sender 2 J881 with NOx sender 2 G687	80
9 Engine control unit	81
9.1 Removing and installing engine control unit J623	81



28 - Glow plug system	84
1 Glow plug system	84
1.1 Checking glow plug system	84
1.2 Exploded view - glow plugs, Hall sender, engine speed sender	85
1.3 Removing and installing glow plugs	86
1.4 Removing and installing engine speed sender G28	88
1.5 Removing and installing Hall sender G40	88