

Contents

23 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions when working on the fuel system	1
1.3 Rules for cleanliness and instructions for working on fuel system	2
1.4 Safety precautions when working on the injection and glow plug system	3
1.5 Checking vacuum system	3
2 Fitting locations - overview	5
3 System layout	13
4 Fuel rail, high-pressure pipes and injectors - exploded view	15
5 Bleeding fuel system	18
6 Vacuum system - overview	19
7 Air cleaner	20
7.1 Air cleaner - exploded view	20
7.2 Removing and installing engine cover panel	22
7.3 Removing and installing air filter element	22
7.4 Removing and installing air cleaner housing	24
8 Intake manifold	26
8.1 Intake manifold - exploded view	26
8.2 Removing and installing intake manifold (top section)	28
8.3 Removing and installing intake manifold (bottom section) for cylinder bank 1 (right-side)	29
8.4 Removing and installing intake manifold (bottom section) for cylinder bank 2 (left-side) ..	31
8.5 Removing and installing throttle valve module J338 / J544	32
9 High-pressure pump	33
9.1 Toothed belt for high-pressure pump - exploded view	33
9.2 Removing and installing toothed belt for high-pressure pump	34
9.3 High-pressure pump - exploded view	41
9.4 Removing and installing high-pressure pump	42
9.5 Performing first fuel filling operation after installing high-pressure pump	44
10 Injectors	45
10.1 Checking injectors	45
10.2 Adaption of injector delivery calibration values and injector voltage calibration values	45
10.3 Measuring return flow rate of injectors with engine running	46
10.4 Measuring return flow rate of injectors at starter cranking speed	49
10.5 Checking for injectors sticking open	50
10.6 Installing fuel return lines	51
10.7 Removing and installing injectors	52
11 Senders and sensors	57
11.1 Removing and installing air mass meter G70 / G246	57
11.2 Installing high-pressure pipes	57
11.3 Checking fuel pressure regulating valve N276	59
11.4 Removing and installing fuel pressure regulating valve N276	60
11.5 Removing and installing fuel pressure sender G247	62
12 Lambda probes and exhaust gas temperature senders	66
12.1 Lambda probes, exhaust gas temperature senders and pressure senders - exploded view	66
12.2 Removing and installing Lambda probe G39	67
12.3 Removing and installing Lambda probe 2 G108	68
12.4 Removing and installing pressure differential sender G505 / G524	69
13 Engine control units	71



13.1	Wiring and component check with test box V.A.G 1598/42	71
13.2	Checking wiring and components with isolator box, 198-pin VAS 6606	73
13.3	Removing and installing engine control unit J623 (master) / J624 (slave)	74
28	Glow plug system	77
1	Glow plug system	77
1.1	Glow plugs, Hall sender, engine speed sender - exploded view	77
1.2	Checking glow plug system	78
1.3	Removing and installing glow plugs	78
1.4	Removing and installing engine speed sender G28	79
1.5	Removing and installing Hall sender G40	79