

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on the fuel system	1
1.2 Safety precautions when working on vehicles with start/stop system	3
1.3 Safety precautions when using testers and measuring instruments during a road test	3
1.4 Safety precautions when working on the SCR system	4
2 Repair instructions	5
2.1 Rules for cleanliness	5
2.2 Test conditions	5
2.3 Contact corrosion	5
2.4 Routing and attachment of pipes, hoses and wiring	6
20 - Fuel supply system	7
1 Fuel tank	7
1.1 Exploded view - fuel tank	7
1.2 Draining fuel tank	10
1.3 Removing and installing fuel tank	11
1.4 Removing and installing misfuelling prevention device	22
1.5 Deactivating misfuelling prevention device	25
2 Fuel delivery unit/fuel gauge senders	26
2.1 Exploded view - fuel delivery unit/fuel gauge senders	26
2.2 Removing and installing fuel delivery unit/fuel gauge senders	29
2.3 Removing and installing fuel pressure regulator	34
2.4 Checking fuel gauge sender G	35
2.5 Removing and installing fuel gauge sender G	37
2.6 Checking fuel gauge sender 2 G169	42
2.7 Removing and installing fuel gauge sender 2 G169	44
2.8 Checking fuel gauge sender 3 G237	50
2.9 Removing and installing fuel gauge sender 3 G237	53
3 Fuel cooler	61
3.1 Exploded view - fuel cooler	61
3.2 Removing and installing fuel cooler	62
4 Fuel filter	64
4.1 Exploded view - fuel filter	64
4.2 Removing and installing fuel filter	65
5 Fuel pump	67
5.1 Checking fuel system pressurisation pump G6	67
5.2 Removing and installing fuel pump control unit J538	73
6 Accelerator mechanism	74
6.1 Exploded view - accelerator pedal module	74
6.2 Removing and installing accelerator pedal module with accelerator position sender G79 / G185	75