001 - 4.2l petrol engine , CDRA	1-29
1. 4.2l petrol engine , CDRA	1
2. Battery, Suppression filter, Battery monitor control unit, Battery isolation igniter, Fuse 2	2
3. Starter, Alternator	3
4. Starter motor relay, Terminal 15 voltage supply relay, Starter motor relay 2	4
5. Fuse holder A	5
 6. Main relay, Engine component current supply relay 7. Engine/motor control unit 	6 7
8. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit	8
9. Engine/motor control unit, Ignition coil 1 with output stage, Spark plug connector, Spark plugs	9
10. Engine/motor control unit, Ignition coil 5 with output stage, Spark plug connector, Spark plugs	10
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 6,	10
Injector, cylinder 8	
12. Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5,	12
Injector, cylinder 7	
13. Knock sensor 1, Knock sensor 2, Knock sensor 3, Knock sensor 4, Engine/motor control unit	13
14. Hall sender, Hall sender 4, Intake manifold flap potentiometer, Intake manifold flap	14
potentiometer 2, Engine/motor control unit	
15. Engine speed sender, Coolant temperature sender, Fuel pressure sender for low pressure, Sender 1	15
for secondary air pressure, Temperature sender for engine temperature regulation, Engine/motor	
control unit	
16. Intake air temperature sender, Intake manifold pressure sender, Hall sender 2, Fuel pressure	16
sender, Brake servo pressure sensor, Hall sender 3, Engine/motor control unit	. –
17. Accelerator position sender, Throttle valve module, Engine/motor control unit	17
18. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve,	18
Valve for oil pressure control, Coolant valve for gearbox, Coolant valve for cylinder head 19. Engine/motor control unit, Gearbox oil cooling valve, Continued coolant circulation pump	19
20. Map-controlled engine cooling system thermostat, Engine/motor control unit, Left	20
electrohydraulic engine mounting solenoid valve, Variable intake manifold changeover valve, Gearbox	20
mounting valve 1, Intake manifold flap valve	
21. Engine/motor control unit, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft	21
control valve 1	
22. Secondary air pump relay, Brake servo relay, Engine/motor control unit, Secondary air pump fuse	22
23. Lambda probe, Lambda probe 2, Engine/motor control unit	23
24. Oil pressure switch, Oil pressure switch for reduced oil pressure, Lambda probe after catalytic	24
converter, Lambda probe 2 after catalytic converter, Engine/motor control unit	
25. Brake light switch, Engine/motor control unit, Control unit for fuel tank leak detection	25
26. Radiator fan control unit, Engine/motor control unit, Radiator fan control unit 2	26
27. Fuel system pressurisation pump, Oil level and oil temperature sender, Fuel pump relay, Fuel	27
pump control unit, Engine/motor control unit	00
28. Fuel gauge, Fuel gauge sender 2, Fuel gauge sender 3, Control unit in dash panel insert	28
29. Wiring junction for powertrain CAN bus, high, Wiring junction for dash panel insert CAN bus,	29
high 002 - 4.2l diesel engine , CDSB	30-61
1. 4.2l diesel engine , CDSB	30
2. Battery, Suppression filter, Battery monitor control unit, Battery isolation igniter, Fuse 2	31
3. Starter, Alternator	32
4. Starter motor relay, Terminal 15 voltage supply relay, Starter motor relay 2	33
5. Fuse holder A	34
6. Automatic glow period control unit, Glow plug fuse	35
7. Glow period control unit 2, Glow plug fuse 2	36
8. Terminal 30 voltage supply relay	37
9. Engine/motor control unit	38
10. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit	39
11. Air mass meter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4	40
12. Exhaust gas temperature sender 4, Throttle valve module, Engine/motor control unit, Turbocharger	41
1 control unit	40
13. Pressure differential sender, Engine/motor control unit, Exhaust gas recirculation cooler	42
changeover valve, Valve for oil pressure control, Intake manifold flap motor 14. Hall sender, Rotational speed sender 1, Pressure sender for exhaust gas recirculation,	43
Engine/motor control unit	40
15. Engine speed sender, Fuel temperature sender, Engine/motor control unit, Exhaust gas	44
recirculation control motor	
16. Charge pressure sender, Intake air temperature sender, Engine/motor control unit, Gearbox	45
mounting valve 1, Fuel pressure regulating valve, Fuel metering valve	
17. Oil temperature sender. Coolant temperature sender. Exhaust das recirculation temperature sensor.	46

Exhaust gas temperature sender 1, Exh temperature regulation, Engine/motor co	aust gas temperature sender 3, Temperature sender for engine	
18. Oil pressure switch for reduced oil pr	ressure, Accelerator position sender, Accelerator position	47
sender 2, Engine/motor control unit		10
	ngine/motor control unit, Lambda probe heater	48
	Engine/motor control unit, Heater element for crankcase	49
breather, Coolant valve for cylinder head	nounting solenoid valve, Heater element 2 for crankcase	
	tor control unit, Radiator fan control unit 2	50
22. Engine/motor control unit, Engine/motor		51
23. Lambda probe 2, Engine/motor cont		52
	ontrol unit 2, Injector, cylinder 2, Injector, cylinder 3,	53
Injector, cylinder 5, Injector, cylinder 8	······································	
	or bank 2, Throttle valve module 2, Engine/motor control unit	54
2, Turbocharger 2 control unit		
	sender, Pressure differential sender 2, Engine/motor control	55
unit 2, Intake manifold flap 2 motor		
	e sender 2 for exhaust gas recirculation, Engine/motor control	56
unit 2, Exhaust gas recirculation control	motor 2 trol unit 2, Left electrohydraulic engine mounting solenoid	57
	nt valve for gearbox, Gearbox oil cooling valve	57
	or bank 2, Exhaust gas temperature sender 3 for bank 2,	58
	polant circulation pump, Pump for exhaust gas recirculation	00
cooler	eolant on our and parties, i and for onnador gao roon our anon	
30. Fuel system pressurisation pump, Fu	uel pump relay, Fuel pump control unit	59
31. Fuel gauge, Fuel gauge sender 2, C	ontrol unit in dash panel insert	60
	us, high, Wiring junction for dash panel insert CAN bus,	61
high		
003 - Basic equipment		62-109
1. Basic equipment	.:4	62
 Steering column electronics control ur Steering column electronics control ur 		63 64
4. Steering column adjustment switch, S		65
5. Onboard supply control unit		66
	umination regulator, Rear fog light button, Fog light	67
button, Button for night vision system, O		
7. Onboard supply control unit		68
Onboard supply control unit		69
	init for left daytime running light and side light, Left fog	70
light bulb, Front left turn signal bulb, Fro		74
control unit	Right gas discharge bulb control unit, Onboard supply	71
	unit for right daytime running light and side light, Right	72
fog light bulb, Front right turn signal bulb		12
12. Headlight range control unit, Onboar		73
13. Treble horn, Bass horn, Horn relay,		74
14. Rain and light sensor, Wiper motor of	ontrol unit, Onboard supply control unit, Washer pump,	75
Headlight washer system pump		
	ply control unit, Servotronic solenoid valve	76
	bient temperature sensor, Coolant shortage indicator sender,	77
Windscreen washer fluid level sender, (70
	et parking button, Onboard supply control unit, Front left twell illumination bulb, Glove compartment light	78
	ont right brake pad wear sender, Onboard supply control unit,	79
Left washer jet heater element	sin nghi brake pad wear sender, enboard suppry control and,	10
	lder illumination bulb, Rear left door storage compartment	80
illumination bulb	, 5 1	
20. Convenience system central control		81
	Entry and start authorisation switch, Convenience system	82
central control unit		
	art authorisation button, Convenience system central	83
control unit	unit Interior parial 1 for entry and start suctors	04
	unit, Interior aerial 1 for entry and start system unit, Control unit for electronic steering column lock	84 85
	der, Convenience system central control unit, Luggage	86
compartment light. Number plate light	ser, centeniones eyetem control control difft, Euggage	00

26. Convenience system central control unit, Left tail light bulb, Rear left turn signal bulb, Left	87
brake light bulb, Left reversing light bulb 27. Convenience system central control unit, Rear right fog light bulb, Right tail light bulb, Rear	88
right turn signal bulb, Right brake light bulb, Right reversing light bulb 28. Convenience system central control unit, Rear left fog light bulb, Left reversing light bulb,	89
Rear left side marker bulb, Left brake, turn signal and tail light bulb	
29. Convenience system central control unit, Rear right fog light bulb, Right reversing light bulb, Rear right side marker bulb, Right brake, turn signal and tail light bulb	90
30. Brake light switch, Convenience system central control unit 31. Convenience system central control unit, Heated windscreen control unit, High-level brake light	91 92
bulb, Heated windscreen	
32. Terminal 15 voltage supply relay, Convenience system central control unit, Terminal 15 voltage supply relay 2	93
33. Window aerial suppression filter, Heated rear window relay, Convenience system central control unit, Heated rear window single fuse, Tank filler flap locking motor	94
34. Light sensor, Relay for automatic anti-dazzle interior mirror, Automatic anti-dazzle interior mirror	95
35. Humidity sender, Automatic anti-dazzle interior mirror	96
36. Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left illuminated vanity mirror	97
37. Roof electronics control unit, Front interior light	98
38. Roof electronics control unit, Rear left reading light, Rear right reading light, Rear right	99
reading light 2 39. Roof electronics control unit, Roof background lighting bulb, left, Roof background lighting	100
bulb, right	101
40. Storage compartment illumination bulb, Cigarette lighter 41. Rear cigarette lighter, DC/AC converter with socket, 12 V - 230 V, 12 V socket 2	101 102
42. Relay for power sockets, 12 V socket	103
43. Power steering control unit	104
44. Control unit in dash panel insert, Analogue clock	105
45. Dash panel insert operating button, Control unit in dash panel insert	106
46. Fuel gauge, Fuel gauge sender 2, Fuel gauge sender 3, Control unit in dash panel insert 47. Data bus diagnostic interface	107 108
48. Data bus diagnostic interface	109
004 - Convenience system	110-154
1. Convenience system	110
2. Contact sensor for front left exterior door handle, Driver door control unit	111
3. Driver door control unit	112
4. Driver side central locking lock unit, Driver door control unit, Driver door power latching motor 5. Operating unit for window regulator in driver door, Driver door control unit	113 114
6. Childproof lock button, Operating unit for window regulator in driver door, Driver door control	114
unit, Front left door exterior handle illumination bulb, Driver side window regulator motor	110
7. Mirror adjustment switch, Alarm system off switch, Driver door control unit	116
8. Driver door control unit, Driver side mirror adjustment motor 2	117
9. Button for lane change assist, Driver door control unit, Lane change assist warning lamp in	118
driver side exterior mirror 10. Driver side interior locking switch, Driver door control unit, Central locking SAFELOCK function	119
warning lamp, Driver door opener illumination bulb	119
11. Rear lid remote release button, Driver door control unit, Driver side door warning lamp, Front left entry light	120
12. Driver seat memory operating unit, Emergency-off button, Seat memory position button 1, Driver	121
seat memory function button, Driver door control unit 13. Contact sensor for front right exterior door handle, Front passenger door control unit	122
14. Front passenger door control unit	123
15. Front passenger side central locking lock unit, Front passenger door control unit, Front passenger door power latching motor	124
16. Window regulator switch in front passenger door, Front passenger side interior locking switch,	125
Front passenger door control unit 17. Front passenger door control unit, Front passenger door opener illumination bulb, Front right	126
door exterior handle illumination bulb, Front passenger side window regulator motor, Front right	
entry light, Front passenger side door warning lamp 18. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front	127
passenger side mirror adjustment motor 2, Heated exterior mirror on front passenger side	121
19. Front passenger door control unit, Lane change assist control unit 2, Front passenger side	128
automatic anti-dazzle exterior mirror 20. Front passenger seat memory operating unit. Front passenger door control unit	129
20. דוסות שמססרועבו סבמו חובוווסוא טשבומנווע עוווג. דוסות שמססבוועבו עסטו נטוונוטו עוווג	123

21. Contact sensor for rear left exterior door handle, Rear left door control unit	
	130
22. Rear left central locking lock unit, Rear left door control unit, Rear left power latching motor	131
23. Rear left window regulator button in rear left door, Rear left door control unit, Rear left	132
ashtray illumination bulb, Rear left exterior door handle illumination bulb, Rear left window	
regulator motor	
24. Rear left interior locking switch, Rear left door control unit, Rear left door opener	133
illumination bulb, Rear left entry light, Rear left door warning lamp	
	134
25. Operating unit for rear left seat adjustment, Rear left door control unit	
26. Contact sensor for rear right exterior door handle, Rear right door control unit	135
27. Rear right central locking lock unit, Rear right door control unit	136
28. Rear right window regulator button in rear right door, Rear right door control unit, Rear right	137
ashtray illumination bulb, Rear right exterior door handle illumination bulb, Rear right window	
regulator motor	400
29. Rear right door control unit, Rear right door opener illumination bulb, Rear right entry light,	138
Rear right door warning lamp	
30. Operating unit for rear right seat adjustment, Rear right door control unit	139
31. Convenience system central control unit 2, Light conductor for front left sill panel moulding	140
ambient lighting, Light conductor for rear left sill panel moulding ambient lighting	110
	4.4.4
32. Convenience system central control unit 2	141
33. Convenience system central control unit 2, Front right door ambient lighting bulb	142
34. Convenience system central control unit 2, Rear left door ambient lighting bulb	143
35. Convenience system central control unit 2, Rear right door ambient lighting bulb	144
36. Convenience system central control unit 2, Front left footwell illumination bulb, Front right	145
footwell illumination bulb	140
	4.40
37. Convenience system central control unit 2, Rear left footwell illumination bulb, Rear right	146
footwell illumination bulb	
38. Convenience system central control unit 2, Light conductor for front centre console ambient	147
lighting	
39. Convenience system central control unit 2, Light conductor for rear centre console ambient	148
	140
lighting	4.40
40. Convenience system central control unit	149
41. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit	150
42. Button to close rear lid in luggage compartment, Rear lid closed sender 1, Rear lid closed	151
sender 2, Convenience system central control unit, Rear lid control unit, Motor 1 for rear lid	
	152
43. Release button for rear lid lock cylinder, Convenience system central control unit, Power	152
43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor	
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 	153
43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor	
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 	153
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems 	153 154 155-169
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems 	153 154 155-169 155
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit 	153 154 155-169 155 156
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit 	153 154 155-169 155
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Igniter for exhaust valve for driver airbag 	153 154 155-169 155 156 157
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit 	153 154 155-169 155 156
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Igniter for exhaust valve for driver airbag 	153 154 155-169 155 156 157
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag 	153 154 155-169 155 156 157 158
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Igniter for exhaust valve for driver airbag Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger 	153 154 155-169 155 156 157
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side 	153 154 155-169 155 156 157 158 159
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front 	153 154 155-169 155 156 157 158
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag coll connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Igniter for exhaust valve for driver airbag Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit 	153 154 155-169 155 156 157 158 159 160
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front 	153 154 155-169 155 156 157 158 159
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit 	153 154 155-169 155 156 157 158 159 160
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag control unit 	153 154 155-169 155 156 157 158 159 160 161
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag control unit 	153 154 155-169 155 156 157 158 159 160
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag coll connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Igniter for exhaust valve for driver airbag Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side, Rear centre belt tensioner igniter, Driver side knee airbag igniter 	153 154 155-169 155 156 157 158 159 160 161 161
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag control unit Key operated switch to deactivate front passenger side airbag igniter Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side knee airbag igniter Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, 	153 154 155-169 155 156 157 158 159 160 161
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Igniter for exhaust valve for driver airbag Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag crash sensor on driver side, Rear side airbag, Airbag control unit, Front passenger side airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side curtain airbag igniter Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side knee airbag igniter 	153 154 155-169 155 156 157 158 159 160 161 162 163
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag control unit Key operated switch to deactivate front passenger side airbag igniter Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side knee airbag igniter Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, 	153 154 155-169 155 156 157 158 159 160 161 161
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag systems Airbag control unit Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Igniter for exhaust valve for driver airbag Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag igniter Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side knee airbag igniter Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1 	153 154 155-169 155 156 157 158 159 160 161 162 163
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag crash sensor on driver side, Rear side airbag igniter on front passenger side Side airbag crash sensor on driver side, Airbag control unit 7. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side, Airbag control unit 7. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger igniter on driver side, Rear centre belt tensioner igniter 8. Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter 9. Driver side knee airbag igniter 9. Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1 10. Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 	153 154 155-169 155 156 157 158 159 160 161 162 163 163
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag crash sensor on driver side, Rear side airbag igniter on front passenger side Side airbag crash sensor on driver side, Airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side, Airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side, Rear centre belt tensioner igniter Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side knee airbag igniter Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1 Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 	153 154 155-169 155 156 157 158 159 160 161 162 163
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag control unit, Front passenger side airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger igniter on driver side, Rear centre belt tensioner igniter Birbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side belt force limiter, Airbag control unit, Control unit, Front passenger side belt force limiter, Airbag control unit, Front passenger side airbag igniter 	153 154 155-169 155 156 157 158 159 160 161 162 163 164 164
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag control unit Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for driver airbag Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit Key operated switch to deactivate front passenger side airbag igniter Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side helt force limiter, Airbag control unit, Control unit for front left belt tensioner, Driver seat belt force limiter, Airbag control unit, Front passenger side belt force limiter, Airbag control unit, Front passenger side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Driver seat belt force limiter, Airbag control unit, Front passenger side belt force limiter, Airbag control unit, Front passenger side belt force limiter, Airbag control unit, Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter Driver side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 Trigger 1 for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit <td>153 154 155-169 155 156 157 158 159 160 161 162 163 163</td>	153 154 155-169 155 156 157 158 159 160 161 162 163 163
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit, Front passenger side airbag crash sensor for driver side, Airbag control unit, Front passenger side airbag crash sensor on driver side, Airbag control unit Key operated switch to deactivate front passenger side airbag igniter Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side kinee airbag igniter Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1 Front passenger side belt force limiter, Airbag control unit, Front passenger side belt force limiter, Airbag control unit, Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 	153 154 155-169 155 156 157 158 159 160 161 162 163 164 165 166
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag control unit Airbag control unit, Front passenger side airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag, Airbag control unit, Front passenger side, Airbag control unit, Rear belt tensioner igniter Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on driver side, Front airbag crash sensor for driver side, Airbag control unit Key operated switch to deactivate front passenger side airbag igniter Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side knee airbag igniter Driver side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 Trigger 1 for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit, Igniter for driver side seat position sensor, Airbag control unit, Igniter for driver side seat position sensor, Airbag control unit, Igniter for driver side active head restraint Front passenger side belt switch, Airbag control unit 	153 154 155-169 155 156 157 158 159 160 161 162 163 164 165 166 167
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag control unit Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit, Front passenger side airbag crash sensor for driver side, Airbag control unit, Front passenger side airbag crash sensor on driver side, Airbag control unit Key operated switch to deactivate front passenger side airbag igniter Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side kinee airbag igniter Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1 Front passenger side belt force limiter, Airbag control unit, Front passenger side belt force limiter, Airbag control unit, Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 	153 154 155-169 155 156 157 158 159 160 161 162 163 164 165 166
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems Airbag control unit Airbag control unit, Front passenger side airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger airbag Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side Side airbag crash sensor on driver side, Rear side airbag control unit, Front passenger side, Airbag control unit, Rear bid airbag control unit Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side care centre belt tensioner igniter, Driver side kee airbag goniter 1 Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 Trigger 1 for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit, Igniter for driver side belt switch, Driver side seat position sensor, Airbag control unit, Igniter for driver side belt switch, Airbag control unit 	153 154 155-169 155 156 157 158 159 160 161 162 163 164 165 166 167
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems 1. Airbag systems 2. Airbag control unit 3. Airbag control unit 3. Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for driver airbag 4. Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag 5. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side 6. Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit 7. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side, Rear centre belt tensioner igniter 8. Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side belt force limiter, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side, Rear centre belt tensioner igniter 9. Driver side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 10. Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 11. Trigger 1 for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit 12. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Ise attoe head restraint 13. Front passenger side belt switch, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit 	153 154 155-169 155 156 157 158 159 160 161 162 163 164 165 166 167 168
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems 1. Airbag systems 2. Airbag control unit 3. Airbag control unit 3. Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag 5. Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag 5. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side 6. Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag control unit, Rear belt tensioner igniter 8. Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter 8. Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter 9. Driver side knee airbag igniter 9. Driver side knee airbag igniter 10. Front passenger side soft force limiter, Airbag control unit, Front passenger side belt force limiter, Airbag control unit, Front passenger side belt tensioner igniter 11. Trigger 1 for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit 12. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Igniter for driver side abelt switch, Airbag control unit 13. Front passenger side belt switch, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit 14. Front passenger side belt switch, Front passenger side seat position sensor, Airbag control unit, S	153 154 155-169 155 156 157 158 159 160 161 162 163 164 165 166 167 168 169
 43. Release button for rear lid lock cylinder, Convenience system central control unit, Power latching control unit, Rear lid central locking motor 44. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 45. Data bus diagnostic interface 005 - Airbag systems 1. Airbag systems 2. Airbag control unit 3. Airbag control unit 3. Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for driver airbag 4. Airbag control unit, Front passenger side airbag igniter 1, Igniter for exhaust valve for front passenger airbag 5. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side 6. Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit 7. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side, Rear centre belt tensioner igniter 8. Airbag control unit, Rear belt tensioner igniter on driver side, Rear centre belt tensioner igniter, Driver side belt force limiter, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side, Rear centre belt tensioner igniter 9. Driver side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 10. Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1 11. Trigger 1 for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit 12. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Ise attoe head restraint 13. Front passenger side belt switch, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit 	153 154 155-169 155 156 157 158 159 160 161 162 163 164 165 166 167 168

(TOD) and all stands stabilization means (FOD)	
system (TCS) and electronic stabilisation program (ESP)	170
 Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP) 	170
2. ABS control unit, Tyre Pressure Monitoring System control unit 2, ABS control unit fuse 1	171
3. ABS control unit, Wiring junction for powertrain CAN bus, high, Wiring junction for powertrain	172
CAN bus, low	172
4. Front right speed sensor, Rear left speed sensor, ABS control unit	173
5. Button for TCS and electronic stabilisation program, Auto-hold button, ABS control unit, Onboard	174
supply control unit	
6. Control unit for sensor electronics	175
007 - Diagnostic connector	176-177
1. Diagnostic connector	176
2. Onboard supply control unit	177
008 - Parking aid (PDC)	178-181
1. Parking aid (PDC)	178
2. Parking aid button, Parking aid control unit, Data bus diagnostic interface, Parking aid warning	179
lamp	
3. Front right parking aid sender, Front centre left parking aid sender, Front parking aid warning	180
buzzer, Parking aid control unit	
4. Rear centre left parking aid sender, Rear right parking aid sender, Rear parking aid warning	181
buzzer, Parking aid control unit	100.101
009 - Reversing camera (Rear Assist)	182-184
1. Reversing camera (Rear Assist)	182
2. Reversing camera system control unit	183
3. Reversing camera system control unit, Reversing camera	184
010 - Gas discharge headlights (bi-xenon) with automatic headlight range control, cornering light,	185-194
LED daytime running lights	185
 Gas discharge headlights (bi-xenon) with automatic headlight range control, cornering light, LED daytime running lights 	601
2. Onboard supply control unit	186
3. Light switch, Switch and instrument illumination regulator, Rear fog light button, Fog light	187
button, Button for night vision system, Onboard supply control unit	107
4. Onboard supply control unit, Output module for left headlight, Control unit for left daytime	188
running light and side light, Front left turn signal bulb, Front left side marker bulb	100
5. Control motor sender for left VARILIS headlight, Onboard supply control unit, Output module for	189
left headlight, Left headlight range control motor, Left dynamic cornering light control motor	100
6. Onboard supply control unit, Output module for right headlight, Control unit for right daytime	190
running light and side light, Front right turn signal bulb, Front right side marker bulb	
7. Control motor sender for right VARILIS headlight, Onboard supply control unit, Output module for	191
right headlight, Right headlight range control motor, Right dynamic cornering light control motor	
8. Onboard supply control unit, Control unit for cornering light and headlight range control	192
9. Onboard supply control unit, Data bus diagnostic interface	193
10. Onboard supply control unit, Wiring junction for convenience CAN bus, high	194
011 - MMI with radio and BOSE sound system	195-202
1. MMI with radio and BOSE sound system	195
2. Radio	196
3. Radio, Aerial amplifier	197
Digital sound package control unit, Microphone unit in front roof module	198
5. Digital sound package control unit, Front left treble loudspeaker, Front right mid-range	199
loudspeaker, Centre loudspeaker	
6. Digital sound package control unit, Rear left treble loudspeaker, Rear right mid-range and bass	200
loudspeaker, Subwoofer	
7. Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker,	201
Right effect loudspeaker	
8. Digital sound package control unit, Centre left microphone, Rear left microphone	202
012 - Adaptive cruise control	203-207
1. Adaptive cruise control	203
2. Adaptive cruise control unit, Control unit 2 for adaptive cruise control	204
3. Image processing control unit, Camera control unit, Windscreen heater for lane departure warning	205
4. Image processing control unit, Camera control unit	206
5. Camera control unit, Wiring junction for CAN bus extended high	207
013 - Electronic steering column adjustment	208-211
1. Electronic steering column adjustment	208
 Steering column electronics control unit Steering column adjustment switch, Onboard supply control unit, Steering column electronics 	209 210
control unit. Control unit for electrically adjustable steering column	210

4. Steering column vertical adjustment sender, Steering column axial adjustment sender, Control unit for electrically adjustable steering column, Steering column vertical adjustment motor, Steering column axial adjustment motor	211
014 - Automatic adaptive suspension, adjustable dampers	212-216
1. Automatic adaptive suspension, adjustable dampers	212
2. Adaptive suspension control unit, Levelling system fuse	213
3. Pressure sender for adaptive suspension, Adaptive suspension control unit, Front left suspension	214
strut valve, Rear left suspension strut valve, Adaptive suspension compressor motor	
4. Rear left vehicle level sender, Front left vehicle level sender, Adaptive suspension control unit	215
5. Adaptive suspension control unit, Front left shock absorber damping adjustment valve, Rear left	216
shock absorber damping adjustment valve 015 - Rear final drive - sport differential	217-220
1. Rear final drive - sport differential	217-220
2. Adaptive suspension control unit, All-wheel drive control unit, Data bus diagnostic interface	217
3. Oil pressure and oil temperature sender, Oil pressure and oil temperature sender 2, All-wheel	219
drive control unit, All-wheel drive pump	210
4. All-wheel drive control unit, Clutch valve for all-wheel drive, Clutch valve 2 for all-wheel	220
drive	
016 - Electric sliding sunroof , (3FD),(3FE),(3FR)	221-223
 Electric sliding sunroof , (3FD),(3FE),(3FR) 	221
2. Sliding sunroof adjustment control unit	222
3. Sunroof switch, Sliding sunroof adjustment control unit, Sliding sunroof motor, Wind deflector	223
motor	
017 - Electromechanical parking brake	224-226
1. Electromechanical parking brake	224
Control unit for electromechanical parking brake, Wiring junction for powertrain CAN bus, low, Left parking brake motor, Right parking brake motor	225
3. Electromechanical parking brake button, Auto-hold button, Onboard supply control unit, Control	226
unit for electromechanical parking brake	220
018 - 8-speed automatic gearbox 0BK/0BL	227-234
1. 8-speed automatic gearbox 0BK/0BL	227
2. Gearbox oil temperature sender, Gearbox input speed sender, Parking lock sender, Automatic	228
gearbox control unit	
Automatic gearbox control unit, Gearbox oil cooling valve	229
4. Automatic gearbox control unit, Wiring junction for powertrain CAN bus, high	230
5. Automatic gearbox control unit, Auxiliary hydraulic pump 1 for gearbox oil	231
6. Selector lever position sender, Automatic gearbox control unit, Selector lever sensors control	232
unit 7. Selector lever, Selector lever sensors control unit, Solenoid 1 for selector lever lock	233
8. Selector lever, Button for selector lever release, Selector lever sensors control unit, Selector	233
lever position display	204
019 - Automatic air conditioning system, basic Climatronic	235-252
1. Automatic air conditioning system, basic Climatronic	235
2. Climatronic control unit	236
3. Solar cells, Fresh air blower control unit, Climatronic control unit, Solar operation control	237
unit, Fresh air blower	
4. Climatronic control unit, Coolant shut-off valve, Control motor for right side window defroster	238
flap 5. Detentione dan in noon right charter at Olivertanic control with Occlust since lation region	000
5. Potentiometer in rear right chest vent, Climatronic control unit, Coolant circulation pump 6. Potentiometer in left centre dash panel vent, Potentiometer in left side vent, Climatronic	239 240
control unit	240
7. Sunlight penetration photosensor, Potentiometer in right centre dash panel vent, Potentiometer in	241
right side vent, Climatronic control unit	211
8. Climatronic control unit, Auxiliary air heater control unit, Auxiliary heater fuse, Defroster	242
flap control motor, Auxiliary air heater element	
9. Climatronic control unit, Left centre vent control motor, Left temperature flap control motor,	243
Left side vent control motor, Control motor for left footwell temperature flap	
10. Climatronic control unit, Left footwell flap control motor, Rear temperature flap control motor,	244
Control motor for right footwell temperature flap, Rear air quantity control motor	
11. Climatronic control unit, Right footwell flap control motor, Right centre vent control motor,	245
Right temperature flap control motor	046
12. Climatronic control unit, Air flow flap control motor, Air recirculation flap control motor, Indirect ventilation flap control motor	246
13. Left vent temperature sender, Left footwell vent temperature sender, Evaporator output	247
temperature sender, Climatronic control unit	271
14. Climatronic control unit. Right B-pillar and footwell shut-off flap control motor. Rear left	248

chect vent central motor	
chest vent control motor 15. Temperature sensor for rear intake air temperature, Climatronic control unit, Rear fresh air	249
blower control unit, Rear fresh air blower	210
16. Central rear vent illumination bulb, Rear left vent illumination bulb	250
17. Air quality sensor, Refrigerant pressure and temperature sender, Onboard supply control unit	251
18. Onboard supply control unit, Data bus diagnostic interface, Air conditioner compressor	252
regulating valve, Wiring junction for dash panel insert CAN bus, high	050 074
 020 - Automatic air conditioning system, luxury Climatronic 1. Automatic air conditioning system, luxury Climatronic 	253-274 253
2. Climatronic control unit	253
3. Fresh air blower control unit, Climatronic control unit, Solar operation control unit	255
4. Climatronic control unit, Coolant shut-off valve, Control motor for right side window defroster	256
flap	
5. Potentiometer in rear left chest vent, Potentiometer in rear right chest vent, Climatronic	257
control unit, Coolant circulation pump	250
Potentiometer in left centre dash panel vent, Potentiometer in left side vent, Climatronic control unit	258
7. Sunlight penetration photosensor, Potentiometer in right centre dash panel vent, Potentiometer in	259
right side vent, Climatronic control unit	200
8. Climatronic control unit, Auxiliary air heater control unit, Auxiliary heater fuse, Defroster	260
flap control motor, Auxiliary air heater element	
9. Climatronic control unit, Left centre vent control motor, Left temperature flap control motor,	261
Left side vent control motor, Control motor for left footwell temperature flap	200
10. Climatronic control unit, Left footwell flap control motor, Rear temperature flap control motor, Rear air quantity control motor	262
11. Climatronic control unit, Right footwell flap control motor, Right centre vent control motor,	263
Right temperature flap control motor	200
12. Climatronic control unit, Air flow flap control motor, Air recirculation flap control motor,	264
Indirect ventilation flap control motor	
13. Left vent temperature sender, Left footwell vent temperature sender, Evaporator output	265
temperature sender, Climatronic control unit	266
14. Operating and display unit for rear air conditioning system, Rear fresh air blower control unit, Rear fresh air blower	200
15. Operating and display unit for rear air conditioning system, Button for air ionisation system,	267
Control unit for air ionisation system	
16. Operating and display unit for rear air conditioning system, Left B-pillar and footwell shut-off	268
flap control motor, Rear left temperature flap control motor, Rear left chest vent control motor	
17. Operating and display unit for rear air conditioning system, Right B-pillar and footwell	269
shut-off flap control motor, Rear right temperature flap control motor, Rear right chest vent control motor, Rear air recirculation flap control motor	
18. Operating and display unit for rear air conditioning system, Rear left chest vent temperature	270
sender, Vent temperature sender for rear left footwell	210
19. Operating and display unit for rear air conditioning system, Heated bench seat cushion for rear	271
left seat, Heated bench seat cushion for rear right seat	
20. Onboard supply control unit, Central rear vent illumination bulb, Rear left vent illumination	272
bulb, Rear right vent illumination bulb	070
21. Air quality sensor, Refrigerant pressure and temperature sender, Humidity sender in fresh air intake duct, Onboard supply control unit, Air conditioner compressor regulating valve	273
22. Data bus diagnostic interface, Wiring junction for dash panel insert CAN bus, high	274
021 - Auxiliary heater, supplementary heater	275-280
1. Auxiliary heater, supplementary heater	275
2. Temperature sensor, Auxiliary heater control unit	276
3. Auxiliary heater control unit, Heater coolant shut-off valve, Metering pump	277
 Auxiliary heater control unit, Remote control receiver for auxiliary heater, Auxiliary heater aerial, Roof aerial 	278
5. Wiring junction for powertrain CAN bus, high, Wiring junction for powertrain CAN bus, low	279
6. Wiring junction for dash panel insert CAN bus, high, Wiring junction for dash panel insert CAN	280
bus, low	-
022 - Active steering (dynamic steering)	281-284
1. Active steering (dynamic steering)	281
2. Active steering control unit, Active steering motor	282 283
 Active steering control unit, Steering hydraulics pump Data bus diagnostic interface, Wiring junction for powertrain CAN bus, high, Wiring junction for 	283 284
powertrain CAN bus, low	207
023 - Trailer coupling	285-288
1. Trailer coupling	285

2. Trailer detector control unit	286	
3. Trailer detector control unit, Trailer socket	287	
4. Electric hinged tow coupling attachment button, Trailer detector control unit, Hi	nged tow 288	
attachment ball head motor		
024 - Heated seats	289-300	
1. Heated seats	289	
2. Front left seat temperature sender, Heated seat cushion for driver seat	290	
3. Front right seat temperature sender, Heated seat cushion for front passenger s		
4. Rear left seat temperature sensor, Heated bench seat cushion for rear left seat		
5. Rear right seat temperature sensor, Heated bench seat cushion for rear right s		
6. Rear left seat temperature sensor, Heated bench seat cushion for rear left seat		
7. Heated backrest for rear left seat, Left bolster heater for driver side rear seat backrest		
8. Rear right seat temperature sensor, Heated bench seat cushion for rear right s		
9. Heated backrest for rear right seat	200	
10. Seat heating control unit	298	
11. Button for left seat heating, Seat heating control unit	299	
12. Seat heating control unit, Heated bench seat cushion for rear left seat, Heated		
cushion for rear right seat	Jenen seat 500	
025 - CD/DVD changer (MOST bus)	301-303	
1. CD/DVD changer (MOST bus)	301-303	
÷ ()	301	
2. DVD changer 3. DVD changer	302	
•		
026 - Data bus network (GP0)	304-331	
1. Data bus network , (GP0)	304 205	
2. Wiring junction for convenience CAN bus, high, Wiring junction for convenience		
3. Wiring junction for convenience CAN bus, high, Wiring junction for convenience		
4. Wiring junction for convenience CAN bus, high, Wiring junction for convenience		
5. Wiring junction for convenience CAN bus, high, Wiring junction for convenience		
6. Wiring junction for powertrain CAN bus, high, Wiring junction for powertrain CA		
7. Wiring junction for powertrain CAN bus, high, Wiring junction for powertrain CA		
8. Wiring junction for powertrain CAN bus, high, Wiring junction for powertrain CA		
9. Wiring junction for dash panel insert CAN bus, high, Wiring junction for dash pa	anel insert CAN 312	
bus, low		
10. Wiring junction for dash panel insert CAN bus, high, Wiring junction for dash p	banel insert CAN 313	
bus, low		
11. Wiring junction for dash panel insert CAN bus, high, Wiring junction for dash p	banel insert CAN 314	
bus, low, Wiring junction for CAN bus extended high		
12. Wiring junction for CAN bus extended high	315	
13. Wiring junction for CAN bus extended high	316	
14. Connection 7 (convenience CAN bus, high), in main wiring harness	317	
15. Connection 7 (convenience CAN bus, low), in main wiring harness	318	
16. Connection (high bus), in interior wiring harness, Connection (low bus), in inte	erior wiring 319	
harness		
17. Data bus diagnostic interface	320	
18. Data bus diagnostic interface	321	
19. Data bus diagnostic interface	322	
20. Data bus diagnostic interface	323	
21. Data bus diagnostic interface	324	
22. Connection 1 (LIN bus) in dash panel wiring harness	325	
23. Connection 1 (LIN bus) in main wiring harness	326	
24. Connection 4 (LIN bus) in main wiring harness	327	
25. Connection 5 (LIN bus) in main wiring harness, Connection 7 (LIN bus) in mai		
26. Connection 1 (diagnosis), in main wiring harness	329	
27. Control unit in dash panel insert, Control unit 1 for information electronics, Ra		
28. Control unit in dash panel insert, Control unit 1 for information electronics, Ra		
027 - Electric seat adjustment with memory function	332-348	
 Electric seat adjustment with memory function 	332	
2. Seat and steering column adjustment control unit with memory, Driver seat adjustmen	ustment thermal fuse 333	
1		
3. Seat and steering column adjustment control unit with memory, Driver seat long	gitudinal adjustment 334	
motor, Driver seat rake adjustment motor, Driver seat height adjustment motor		
4. Seat and steering column adjustment control unit with memory, Driver seat bac	krest adjustment 335	
motor, Driver seat head restraint adjustment motor		
5. Seat and steering column adjustment control unit with memory, Driver seat lum		
longitudinal adjustment motor, Driver seat lumbar support height adjustment motor		
6. Switch module 2 for driver seat. Seat and steering column adjustment control u	init with memory. 337	

Seat belt height adjustment motor 7. Switch module for driver seat, Seat and steering column adjustment control unit with memory	338
8. Driver seat memory operating unit, Emergency-off button, Driver door control unit	339
9. Front passenger seat adjustment with memory control unit, Front passenger seat adjustment ther	
fuse 1	
10. Front passenger seat adjustment with memory control unit, Front passenger seat longitudinal	341
adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjust	ment
motor	0.40
11. Front passenger seat adjustment with memory control unit, Front passenger seat backrest adjustment motor, Front passenger seat head restraint adjustment motor	342
12. Front passenger seat adjustment with memory control unit, Front passenger seat lumbar suppor	t 343
longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	
13. Switch module 2 for front passenger seat, Front passenger seat adjustment with memory contro	I 344
unit, Seat belt height adjustment motor	
14. Switch module for front passenger seat, Front passenger seat adjustment with memory control u	
15. Front passenger seat memory operating unit, Front passenger side emergency off button, Front	346
passenger door control unit 16. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low	347
17. Data bus diagnostic interface	348
028 - Electric seat adjustment with no memory function	349-353
1. Electric seat adjustment with no memory function	349
2. Driver seat adjustment operating unit, Driver seat adjustment thermal fuse 1	350
3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment	351
switch, Driver seat adjustment operating unit	250
 4. Front passenger seat adjustment operating unit, Front passenger seat adjustment thermal fuse 1 5. Front passenger seat adjustment operating unit 	352 353
029 - Electrically operated rear roller blind and rear left and right side roller blinds	354-360
1. Electrically operated rear roller blind and rear left and right side roller blinds	354
2. Rear left door control unit, Rear left side roller blind control unit	355
3. Rear left door control unit	356
4. Rear right door control unit, Rear right side roller blind control unit	357
5. Rear right door control unit	358
 Onboard supply control unit Convenience system central control unit 	359 360
030 - Garage door opener	361-363
1. Garage door opener	361
2. Garage door operating unit, Garage door operation control unit	362
3. Garage door operating unit, Garage door opener button 1	363
031 - Refrigerator box	364-365
 Refrigerator box Onboard supply control unit, Refrigerator box 	364 365
032 - MMI (information electronics 1)	366-376
1. MMI (information electronics 1)	366
2. Multimedia system operating unit, Control unit 1 for information electronics	367
3. Multimedia system operating unit, Display unit button, Open display limit switch, Control unit 1	368
for information electronics, Open and close display motor	
4. Control unit 1 for information electronics, Microphone unit in front roof module	369
5. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	370
6. Control unit 1 for information electronics	371
7. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial	372
8. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial	373
9. Control unit 1 for information electronics, Connection for external audio sources	374
10. Control unit 1 for information electronics, Connection for external audio sources	375
11. Remote control 1 for information electronics	376
033 - MMI with integrated Bluetooth car phone1. MMI with integrated Bluetooth car phone	377-381 377
2. Control unit 1 for information electronics	378
3. Control unit 1 for information electronics, Microphone unit in front roof module, Roof aerial	379
4. Telephone bracket, Rear charger unit for telephone	380
5. Rear charger unit for telephone	381
034 - MMI with integrated preparation for mobile telephone and hands-free system	382-386
1. MMI with integrated preparation for mobile telephone and hands-free system	382
 Control unit 1 for information electronics Control unit 1 for information electronics, Telephone bracket, Microphone unit in front roof 	383 384
module	

4. Asvislementifier for mahile talembana. Deaf asvisl	205
4. Aerial amplifier for mobile telephone, Roof aerial	385
5. LTE aerial 1 035 - MMI with radio and Bang & Olufsen sound system	386 387-399
1. MMI with radio and Bang & Olufsen sound system	387-399 387
2. Radio	388
3. Radio, Aerial amplifier	389
4. Digital sound package control unit, Microphone unit in front roof module	390
5. Digital sound package control unit, Front left mid-range loudspeaker, Centre loudspeaker	391
6. Digital sound package control unit, Left effect loudspeaker, Rear left treble loudspeaker 2	392
7. Digital sound package control unit, Rear left treble loudspeaker, Rear left mid-range loudspeaker	393
8. Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker	394
9. Digital sound package control unit, Centre left microphone, Rear left microphone	395
10. Digital sound package control unit, Digital sound package control unit 2	396
11. Digital sound package control unit, Digital sound package control unit 2	397
12. Digital sound package control unit 2, Front left bass loudspeaker, Subwoofer	398
13. Digital sound package control unit 2, Rear left bass loudspeaker, Rear right bass loudspeaker	399
036 - MMI with radio and Standard sound system	400-410
1. MMI with radio and Standard sound system	400
2. Radio	401
3. Radio, Aerial amplifier 4. Radio, Front left treble loudspeaker, Front left bass loudspeaker	402 403
5. Radio, Centre loudspeaker, Subwoofer	403
6. Radio, Rear left treble loudspeaker, Rear left mid-range and bass loudspeaker	404
7. Digital sound package control unit	406
8. Digital sound package control unit, Front left treble loudspeaker, Front right mid-range	407
loudspeaker, Centre loudspeaker	101
9. Digital sound package control unit, Rear left treble loudspeaker, Rear right mid-range and bass	408
loudspeaker	
10. Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker,	409
Subwoofer	
11. Digital sound package control unit, Centre left microphone, Rear left microphone	410
037 - Multifunction steering wheel	411-417
1. Multifunction steering wheel	411
2. Steering column electronics control unit	412
 Steering column electronics control unit, Wiring junction for dash panel insert CAN bus, high Steering column electronics control unit, Wiring junction for powertrain CAN bus, high 	413 414
5. Tiptronic switch in steering wheel to shift down, Lane departure warning button, Steering column	414
electronics control unit, Steering wheel vibration motor	415
6. Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel,	416
Horn plate, Steering column electronics control unit	
7. Steering column electronics control unit, Driver side airbag igniter, Driver side airbag igniter	417
2, Heated steering wheel	
038 - Rear Seat Entertainment (RSE)	418-424
1. Rear Seat Entertainment (RSE)	418
Multimedia system operating unit 2, Control unit 2 for information electronics	419
3. Multimedia system operating unit 2, Control unit 2 for information electronics	420
4. Control unit 2 for information electronics	421
5. Control unit 2 for information electronics	422
6. Control unit 2 for information electronics, Connection 2 for external audio sources	423
 7. Control unit 2 for information electronics, Connection 2 for external audio sources 039 - Ventilated rear seat, heated seat 	424 425-431
1. Ventilated rear seat, heated seat	425-431
2. Control unit for rear left seat adjustment	426
3. Control unit for rear left seat adjustment	427
4. Control unit for rear left seat adjustment	428
5. Control unit for rear right seat adjustment	429
6. Control unit for rear right seat adjustment	430
7. Control unit for rear right seat adjustment	431
040 - Adjustable rear seat	432-444
1. Adjustable rear seat	432
2. Control unit for rear seat adjustment, driver side	433
3. Switch for rear multicontour seat, driver side, Control unit for rear seat adjustment, driver	434
side 4. Centrel unit for rear aget adjustment, driver eide. Deer left eget lengitudingligdiustment mater	105
4. Control unit for rear seat adjustment, driver side, Rear left seat longitudinal adjustment motor,	435
Rear left seat rake adjustment motor, Rear left upper backrest adjustment motor 5. Control unit for rear multicontour seat. driver side. Valve block 1 in driver side rear seat.	436
o. Control unit for real multicontour seat. Unver side, valve block i in unver side real seat.	-100

Commence for more driver side multicenteur sest	
Compressor for rear driver side multicontour seat 6. Operating unit for rear left seat adjustment, Rear left door control unit	437
7. Control unit for rear seat adjustment, passenger side	437
8. Switch for rear multicontour seat, front passenger side, Control unit for rear seat adjustment,	439
passenger side	
9. Control unit for rear seat adjustment, passenger side, Rear right seat longitudinal adjustment	440
motor, Rear right seat rake adjustment motor, Rear right upper backrest adjustment motor	
10. Control unit for rear multicontour seat, front passenger side, Valve block 1 in rear seat,	441
passenger side, Compressor for rear passenger side multicontour seat	
11. Operating unit for rear right seat adjustment, Rear right door control unit	442
12. Remote control for rear legroom function	443
13. Data bus diagnostic interface	444
041 - Interface for special functions	445-447
1. Interface for special functions	445 446
 Wiring junction for convenience CAN bus, high Convenience system central control unit 	440
042 - Fuse assignment	448-483
1. Fuse assignment	448
2. Battery, Battery monitor control unit, Battery isolation igniter	449
3. Starter, Alternator, Fuse 2	450
4. Voltage stabiliser, Start/Stop operation fuse	451
5. Starter motor relay, Terminal 15 voltage supply relay, Terminal 15 voltage supply relay 2,	452
Starter motor relay 2	
6. Heated rear window relay, Fuel pump relay, Adaptive suspension compressor relay, Relay for power	453
sockets	
7. Secondary air pump relay, Horn relay, Brake servo relay, Relay for automatic anti-dazzle interior	454
mirror, Secondary air pump fuse	455
8. Main relay, Terminal 30 voltage supply relay, Engine component current supply relay	455
9. Fuse holder A	456
10. Fuse holder A 11. Fuse holder B, Fuse carrier 2	457 458
12. Fuse holder B	459
13. Fuse holder B, Fuse carrier 3	460
14. Fuse holder B	461
15. Fuse holder C, Fuse carrier 2	462
16. Fuse holder C, Driver seat adjustment thermal fuse 1	463
17. Fuse holder C, Fuse carrier 3	464
18. Fuse holder C	465
19. Fuse holder F, Fuse carrier 1	466
20. Fuse holder F	467
21. Fuse holder F	468
22. Fuse holder F	469
23. Fuse holder F, Fuse carrier 2 24. Fuse holder F	470 471
25. Fuse holder F	471
26. Fuse holder F, Fuse carrier 3	472
27. Fuse holder F	474
28. Fuse holder F	475
29. Fuse holder F, Fuse carrier 4	476
30. Fuse holder F	477
31. Fuse holder F, Fuse carrier 5	478
32. Fuse holder F	479
33. Fuse holder F, Fuse carrier 6	480
34. Fuse holder F	481
35. Fuse holder F	482
36. Fuse holder F	483
043 - Lane change assist	484-487
 Lane change assist Lane change assist control unit 	484 485
3. Button for lane change assist, Lane change assist control unit, Lane change assist control unit 2,	485
Lane change assist warning lamp	400
4. Lane change assist control unit 2, Lane change assist warning lamp in driver side exterior mirror	487
044 - TV tuner (MOST bus)	488-492
1. TV tuner (MOST bus)	488
2. TV tuner	489
3. TV tuner. Aerial amplifier 3	490

5	4. TV tuner, Aerial amplifier 2, Aerial amplifier 4 5. TV tuner, TV card reader · Electric seat adjustment with memory function, convenience seat	491 492 493-516
1	 Electric seat adjustment with memory function, convenience seat Seat and steering column adjustment control unit with memory, Driver seat adjustment thermal fuse 	493 494
	ו 3. Switch module 2 for driver seat, Driver seat massage function button, Seat and steering column adjustment control unit with memory	495
2 5 r	 Switch module for driver seat, Seat and steering column adjustment control unit with memory Seat and steering column adjustment control unit with memory, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor 	496 497
	δ. Seat and steering column adjustment control unit with memory, Driver seat backrest adjustment notor	498
ī	7. Seat and steering column adjustment control unit with memory, Driver seat head restraint adjustment motor, Seat belt height adjustment motor, Driver upper backrest adjustment motor 3. Control unit for front left seat ventilation, Heated seat cushion for driver seat, Heated	499 500
k	packrest for driver seat	
1 S	 Control unit for front left seat ventilation, Driver seat backrest fan, Driver seat cushion fan Control unit for driver multicontour seat, Valve block 1 in driver seat, Valve block 2 in driver seat, Compressor for multicontour driver seat 	501 502
1	 Driver seat memory operating unit, Emergency-off button, Driver door control unit Front passenger seat adjustment with memory control unit, Front passenger seat adjustment 	503 504
1	hermal fuse 1 13. Switch module 2 for front passenger seat, Front passenger seat massage function button, Front passenger seat adjustment with memory control unit	505
1 1 2	14. Switch module for front passenger seat, Front passenger seat adjustment with memory control unit 15. Front passenger seat adjustment with memory control unit, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	506 507
1	16. Front passenger seat adjustment with memory control unit, Front passenger seat backrest	508
1 2	adjustment motor 17. Front passenger seat adjustment with memory control unit, Front passenger seat head restraint adjustment motor, Front passenger upper backrest adjustment motor, Front passenger foot rest adjustment motor	509
1	 Front passenger seat adjustment with memory control unit, Seat belt height adjustment motor Control unit for front right seat ventilation, Heated seat cushion for front passenger seat, 	510 511
2	Heated backrest for front passenger seat 20. Control unit for front right seat ventilation, Front passenger seat backrest fan, Front passenger seat cushion fan, Front passenger display unit motor	512
2	21. Control unit for front passenger multicontour seat, Valve block 1 in front passenger seat, Valve block 2 in front passenger seat, Compressor for multicontour driver seat	513
	22. Front passenger seat memory operating unit, Front passenger side emergency off button, Front passenger door control unit	514
	23. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low 24. Data bus diagnostic interface Panoramic sliding sunroof	515 516 517-521
1	1. Panoramic sliding sunroof	517
	Sliding sunroof adjustment control unit, Convenience system central control unit, Sliding sunroof notor	518
	 Sunroof button, Button 1 for roof roller blind, Sliding sunroof adjustment control unit, Onboard supply control unit 	519
2	4. Rear sliding sunroof control unit, Rear sliding sunroof motor 5. Sunroof roller blind control unit, Sunroof roller blind motor • LED headlights	520 521 522-531
1	1. LED headlights	522
	2. Onboard supply control unit 3. Light switch, Onboard supply control unit	523 524
2	4. Output module 2 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left turn signal bulb, Front left side marker bulb	525
5	5. Output module 1 for left LED headlight, Onboard supply control unit, Left static cornering light, Bulb 2 for front left turn signal	526
6	6. Output module 1 for left LED headlight, Temperature sender 1 for left headlight, Onboard supply control unit, Left headlight dipped beam bulb, Left headlight fan	527
	7. Output module 2 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right turn signal bulb, Front right side marker bulb	528
	3. Output module 1 for right LED headlight. Onboard supply control unit. Right static cornering	529

light, Bulb 2 for front right turn signal	
9. Output module 1 for right LED headlight, Temperature sender 1 for right headlight, Onboard supply	530
control unit, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight fan	
10. Onboard supply control unit, Data bus diagnostic interface	531
048 - 4.0I petrol engine, CEUA,CEUE,CGTA,CTFA,CTGA,CTGD,CTGF,DDTA	532-573
1. 4.0I petrol engine , CEUA, CEUE, CGTA, CTFA, CTGA, CTGD, CTGF, DDTA	532
2. Battery, Suppression filter, Battery monitor control unit, Battery isolation igniter, Fuse 2	533
3. Starter, Alternator	534
4. Starter motor relay, Terminal 15 voltage supply relay, Starter motor relay 2	535
5. Fuse holder A	536
6. Main relay, Engine component current supply relay	537
7. Engine/motor control unit	538
 Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit Engine/motor control unit, Ignition coil 1 with output stage, Spark plug connector, Spark plugs 	539 540
10. Engine/motor control unit, Ignition coil 5 with output stage, Spark plug connector, Spark plugs	540 541
11. Engine/motor control unit, Spark plug connector, Spark plugs	542
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 6,	543
Injector, cylinder 8	010
13. Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5,	544
Injector, cylinder 7	
14. Accelerator position sender, Throttle valve module, Engine/motor control unit	545
15. Knock sensor 1, Knock sensor 2, Knock sensor 3, Knock sensor 4, Engine/motor control unit	546
16. Hall sender, Hall sender 2, Hall sender 3, Hall sender 4, Engine/motor control unit	547
17. Fuel pressure sender for low pressure, Sender 1 for secondary air pressure, Engine/motor control	548
unit	
18. Coolant temperature sender, Radiator outlet coolant temperature sender, Oil temperature sender 2,	549
Temperature sender for engine temperature regulation, Engine/motor control unit	550
19. Engine speed sender, Intake manifold flap potentiometer, Intake manifold flap potentiometer 2,	550
Engine/motor control unit 20. Intake manifold pressure sender, Fuel pressure sender, Engine/motor control unit	551
21. Charge pressure sender, Charge pressure sender 2, Fuel pressure sender 2, Engine/motor control	552
unit	552
22. Intake air temperature sender, Temperature sender 1 for charge air cooler, Temperature sender	553
for engine cover panel, Engine/motor control unit	
23. Map-controlled engine cooling system thermostat, Engine/motor control unit, Activated charcoal	554
filter solenoid valve 1, Secondary air inlet valve, Turbocharger air recirculation valve, Intake	
manifold flap valve, Coolant valve for cylinder head	
24. Engine/motor control unit, Gearbox oil cooling valve, Piston cooling jet control valve,	555
Continued coolant circulation pump, Charge air cooling pump	
25. Engine/motor control unit, Charge pressure control solenoid valve, Camshaft control valve 1,	556
Fuel metering valve, Exhaust camshaft control valve 1	
26. Inlet cam actuator 2 for cylinder 2, Engine/motor control unit, Secondary air inlet valve 2,	557
Valve for oil pressure control	558
27. Inlet cam actuator 2 for cylinder 3, Secondary air pump relay, Engine/motor control unit, Secondary air pump fuse	220
28. Inlet cam actuator 2 for cylinder 5, Engine/motor control unit, Gearbox mounting valve 1	559
29. Inlet cam actuator 2 for cylinder 8, Engine/motor control unit, Coolant circulation pump 2	560
30. Stage 3 oil pressure switch, Brake servo pressure sensor, Engine/motor control unit, Coolant	561
valve for gearbox	
31. Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2, Exhaust flap	562
1 valve, Exhaust flap 2 valve	
32. Lambda probe, Lambda probe 2, Engine/motor control unit	563
33. Oil pressure switch, Oil pressure switch for reduced oil pressure, Lambda probe after catalytic	564
converter, Lambda probe 2 after catalytic converter, Engine/motor control unit	
34. Brake light switch, Engine/motor control unit, Control unit for fuel tank leak detection	565
35. Radiator fan control unit, Engine/motor control unit, Radiator fan control unit 2	566
36. Fuel system pressurisation pump, Oil level and oil temperature sender, Fuel pump relay, Fuel	567
pump control unit, Engine/motor control unit	568
37. Power unit mounting control unit 38. Power unit mounting sender 1, Power unit mounting sender 2, Power unit mounting control unit	568 569
39. Control unit for structure-borne sound, Power unit mounting control unit, Power unit mounting	509 570
actuator 1, Actuator for structure-borne sound	010
40. Fuel gauge, Fuel gauge sender 2, Fuel gauge sender 3, Control unit in dash panel insert	571
41. Wiring junction for powertrain CAN bus, high, Wiring junction for dash panel insert CAN bus,	572
high	
42. Wirina iunction for powertrain CAN bus. high. Wiring iunction for CAN bus extended. high	573

049 - Night vision system	574-576
1. Night vision system	574
2. Control unit for night vision system	575
3. Control unit for night vision system, Camera for night vision system	576
050 - 3.0l petrol engine, CGWA,CGWD,CGXB,CGXC,CMDA,CTUB	577-604
1. 3.0I petrol engine , CGWA,CGWD,CGXB,CGXC,CMDA,CTUB	577
2. Battery, Battery monitor control unit, Battery isolation igniter, Fuse 2	578
3. Starter, Alternator 4. Starter motor relay, Terminal 15 voltage supply relay, Starter motor relay 2	579 580
5. Fuse holder A	581
6. Main relay, Engine component current supply relay	582
7. Engine/motor control unit	583
8. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit	584
9. Engine/motor control unit, Ignition coil 1 with output stage, Spark plug connector	585
10. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector	586
11. Engine/motor control unit, Injector, cylinder 1	587
12. Accelerator position sender, Brake servo pressure sensor, Engine/motor control unit	588
13. Engine speed sender, Knock sensor 1, Knock sensor 2, Throttle valve module, Engine/motor control	589
unit	
14. Sender 1 for secondary air pressure, Engine/motor control unit	590
15. Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Fuel	591
pressure sender for low pressure, Intake manifold flap potentiometer 2, Engine/motor control unit	500
16. Oil pressure switch, Oil pressure switch for reduced oil pressure, Intake manifold flap potentiometer, Temperature sender for engine temperature regulation, Engine/motor control unit	592
17. Charge pressure sender, Intake manifold temperature sender, Engine/motor control unit,	593
Regulating flap control unit	595
18. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve,	594
Right electrohydraulic engine mounting solenoid valve, Exhaust gas recirculation cooler changeover	001
valve, Valve for oil pressure control	
19. Secondary air pump relay, Engine/motor control unit, Crankcase breather shut-off valve,	595
Secondary air pump fuse, Secondary air pump motor	
20. Engine/motor control unit, Exhaust flap 1 valve, Gearbox oil cooling valve, Charge air cooling	596
pump	
21. Engine/motor control unit, Camshaft control valve 1, Fuel metering valve, Intake manifold flap	597
valve	
22. Lambda probe, Engine/motor control unit, Lambda probe heater	598
23. Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe 1 heater after	599
catalytic converter 24. Brake light switch, Engine/motor control unit, Control unit for fuel tank leak detection	600
25. Radiator fan control unit, Engine/motor control unit, Radiator fan control unit 2	601
26. Fuel system pressurisation pump, Oil level and oil temperature sender, Fuel pump relay, Fuel	602
pump control unit, Engine/motor control unit	002
27. Fuel gauge, Fuel gauge sender 2, Fuel gauge sender 3, Control unit in dash panel insert	603
28. Wiring junction for powertrain CAN bus, high, Wiring junction for dash panel insert CAN bus,	604
high	
051 - 3.0l diesel engine , CDTA,CDTB,CDTC,CLAB	605-626
1. 3.0I diesel engine , CDTA,CDTB,CDTC,CLAB	605
2. Battery, Suppression filter, Battery monitor control unit, Battery isolation igniter, Fuse 2	606
3. Starter, Alternator	607
4. Starter motor relay, Terminal 15 voltage supply relay, Starter motor relay 2	608
5. Fuse holder A	609
6. Automatic glow period control unit, Gearbox oil cooling valve	610
7. Terminal 30 voltage supply relay	611
8. Engine/motor control unit	612 613
 Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit Air mass meter, Engine/motor control unit, Injector, cylinder 1 	614
11. Charge pressure sender, Intake air temperature sender, Accelerator position sender, Engine/motor	615
control unit	010
12. Fuel pressure sender, Throttle valve module, Engine/motor control unit	616
13. Pressure differential sender, Engine/motor control unit, Turbocharger 1 control unit, Exhaust	617
gas recirculation control motor	
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine speed sender, Hall	618
sender, Coolant temperature sender, Fuel temperature sender, Radiator outlet coolant temperature	
sender, Engine/motor control unit	
15. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Oil temperature	619
sender 2. Temperature sender for engine temperature regulation. Engine/motor control unit	

16. Map-controlled engine cooling system thermostat, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Variable intake manifold changeover valve 2, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure co trol, Coolant valve for	620
cylinder head	
17. Brake light switch, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	621
18. Lambda probe, Brake servo pressure sensor, Engine/motor control unit, Lambda probe heater	622
19. Radiator fan control unit, Engine/motor control unit, Radiator fan control unit 2	623
20. Fuel system pressurisation pump, Oil level and oil temperature sender, Fuel pump relay, Fuel	624
pump control unit, Engine/motor control unit	
21. Fuel gauge, Fuel gauge sender 2, Control unit in dash panel insert	625
22. Wiring junction for powertrain CAN bus, high, Wiring junction for dash panel insert CAN bus,	626
high	607 664
052 - 6.3l petrol engine , CEJA 1. 6.3l petrol engine , CEJA	627-661 627
2. Battery, Suppression filter, Battery monitor control unit, Battery isolation igniter, Fuse 2	628
3. Starter, Alternator	629
4. Starter motor relay, Terminal 15 voltage supply relay, Starter motor relay 2	630
5. Fuse holder A	631
6. Main relay, Engine component current supply relay	632
7. Engine/motor control unit	633
8. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit	634
9. Engine/motor control unit, Injector, cylinder 1, Ignition coil 1 with output stage, Spark plug	635
connector, Spark plugs	000
10. Engine/motor control unit, Injector, cylinder 4, Ignition coil 4 with output stage, Spark plug	636
connector, Spark plugs 11. Accelerator position sender, Throttle valve module, Engine/motor control unit	637
12. Intake air temperature sender, Knock sensor 1, Air mass meter, Engine/motor control unit	638
13. Hall sender, Fuel pressure sender, Hall sender 3, Sender 1 for secondary air pressure,	639
Engine/motor control unit	000
14. Engine speed sender, Coolant temperature sender, Fuel pressure sender for low pressure,	640
Engine/motor control unit	
15. Engine/motor control unit, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft	641
control valve 1, Continued coolant circulation pump	
16. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Gearbox mounting valve 1, Exhaust flap 1 valve, Exhaust flap 2 valve	642
17. Secondary air pump relay, Engine/motor control unit, Right electrohydraulic engine mounting	643
solenoid valve, Valve for oil pressure control, Secondary air pump fuse, Secondary air pump motor	
18. Brake light switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit	644
19. Lambda probe, Lambda probe 2, Engine/motor control unit	645
20. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine/motor control unit	646
21. Brake servo pressure sensor, Brake servo relay, Engine/motor control unit, Vacuum pump for brakes	647
22. Radiator fan control unit, Engine/motor control unit, Radiator fan control unit 2	648
23. Engine/motor control unit, Engine/motor control unit 2	649
24. Air mass meter 2, Intake air temperature sender 2, Engine/motor control unit 2	650
25. Engine/motor control unit 2, Injector, cylinder 7, Ignition coil 7 with output stage, Spark plug	651
connector, Spark plugs	652
26. Engine/motor control unit 2, Injector, cylinder 10, Ignition coil 10 with output stage, Spark plug connector, Spark plugs	002
27. Hall sender 2, Knock sensor 3, Knock sensor 4, Hall sender 4, Engine/motor control unit 2	653
28. Oil pressure switch, Sender 2 for secondary air pressure, Fuel pressure sender 2, Throttle valve	654
module 2, Engine/motor control unit 2	
29. Engine/motor control unit 2, Heater element for crankcase breather, Activated charcoal filter	655
solenoid valve 1, Camshaft control valve 2, Gearbox mounting valve 2, Exhaust camshaft control valv	e
2, Fuel metering valve 2	
30. Lambda probe 3, Lambda probe 4, Engine/motor control unit 2	656
31. Lambda probe 3 after catalytic converter, Lambda probe 4 after catalytic converter, Engine/motor	657
control unit 2	050
32. Secondary air pump 2 relay, Engine/motor control unit 2, Control unit for fuel tank leak	658
detection, Secondary air pump fuse 2, Secondary air pump motor 2 33. Fuel system pressurisation pump, Oil level and oil temperature sender, Fuel pump relay, Fuel	659
pump control unit, Engine/motor control unit 2	009
34. Fuel gauge, Fuel gauge sender 2, Fuel gauge sender 3, Control unit in dash panel insert	660
35. Wiring junction for powertrain CAN bus, high, Wiring junction for dash panel insert CAN bus.	661

high	
053 - Special equipment, public authority vehicle	662-673
1. Special equipment, public authority vehicle	662
2. Special vehicle control unit	663
3. Operating unit for special signals, Special vehicle control unit, Wiring junction for convenience	664
CAN bus, high, Wiring junction for convenience CAN bus, low	
4. Operating unit for special signals, Signal system control unit	665
5. Operating unit for special signals, Siren, Signal system control unit	666
6. Signal system control unit, Rotating light bulb, Two-way radio 7. Two-way radio voltage relay, Two-way radio	667 668
8. Two-way radio	669
9. 10-pin connector	670
10. Microphone for special signals, 2-way radio unit microphone, Data transmission aerial	671
11. Flashing lights relay, Two-way radio voltage relay 2	672
12. Left flashing light, Right flashing light, 12 V socket 4	673
054 - Special equipment, rental vehicle	674-681
1. Special equipment, rental vehicle	674
2. Special vehicle control unit, Wiring junction for convenience CAN bus, high, Wiring junction for	675
convenience CAN bus, low 3. Onboard supply control unit, Special vehicle control unit, Two-way radio, Two-way radio	676
loudspeaker	070
4. Taximeter, Special vehicle control unit, Two-way radio	677
5. Chip card reader, Taximeter, Special vehicle control unit	678
6. Chip card reader, Taximeter, Special vehicle control unit	679
7. Taxi sign switch, Taxi alarm active button, Taxi alarm off button, Special vehicle control unit,	680
Taxi roof sign light bulb	
8. 2-way radio unit microphone, 2-pin connector, 2-pin connector	681
055 - Overhead view camera	682-686
1. Overhead view camera	682
 Control unit for overhead view camera Control unit for overhead view camera, Left overhead view camera, Right overhead view camera 	683 684
4. Control unit for overhead view camera, Front overhead view camera	685
5. Control unit for overhead view camera, Rear overhead view camera	686
056 - Digital TV tuner	687-691
1. Digital TV tuner	687
2. TV tuner	688
3. TV tuner, Aerial amplifier 3	689
4. TV tuner, Aerial amplifier 2, Aerial amplifier 4	690
5. TV tuner	691 602 605
057 - Lane change assist 1. Lane change assist	692-695 692
2. Lane change assist control unit	693
3. Button for lane change assist, Driver door control unit, Lane change assist control unit, Lane	694
change assist control unit 2, Lane change assist warning lamp	
4. Lane change assist control unit 2, Lane change assist warning lamp in driver side exterior mirror	695
058 - Convenience system	696-741
1. Convenience system	696
2. Contact sensor for front left exterior door handle, Driver door control unit	697
3. Driver door control unit 4. Driver eide control leaking leak unit. Driver door newer letebing eveter contect ewiteb. Driver	698
 Driver side central locking lock unit, Driver door power latching system contact switch, Driver door control unit, Driver door power latching motor 	699
5. Operating unit for window regulator in driver door, Driver door control unit	700
6. Childproof lock button, Operating unit for window regulator in driver door, Driver door control	701
unit, Front left door exterior handle illumination bulb, Driver side window regulator motor	
7. Mirror adjustment switch, Alarm system off switch, Driver door control unit	702
8. Driver door control unit, Driver side mirror adjustment motor 2	703
9. Button for lane change assist, Driver door control unit, Lane change assist warning lamp in	704
driver side exterior mirror	305
10. Driver side interior locking switch, Driver door control unit, Central locking SAFELOCK function	705
warning lamp, Driver door opener illumination bulb 11. Rear lid remote release button, Driver door control unit, Driver side door warning lamp, Front	706
left entry light	700
12. Driver seat memory operating unit, Emergency-off button, Seat memory position button 1, Driver	707
seat memory function button, Driver door control unit	
13. Contact sensor for front right exterior door handle, Front passenger door control unit	708
14. Front passenger door control unit	709

	15. Front passenger side central locking lock unit, Front passenger door power latching system	710
	contact switch, Front passenger door control unit, Front passenger door power latching motor	
	16. Window regulator switch in front passenger door, Front passenger side interior locking switch, Front passenger door control unit	711
	17. Front passenger door control unit, Front passenger door opener illumination bulb, Front right	712
	door exterior handle illumination bulb, Front passenger side window regulator motor, Front right entry light, Front passenger side door warning lamp	
	18. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front	713
	passenger side mirror adjustment motor 2, Heated exterior mirror on passenger side	715
	19. Front passenger door control unit, Lane change assist control unit 2, Automatic anti-dazzle	714
	exterior mirror, passenger side	
	20. Front passenger seat memory operating unit, Front passenger door control unit	715
	21. Contact sensor for rear left exterior door handle, Rear left door control unit	716
	22. Rear left central locking lock unit, Rear left door power latching system contact switch, Rear	717
	left door control unit, Rear left power latching motor	
	23. Rear left window regulator button in rear left door, Rear left door control unit, Rear left	718
	ashtray illumination bulb, Rear left exterior door handle illumination bulb, Rear left window	
	regulator motor	
	24. Rear left interior locking switch, Rear left door control unit, Rear left door opener	719
	illumination bulb, Rear left entry light, Rear left door warning lamp	
	25. Operating unit for rear left seat adjustment, Rear left door control unit	720
	26. Contact sensor for rear right exterior door handle, Rear right door control unit	721
	27. Rear right central locking lock unit, Rear right door power latching system contact switch, Rear	722
	right door control unit	
	28. Rear right window regulator button in rear right door, Rear right door control unit, Rear right	723
	ashtray illumination bulb, Rear right exterior door handle illumination bulb, Rear right window	
	regulator motor	
	29. Rear right door control unit, Rear right door opener illumination bulb, Rear right entry light,	724
	Rear right door warning lamp	
	30. Operating unit for rear right seat adjustment, Rear right door control unit	725
	31. Convenience system central control unit 2, Light conductor for front left sill panel moulding	726
	ambient lighting, Light conductor for rear left sill panel moulding ambient lighting	
	32. Convenience system central control unit 2	727
	33. Convenience system central control unit 2, Front right door ambient lighting bulb	728
	34. Convenience system central control unit 2, Rear left door ambient lighting bulb	729
	35. Convenience system central control unit 2, Rear right door ambient lighting bulb	730
	36. Convenience system central control unit 2, Front left footwell illumination bulb, Front right	731
	footwell illumination bulb	700
	37. Convenience system central control unit 2, Rear left footwell illumination bulb, Rear right footwell illumination bulb	732
		733
	38. Convenience system central control unit 2, Light conductor for front centre console ambient	133
	lighting 39. Convenience system central control unit 2, Light conductor for rear centre console ambient	734
	lighting	7.54
	40. Convenience system central control unit	735
	41. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit	736
	42. Button to close rear lid in luggage compartment, Locking button in rear lid, Rear lid closed	737
	sender 1, Rear lid closed sender 2, Convenience system central control unit, Rear lid control unit,	101
	Motor 1 for rear lid	
	43. Release button for rear lid lock cylinder, Convenience system central control unit, Power	738
	latching control unit, Rear lid central locking motor	
	44. Rear lid power opening sender, Rear lid power opening sender 2, Convenience system central	739
	control unit, Rear lid power opening control unit	
	45. Wiring junction for convenience CAN bus, high, Wiring junction for convenience CAN bus, low	740
	46. Data bus diagnostic interface, Wiring junction for convenience CAN bus, high, Wiring junction	741
	for convenience CAN bus, low	
05	9 - 4.2l diesel engine , CDSB	742-773
	1. 4.2l diesel engine , CDSB	742
	2. Battery, Suppression filter, Battery monitor control unit, Battery isolation igniter, Fuse 2	743
	3. Starter, Alternator	744
	4. Starter motor relay, Terminal 15 voltage supply relay, Starter motor relay 2	745
	5. Fuse holder A	746
	6. Automatic glow period control unit, Glow plug fuse	747
	7. Glow period control unit 2, Glow plug fuse 2	748
	8. Terminal 30 voltage supply relay	749
	9. Enaine/motor control unit	750

	10. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit	751
	11. Air mass meter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4	752
	12. Throttle valve module, Engine/motor control unit, Intake manifold flap motor	753
	13. Engine/motor control unit, Turbocharger 1 control unit, Exhaust gas recirculation control motor	754
	14. Hall sender, Brake servo pressure sensor, Rotational speed sender 1, Pressure sender for exhaust	755
		100
	gas recirculation, Engine/motor control unit	
	15. Engine speed sender, Charge pressure sender, Intake air temperature sender, Pressure	756
		100
	differential sender, Engine/motor control unit	
	16. Engine/motor control unit, Gearbox mounting valve 1, Fuel pressure regulating valve, Fuel	757
		101
	metering valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control,	
	Pump for exhaust gas recirculation cooler	
		758
	17. Oil temperature sender, Coolant temperature sender, Fuel temperature sender, Radiator outlet	100
	coolant temperature sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature	
	sender 1, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Temperature sender for	
	engine temperature regulation, Engine/motor control unit	
	18. Oil pressure switch for reduced oil pressure, Accelerator position sender, Accelerator position	759
		100
	sender 2, Engine/motor control unit	
	19. Brake light switch, Lambda probe, Engine/motor control unit, Lambda probe heater	760
	20. Oil level and oil temperature sender, Engine/motor control unit, Heater element for crankcase	761
	breather, Right electrohydraulic engine mounting solenoid valve, Heater element 2 for crankcase	
	breather, Coolant valve for cylinder head	
	21. Radiator fan control unit, Engine/motor control unit, Radiator fan control unit 2	762
	22. Engine/motor control unit, Engine/motor control unit 2	763
	23. Lambda probe 2, Engine/motor control unit 2, Lambda probe heater 2	764
		765
	24. Oil pressure switch, Engine/motor control unit 2, Injector, cylinder 2, Injector, cylinder 3,	705
	Injector, cylinder 5, Injector, cylinder 8	
	25. Engine/motor control unit 2, Turbocharger 2 control unit, Exhaust gas recirculation control	766
		700
	motor 2	
	26. Throttle valve module 2, Engine/motor control unit 2, Intake manifold flap 2 motor	767
	27. Pressure differential sender 2, Rotational speed sender 2, Pressure sender 2 for exhaust gas	768
	recirculation, Engine/motor control unit 2	
	28. Air mass meter 2, Engine/motor control unit 2, Left electrohydraulic engine mounting solenoid	769
	valve, Gearbox mounting valve 2, Gearbox oil cooling valve	
		770
	29. Exhaust gas temperature sender 1 for bank 2, Exhaust gas temperature sender 3 for bank 2,	770
	Exhaust gas temperature sender 4 for bank 2, Engine/motor control unit 2	
		774
	30. Fuel system pressurisation pump, Fuel pump relay, Fuel pump control unit	771
	31. Fuel gauge, Fuel gauge sender 2, Control unit in dash panel insert	772
	32. Wiring junction for powertrain CAN bus, high, Wiring junction for dash panel insert CAN bus,	773
		115
	high	
060) - 3.0l diesel engine , CMHA,CPNA,CPNB	774-799
000		
	1. 3.0I diesel engine , CMHA,CPNA,CPNB	774
	2. Battery, Suppression filter, Battery monitor control unit, Battery isolation igniter, Fuse 2	775
	3. Starter, Alternator	776
	4. Starter motor relay, Terminal 15 voltage supply relay, Starter motor relay 2	777
	5. Fuse holder A	778
	6. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit, Gearbox oil	779
	cooling valve	
	7. Terminal 30 voltage supply relay	780
	8. Engine/motor control unit	781
	9. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit	782
	10. Air mass meter, Engine/motor control unit, Injector, cylinder 1	783
	11. Charge pressure sender, Intake air temperature sender, Accelerator position sender, Engine/motor	784
	control unit	
		705
	12. Fuel pressure sender, Throttle valve module, Engine/motor control unit	785
	13. Pressure differential sender, Engine/motor control unit, Turbocharger 1 control unit, Exhaust	786
	gas recirculation control motor	
	14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine speed sender, Hall	787
	sender, Coolant temperature sender, Fuel temperature sender, Radiator outlet coolant temperature	-
	conder Engine/meter control unit	
	Sender, Engine/motor control unit	
	sender, Engine/motor control unit 15. Exhaust das recirculation temperature sensor. Exhaust das temperature sender 1. Oil temperature	788
	15. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Oil temperature	788
		788
	15. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit	
	 15. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit 16. Map-controlled engine cooling system thermostat, Engine/motor control unit, Left 	788 789
	15. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit	
	 15. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit 16. Map-controlled engine cooling system thermostat, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Exhaust gas recirculation cooler changeover valve, 	
	 15. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit 16. Map-controlled engine cooling system thermostat, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head 	789
	 15. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit 16. Map-controlled engine cooling system thermostat, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head 17. Brake light switch, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering 	
	 15. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit 16. Map-controlled engine cooling system thermostat, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head 	789

18. Lambda probe, Brake servo pressure sensor, Engine/motor control unit, Lambda probe heater	791
19. Radiator fan control unit, Engine/motor control unit, Radiator fan control unit 2	792
20. Particulate sensor, Control unit for NOx sender, Engine/motor control unit, Control unit for NOx	
sender 2	100
21. Oil level and oil temperature sender, Engine/motor control unit, Control unit for reducing agent	794
	794
metering system, Relay for reducing agent metering system	705
22. Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit	795
2)	
23. Temperature sender for reducing agent, Control unit for reducing agent metering system, Pump	o for 796
reducing agent	
24. Fuel system pressurisation pump, Fuel pump relay, Fuel pump control unit	797
25. Fuel gauge, Fuel gauge sender 2, Control unit in dash panel insert	798
26. Wiring junction for powertrain CAN bus, high, Wiring junction for dash panel insert CAN bus,	799
high	
061 - Tyre Pressure Monitoring System	800-802
1. Tyre Pressure Monitoring System	800
2. Tyre Pressure Monitoring System control unit, Wiring junction for dash panel insert CAN bus, high	ıh 801
3. Front left tyre pressure sensor, Sender unit for Tyre Pressure Monitoring System in front left	802
wheel housing, Tyre Pressure Monitoring System control unit	
062 - High voltage system	803-812
1. High voltage system	803
2. Hybrid battery unit, Fan enabling relay, Air recirculation flap 1 control motor for hybrid	804
	004
battery	005
3. Hybrid battery unit, Hybrid battery, Temperature sensor before evaporator for hybrid battery,	805
Temperature sensor after evaporator for hybrid battery, Refrigerant shut-off valve 1 for hybrid	
battery	
4. Hybrid battery unit, Power and control electronics for electric drive, High-voltage wiring	806
harness for high-voltage battery, Maintenance connector for high-voltage system, Three-phase cur	rent
drive	
5. Drive motor temperature sender, Power and control electronics for electric drive, Three-phase	807
current drive	
6. DC/AC converter for drive motor, Power and control electronics for electric drive, High-voltage	808
wiring harness for drive motor, Three-phase current drive, Electric drive motor	
7. Voltage converter, Power and control electronics for electric drive, Control unit for air	809
conditioning compressor, High-voltage wire for electrical air conditioner compressor, Electrical air	
conditioner compressor	
8. Power and control electronics for electric drive, Data bus diagnostic interface, Wiring junction	810
for powertrain CAN bus, high, Wiring junction for CAN bus extended high	0.0
9. Power and control electronics for electric drive, Engine control unit	811
10. Button for electric drive	812
	813-844
063 - 2.0l petrol engine , CHJA	
1. 2.0I petrol engine , CHJA	813
2. Battery, Battery monitor control unit, Battery isolation igniter	814
3. Starter	815
4. Vehicle starter battery switch-over relay, Fuse 2, Wiring junction	816
5. Second battery, Battery isolation relay, Battery monitor control unit 2, Fuse 2 (30), Wiring	817
junction	
Starter motor relay, Terminal 15 voltage supply relay, Starter motor relay 2	818
7. Fuse holder A	819
8. Main relay, Engine component current supply relay	820
9. Engine/motor control unit	821
10. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit	822
11. Engine/motor control unit, Ignition coil 1 with output stage, Spark plug connector, Spark plugs	823
T. Engine/motor control unit. Ignition coll 1 with output stage. Spark plug connector. Spark plugs	824
	0/4
12. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs	
12. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs 13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4	825
 Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4 Cam adjustment actuator 1, Engine/motor control unit 	825 826
 Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4 Cam adjustment actuator 1, Engine/motor control unit Cam adjustment actuator 7, Engine/motor control unit, Secondary air inlet valve, Continued 	825
 12. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs 13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4 14. Cam adjustment actuator 1, Engine/motor control unit 15. Cam adjustment actuator 7, Engine/motor control unit, Secondary air inlet valve, Continued coolant circulation pump, Gearbox oil cooling pump 	825 826 827
 Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4 Cam adjustment actuator 1, Engine/motor control unit Cam adjustment actuator 7, Engine/motor control unit, Secondary air inlet valve, Continued coolant circulation pump, Gearbox oil cooling pump Secondary air pump relay, Engine/motor control unit, Secondary air pump fuse, Secondary air 	825 826 827
 12. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs 13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4 14. Cam adjustment actuator 1, Engine/motor control unit 15. Cam adjustment actuator 7, Engine/motor control unit, Secondary air inlet valve, Continued coolant circulation pump, Gearbox oil cooling pump 16. Secondary air pump relay, Engine/motor control unit, Secondary air pump fuse, Secondary air motor, Coolant pump for high-temperature circuit 	825 826 827 pump 828
 12. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs 13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4 14. Cam adjustment actuator 1, Engine/motor control unit 15. Cam adjustment actuator 7, Engine/motor control unit, Secondary air inlet valve, Continued coolant circulation pump, Gearbox oil cooling pump 16. Secondary air pump relay, Engine/motor control unit, Secondary air pump fuse, Secondary air motor, Coolant pump for high-temperature circuit 17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Turbocharger air 	825 826 827
 12. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs 13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4 14. Cam adjustment actuator 1, Engine/motor control unit 15. Cam adjustment actuator 7, Engine/motor control unit, Secondary air inlet valve, Continued coolant circulation pump, Gearbox oil cooling pump 16. Secondary air pump relay, Engine/motor control unit, Secondary air pump fuse, Secondary air motor, Coolant pump for high-temperature circuit 17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control 	825 826 827 pump 828 829
 12. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs 13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4 14. Cam adjustment actuator 1, Engine/motor control unit 15. Cam adjustment actuator 7, Engine/motor control unit, Secondary air inlet valve, Continued coolant circulation pump, Gearbox oil cooling pump 16. Secondary air pump relay, Engine/motor control unit, Secondary air pump fuse, Secondary air motor, Coolant pump for high-temperature circuit 17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control 18. Engine/motor control unit, Charge pressure control solenoid valve, Gearbox mounting valve 1, 	825 826 827 pump 828
 12. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs 13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4 14. Cam adjustment actuator 1, Engine/motor control unit 15. Cam adjustment actuator 7, Engine/motor control unit, Secondary air inlet valve, Continued coolant circulation pump, Gearbox oil cooling pump 16. Secondary air pump relay, Engine/motor control unit, Secondary air pump fuse, Secondary air motor, Coolant pump for high-temperature circuit 17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control 18. Engine/motor control unit, Charge pressure control solenoid valve, Gearbox mounting valve 1, Fuel pressure regulating valve, Coolant valve for electric drive 	825 826 827 00000 828 829 830
 12. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs 13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4 14. Cam adjustment actuator 1, Engine/motor control unit 15. Cam adjustment actuator 7, Engine/motor control unit, Secondary air inlet valve, Continued coolant circulation pump, Gearbox oil cooling pump 16. Secondary air pump relay, Engine/motor control unit, Secondary air pump fuse, Secondary air motor, Coolant pump for high-temperature circuit 17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control 18. Engine/motor control unit, Charge pressure control solenoid valve, Gearbox mounting valve 1, Fuel pressure regulating valve, Coolant valve for electric drive 19. Oil pressure switch, Oil pressure switch for reduced oil pressure, Accelerator position sender, 	825 826 827 pump 828 829
 12. Engine/motor control unit, Ignition coil 4 with output stage, Spark plug connector, Spark plugs 13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 4 14. Cam adjustment actuator 1, Engine/motor control unit 15. Cam adjustment actuator 7, Engine/motor control unit, Secondary air inlet valve, Continued coolant circulation pump, Gearbox oil cooling pump 16. Secondary air pump relay, Engine/motor control unit, Secondary air pump fuse, Secondary air motor, Coolant pump for high-temperature circuit 17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control 18. Engine/motor control unit, Charge pressure control solenoid valve, Gearbox mounting valve 1, Fuel pressure regulating valve, Coolant valve for electric drive 	825 826 827 00000 828 829 830

20. Engine speed sender, Charge pressure sender, Hall sender, Engine/motor control unit 21. Knock sensor 1, Fuel pressure sender, Sender 1 for secondary air pressure, Engine/motor control unit	832 833
22. Intake air temperature sender, Coolant temperature sender, Intake manifold flap potentiometer, Pressure sensor for activated charcoal filter system, Engine/motor control unit	834
23. Air mass meter, Brake pedal position sender, Brake servo pressure sensor, Engine/motor control unit	835
24. Brake light switch, Engine/motor control unit	836
25. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit	837
26. Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	838
27. Oil level and oil temperature sender, Vacuum pump relay, Engine/motor control unit, Brake servo vacuum pump	839
28. Radiator fan control unit, Engine/motor control unit, Radiator fan control unit 2	840
29. Fuel system pressurisation pump, Fuel pump relay, Fuel pump control unit, Engine/motor control unit	841
30. Fuel gauge, Fuel gauge sender 2, Fuel gauge sender 3, Control unit in dash panel insert	842
31. Wiring junction for dash panel insert CAN bus, high	843
32. Wiring junction for powertrain CAN bus, high	844