

Contents

00 - Technical data	1
1 Technical data, running gear	1
2 Technical data, brakes	2
3 General notes	3
4 Safety precautions	4
5 Repair notes	5
6 Disposal	6
7 Brake test	7
8 Brake fluid	8
40 - Front suspension	9
1 General notes	9
1.1 General notes	9
1.2 Contact corrosion	10
1.3 Repairing damaged threads in longitudinal member (subframe to body)	10
1.4 Raising suspension to reference position before tightening bolts	10
1.5 Exploded views of front axle	12
2 Subframe, cross brace, subframe heat shield	14
2.1 Exploded view - subframe, cross brace, subframe heat shield	14
2.2 Removing and installing subframe	16
2.3 Removing and installing subframe cross brace	26
2.4 Removing and installing subframe heat shield	27
3 Anti-roll bar, coupling rod	29
3.1 Exploded view - anti-roll bar, coupling rod	29
3.2 Removing and installing anti-roll bar	30
3.3 Removing and installing coupling rod (for anti-roll bar)	32
4 Air spring strut, shock absorber fork, upper links, body brace	34
4.1 Exploded view - air spring strut, shock absorber fork, upper links, body brace	34
4.2 Removing and installing air spring strut	36
4.3 Charging air spring strut	40
4.4 Servicing air spring strut	40
4.5 Removing and installing shock absorber fork	45
4.6 Removing and installing upper suspension link	49
4.7 Removing and installing body brace	53
5 Track control link, swivel joint, guide link, vehicle level sender	56
5.1 Exploded view - track control link, swivel joint, guide link, vehicle level sender	56
5.2 Removing and installing track control link	58
5.3 Removing and installing swivel joint	63
5.4 Removing and installing guide link	64
5.5 Removing and installing vehicle level sender	68
6 Wheel bearing housing, wheel bearing unit	69
6.1 Exploded view - wheel bearing housing, wheel bearing unit	69
6.2 Removing and installing wheel bearing housing	71
6.3 Removing and installing wheel bearing unit	74
7 Drive shaft	77
7.1 General notes	77
7.2 Loosening and tightening bolt securing drive shaft to wheel hub	77
7.3 Removing and installing drive shaft	78
7.4 Exploded view - drive shaft	82
7.5 Renewing encoder ring	84
7.6 Dismantling and assembling triple roller joint AAR 3700 i	86



7.7	Servicing outer constant velocity joint	93
7.8	Checking outer constant velocity joint	94
7.9	Tightening large and small clips on triple roller joint and outer joint	95
42	Rear suspension	98
1	General notes	98
1.1	General notes	98
1.2	Contact corrosion	99
1.3	Repairing damaged threads in longitudinal member (subframe to body)	99
1.4	Raising suspension to reference position before tightening bolts	99
1.5	Rear axle - overview	102
2	Subframe	103
2.1	Exploded view - subframe, four-wheel drive vehicles	103
2.2	Fixing position of subframe	104
2.3	Removing and installing subframe with attachments (four-wheel drive vehicles)	106
2.4	Renewing hydraulic bonded rubber bush (front) for subframe (four-wheel drive vehicles)	111
2.5	Renewing hydraulic bonded rubber bush (rear) for subframe (four-wheel drive vehicles)	119
2.6	Renewing bonded rubber bush (front) for rear final drive (four-wheel drive vehicles)	126
2.7	Renewing bonded rubber bushes (rear) for rear final drive (four-wheel drive vehicles)	133
3	Anti-roll bar, coupling rod	138
3.1	Exploded view - anti-roll bar, coupling rod	138
3.2	Removing and installing anti-roll bar	138
3.3	Removing and installing coupling rod	140
4	Upper transverse link, track rod, lower transverse link, vehicle level sender	142
4.1	Exploded view - upper transverse link, track rod, lower transverse link, vehicle level sender	142
4.2	Removing and installing lower transverse link	144
4.3	Removing and installing upper transverse link	148
4.4	Removing and installing track rod	150
5	Wheel bearing housing, wheel bearing unit (four-wheel drive vehicles)	153
5.1	Exploded view - wheel bearing housing, wheel bearing unit (four-wheel drive vehicles)	153
5.2	Removing and installing wheel bearing housing, four-wheel drive vehicles	154
5.3	Removing and installing wheel bearing unit - four-wheel drive vehicles	158
5.4	Renewing bonded rubber bush for wheel bearing housing - four-wheel drive vehicles	160
6	Air spring strut	165
6.1	Exploded view - air spring strut	165
6.2	Removing and installing air spring strut	166
6.3	Charging air spring strut	171
6.4	Servicing air spring strut	173
7	Drive shaft	179
7.1	General notes	179
7.2	Loosening and tightening bolt securing drive shaft to wheel hub	179
7.3	Removing and installing drive shaft	180
7.4	Exploded view - drive shaft	181
7.5	Renewing encoder ring	184
7.6	Renewing outer constant velocity joint	186
7.7	Renewing inner constant velocity joint	189
7.8	Checking outer constant velocity joint	194
7.9	Checking inner constant velocity joint	195
43	Self-levelling suspension	197
1	Servicing self-levelling suspension (adaptive suspension)	197
1.1	Electrical/electronic components - overview and fitting locations	197

1.2	Removing and installing front vehicle level senders	198
1.3	Removing and installing rear vehicle level sender	198
1.4	Removing and installing adaptive suspension control unit J197	200
1.5	Re-adapting reference position with vehicle diagnostic tester	200
1.6	Bleeding or charging system	200
2	Self-levelling suspension (adaptive air suspension)	201
44	Wheels, tyres, vehicle geometry	202
1	General information on wheels and tyres	202
2	Tyre Pressure Monitoring System	203
2.1	General notes	203
2.2	Overview - Tyre Pressure Monitoring System	203
2.3	Exploded view - tyre pressure sensor	205
2.4	Removing and installing Tyre Pressure Monitoring System control unit J502	205
2.5	Operation of Tyre Pressure Monitoring System	206
2.6	Changing a tyre	207
2.7	Removing and installing metal valve body	208
3	Wheel alignment	209
3.1	General information on wheel alignment	209
3.2	Wheel alignment must be checked:	209
3.3	Explanatory notes on production control numbers (PR nos.)	209
3.4	Test requirements for wheel alignment	209
3.5	Preparations required before calibration/adjustment of driver assist systems	209
3.6	Preparations for measurement	209
3.7	Wheel runout compensation	210
3.8	Checking centre position of steering rack	210
3.9	Checking full steering lock	210
3.10	Setting vehicle to reference position for wheel alignment	210
3.11	Sequence of operations for checking and adjusting wheel alignment	210
3.12	Wheel alignment specifications	210
3.13	Centralising camber at front wheels	211
3.14	Adjusting camber at rear wheels	216
3.15	Adjusting toe setting at rear wheels	216
3.16	Adjusting toe setting at front wheels	217
4	Dynamic steering	218
5	Adaptive cruise control (ACC)	219
6	Lane departure warning (Audi lane assist)	220
7	Night vision system	221
45	Anti-lock brake system	222
1	General information on the anti-lock brake system	222
2	Connecting VAS 505 x and selecting functions	223
3	Brake system warning lamps	224
4	Hold assist function	225
5	Electronic stabilisation program	226
6	Exploded view - speed sensors of ABS/ESP system	227
7	Removing and installing parts of ESP system	228
46	Brakes - mechanism	229
1	Front brakes	229
1.1	Servicing front brakes	229
1.2	Removing and installing front brake pads	231
1.3	Removing and installing brake pad wear indicator	238

1.4	Removing and installing brake caliper	239
1.5	Renewing brake caliper	243
1.6	Removing and installing brake disc	247
1.7	Removing and installing front splash plate	252
2	Rear brakes (electromechanical parking brake)	254
2.1	Servicing rear brakes	254
2.2	Removing and installing rear brake pads	256
2.3	Removing and installing pad wear indicator wire	263
2.4	Removing and installing brake caliper with brake carrier	263
2.5	Renewing rear brake caliper	267
2.6	Removing and installing rear brake disc	272
2.7	Removing and installing rear splash plate	276
3	Exploded view - brake pedal mounting bracket (left-hand drive)	279
4	Overview - electromechanical parking brake	280
4.1	Removing and installing actuator motor for electromechanical parking brake	280
47 - Brakes - hydraulics		285
1	Pressurised leak testing	285
2	Brembo brake calipers (19")	286
2.1	Exploded view - Brembo brake caliper (19")	286
2.2	Removing and installing front brake caliper pistons	287
3	Rear brake caliper with electromechanical parking brake	290
3.1	Servicing brake caliper	290
3.2	Removing and installing rear brake caliper piston	291
4	Bleeding brake system	296
5	Brake servo / brake master cylinder	297
5.1	Exploded view - brake servo / brake master cylinder	297
5.2	Removing and installing cover for brake fluid reservoir	298
5.3	Removing and installing brake fluid reservoir	302
5.4	Removing and installing brake master cylinder	306
5.5	Removing and installing brake servo	311
5.6	Adjusting ball head on brake servo	317
6	Electric vacuum pump for brakes V192	318
6.1	Exploded view - vacuum pump for brakes V192	318
6.2	Removing and installing vacuum pump for brakes V192	319
6.3	Checking vacuum pump for brakes V192	320
6.4	Removing and installing brake servo pressure sensor G294	321
6.5	Checking non-return valve	321
6.6	Removing and installing non-return valve	322
7	Brake hoses and brake lines	323
8	Repairing brake lines	324
48 - Steering		325
1	Airbag steering wheel	325
2	Steering column	326
3	Power steering rack	327
3.1	Exploded view - power steering rack	327
3.2	Servicing power steering rack	328
3.3	Removing and installing power steering rack	328
3.4	Centralising steering	333
3.5	Adjusting power steering rack	333
3.6	Removing and installing servotronic solenoid valve N119	333
3.7	Removing and installing track rod ball joint	333
3.8	Removing and installing track rod	333

3.9	Removing and installing boot	334
4	Checking fluid level, bleeding steering system and checking for leaks	335
5	Power steering pump, hydraulic pipes and hoses, fluid reservoir - vehicles with 8-cylinder engine	336
6	Power steering pump, hydraulic pipes and hoses, fluid reservoir - vehicles with 12-cylinder engine	337
7	Removing and installing hydraulic fluid cooler	338