

## Contents

<b>1</b>	<b>General information</b>	<b>1</b>
1.1	--- Change history ---	1
1.2	General notes on Maintenance Manuals	1
1.3	Cleaning engine	2
1.4	Engine number	2
1.5	Vehicle identification number	3
1.6	Vehicle data sticker	4
1.7	Warnings for high-voltage vehicles	5
<b>2</b>	<b>Preparations</b>	<b>11</b>
2.1	Vehicle: raising	11
2.2	Engine cover panel: removing and installing	13
2.3	Noise insulation: removing and installing	15
2.4	Window regulators: activating automatic open/close function	16
2.5	Vehicle diagnostic tester: connecting	17
<b>3</b>	<b>Maintenance</b>	<b>19</b>
3.1	Diesel particulate filter: reading out ash deposit volume	23
3.2	Protective display films: removing if present	24
3.3	Event memory: reading out	24
3.4	Service interval display: resetting service event	24
3.5	Diagnostic work: performing	25
3.6	Emergency battery: reading out status	25
3.7	Battery: checking electrolyte level	26
3.8	CO2 air conditioning system: inspecting protective film for pressure relief valve	28
3.9	Air quality package: renewing fragrance vials	29
3.10	Brake pads: checking thickness	29
3.11	Tyres: checking condition, age and wear pattern, and checking and recording tread depth	30
3.12	Tyres: checking tyre pressures and adjusting if necessary	32
3.13	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	33
3.14	Vehicle identification numbers: checking numbers match and are embossed properly	34
3.15	Swerve assist and turn-off assist: activating in MMI	34
3.16	Tyre Pressure Loss Indicator: storing changed tyre pressures	35
3.17	Tyre repair kit: checking that set is complete, and checking and recording expiry date	35
3.18	Wheel bolts: tightening to specified torque	36
3.19	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	36
3.20	Engine, gearbox, final drive and steering: checking for leaks and damage	39
3.21	Vehicle (from below): checking for damage	39
3.22	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	40
3.23	Roof insert for panoramic sliding sunroof: checking operation	40
3.24	Door hinges with separate door arrester: cleaning and lubricating	40
3.25	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	42
3.26	Wiper blades: checking for damage	44
3.27	Headlight washer system: checking operation	45
3.28	Headlights: checking for correct adjustment	45
3.29	Headlights and reversing lights, brake lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	47
3.30	Luggage compartment lighting: checking operation	48
3.31	Glove compartment light, interior lighting and reading light: checking operation	48
3.32	Horn: checking operation	49
3.33	Wi-Fi hotspot: activating in MMI	49
3.34	Seat belts: checking retainers for latch plate and belt buckle, and checking locking action of automatic belt retractor	49

3.35	Vehicle interior: removing protective film (if present) and protective covers for seats . . . . .	50
3.36	Vehicle interior: checking that it is clean and cleaning if necessary . . . . .	50
3.37	Vehicle interior: removing any objects other than those protecting interior surfaces . . . . .	50
3.38	Vehicle interior and exterior: checking for and documenting any damage . . . . .	50
3.39	Instrument cluster: checking warning lamps . . . . .	51
3.40	Warning triangle: checking availability . . . . .	51
3.41	Seal on coolant expansion tank for high-voltage system: checking seal is present . . . . .	51
3.42	First-aid kit: checking and recording expiry date . . . . .	51
3.43	Plenum chamber and water drains: checking for dirt and cleaning if necessary . . . . .	52
3.44	Connectivity box: checking emergency battery, telematics . . . . .	53
3.45	Brake fluid: changing . . . . .	53
3.46	Engine oil: draining . . . . .	59
3.47	Engine oil: extracting . . . . .	60
3.48	Engine oil: renewing oil filter . . . . .	61
3.49	Engine oil: filling up . . . . .	65
3.50	Engine oil: checking oil level and correcting if necessary . . . . .	66
3.51	Spark plugs: renewing . . . . .	67
3.52	Coolant level: checking (coolant level must reach at least top marking on coolant expansion tank) . . . . .	76
3.53	Cooling system for high-voltage system: checking anti-freeze protection and coolant level, and correcting if necessary . . . . .	79
3.54	Air filter: renewing filter element and cleaning housing . . . . .	83
3.55	Readiness for sending and receiving information: establishing . . . . .	88
3.56	Service disconnect: checking for dirt and damage . . . . .	89
3.57	Dust and pollen filter: renewing . . . . .	89
3.58	Water separator (fuel filter): draining . . . . .	90
3.59	Fuel filter: renewing . . . . .	91
3.60	Filter (water separator): renewing . . . . .	92
3.61	Fuel tank: adding fuel additive . . . . .	94
3.62	Reducing agent (AdBlue®): filling up tank completely . . . . .	95
3.63	Vehicle doors: removing edge protection . . . . .	99
3.64	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary . . . . .	99
3.65	Vehicle exterior: removing protective film, if present . . . . .	99
3.66	Vehicle cover: checking position and correcting if necessary . . . . .	100
3.67	Vehicle cover: removing according to manufacturer's instructions . . . . .	100
3.68	Paintwork, trims, side windows and wiper blades: checking cleanliness . . . . .	100
3.69	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open . . . . .	100
3.70	Brake discs: checking for surface rust and operating brakes to clean if necessary . . . . .	100
3.71	Emergency flare: fitted so it is visible from driver's seat or driver's entrance . . . . .	101
3.72	Parking brake: releasing . . . . .	101
3.73	Static event memory: working through . . . . .	101
3.74	Transport mode: deactivating . . . . .	102
3.75	Transport mode: checking activation and activating if necessary . . . . .	102
3.76	Shipping mode: deactivating . . . . .	103
3.77	High-voltage battery: charging . . . . .	103
3.78	High-voltage battery on electric vehicles and hybrid vehicles: determining and recording state of charge (SOC) . . . . .	104
3.79	High-voltage battery on electric vehicles and hybrid vehicles: charging to a state of charge (SOC) of 3/4 according to manufacturer's instructions . . . . .	104
3.80	High-voltage battery: checking state of charge (recommendation: approx. 80% when delivering to customer) . . . . .	104
3.81	Battery: reading out status . . . . .	104
3.82	Vehicle diagnosis: completing . . . . .	105
3.83	Battery: connecting stationary battery charger (min. 30A, charging voltage max. 14.8 V on IV characteristic curve) (not as permanent power supply!) . . . . .	105
3.84	Battery: determining and recording state of charge (SOC) . . . . .	107

3.85	Mirror hanger indicating defective battery: renewing battery on affected vehicles	109
3.86	ECE towing bracket: checking (if fitted)	110
3.87	Brake fluid (vehicles older than 12 months): changing	110
3.88	Brake fluid: checking fluid level	110
3.89	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	111
3.90	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	111
3.91	ERA-GLONASS: checking emergency call function	113
3.92	Vehicles parked outdoors: locking	114
3.93	Poly V-belt for ancillaries: renewing	114
3.94	Emergency call function: checking status LED (must be green before delivery to customer)	114
3.95	Road test	115
3.96	Stock vehicles: observing measures specified in maintenance table for stock vehicles (see "Before handing vehicle over to customer")	115
3.97	Charging cable: checking that cable is present and complete	116
3.98	Charging system: checking that system is present and complete	116
3.99	Charging socket: checking for dirt and damage	116
3.100	Accessories: installing	117
3.101	Certificate of conformity (COC): checking COC is present in vehicle	117
3.102	Checklist "Documentation of cleaning and care routine": checking that list is present	117
3.103	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet	118
3.104	Cleaning and care: checking that required measures have been carried out on time	118
3.105	Stock vehicle care management: deciding and recording date of next check	118
3.106	Display instruments: setting time and date	118
3.107	Automatic gearbox: engaging "park"	118
3.108	Interior mirror: calibrating compass	118
3.109	Instrument cluster: resetting driver information system	118
3.110	Cushions for outer head restraints in seat row 2: securing	119
3.111	Vehicle keys: checking operation and recording number of keys given to customer	119
3.112	Luggage compartment: removing protective film and felt pieces	119
3.113	Owner's literature: checking that all documents are present	119
3.114	Passenger airbag: checking key switch on/off and setting to "on"	120
3.115	Owner's Manual: attaching vehicle data sticker	120
3.116	Service Schedule: affixing vehicle data sticker	121
3.117	Service Schedule: entering Delivery Inspection	121
3.118	Vehicle key: removing from ignition lock	121
3.119	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	121
3.120	Sun visors: checking that they are folded up and folding up if necessary	122
3.121	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	122
<b>4</b>	<b>Exhaust emissions test</b>	<b>123</b>
4.1	Petrol engines: performing exhaust emissions test	123
4.2	Diesel engines: performing exhaust emissions test - up to EU5	131
4.3	Diesel engines: performing exhaust emissions test - from EU6 onwards	140
<b>5</b>	<b>Periodic technical inspection (PTI)</b>	<b>142</b>