

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
<b>2 Repair instructions</b>	<b>4</b>
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	4
2.4 Routing and attachment of lines and wiring	5
2.5 Identification plates	5
2.6 Use of impact wrenches	5
<b>98 - Assist systems</b>	<b>7</b>
<b>1 Safety information</b>	<b>7</b>
<b>2 Fitting locations</b>	<b>8</b>
2.1 Overview of fitting locations - senders, sensors and control units in front section of vehicle	8
2.2 Overview of fitting locations - senders, sensors and control units in centre section of vehicle	10
2.3 Overview of fitting locations - senders, sensors and control units in rear section of vehicle	12
<b>3 Senders/sensors/control units</b>	<b>16</b>
3.1 Removing and installing rear parking aid sender G203/G204/G205/G206	17
3.2 Removing and installing front parking aid sender G252/G253/G254/G255	18
3.3 Removing and installing front park assist steering sender G568/G569	19
3.4 Removing and installing rear park assist steering sender G716/G717	20
3.5 Removing and installing rear parking aid warning buzzer H15	20
3.6 Removing and installing front parking aid warning buzzer H22	22
3.7 Assembly overview - adaptive cruise control unit	22
3.8 Removing and installing adaptive cruise control unit J428	24
3.9 Removing and installing reversing camera system control unit J772	28
3.10 Assembly overview - lane change assist control unit	28
3.11 Removing and installing lane change assist control unit J769/J770	30
3.12 Removing and installing control unit for night vision system J853	31
3.13 Assembly overview - front radar sensor control unit for object detection	32
3.14 Removing and installing front radar sensor control unit for object detection J1088/J1089	34
3.15 Assembly overview - driver assist systems control unit	35
3.16 Removing and installing driver assist systems control unit J1121	36
3.17 Assembly overview - control unit for laser distance control	38
3.18 Removing and installing control unit for laser distance control J1122	40
3.19 Removing and installing lane change assist warning lamp in exterior mirror K233/K234	43
3.20 Removing and installing reversing camera R189	43
3.21 Assembly overview - camera for night vision system	44
3.22 Removing and installing camera for night vision system R212	45
3.23 Assembly overview - front camera for driver assist systems	47
3.24 Removing and installing front camera for driver assist systems R242	48
3.25 Removing and installing front overhead view camera R243	51
3.26 Removing and installing right/left overhead view camera R244/R245	52
3.27 Removing and installing rear overhead view camera R246	53
<b>4 Adaptive cruise control</b>	<b>55</b>
4.1 Layout - adaptive cruise control	55
4.2 Adjusting adaptive cruise control	55



<b>5</b>	<b>Parking aid/park assist steering/autonomous parking</b> .....	<b>68</b>
5.1	Layout - parking aid/park assist steering/autonomous parking .....	68
<b>6</b>	<b>Lane change assist</b> .....	<b>69</b>
6.1	Layout - lane change assist .....	69
6.2	Calibrating lane change assist .....	69
<b>7</b>	<b>Front corner radar</b> .....	<b>80</b>
7.1	Layout - front corner radar .....	80
7.2	Calibrating front corner radar .....	80
<b>8</b>	<b>Reversing camera system</b> .....	<b>88</b>
8.1	Layout - reversing camera system .....	88
8.2	Calibrating reversing camera system .....	88
<b>9</b>	<b>Night vision system</b> .....	<b>95</b>
9.1	Layout - night vision system .....	95
9.2	Calibrating night vision system .....	95
<b>10</b>	<b>Overhead view camera</b> .....	<b>104</b>
10.1	Layout - overhead view camera .....	104
10.2	Calibrating overhead view camera .....	104
<b>11</b>	<b>Front camera for driver assist systems</b> .....	<b>108</b>
11.1	Layout - front camera for driver assist systems .....	108
11.2	Calibrating front camera for driver assist systems .....	108