

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
1.5 Notes on use and safety for LED headlights and Audi laser lights	3
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	4
2.4 ESD (electrostatic discharge) workplace	5
2.5 Routing and attachment of pipes, hoses and wiring	5
2.6 Identification plates	5
2.7 Use of impact wrenches	6
2.8 Cleaning engine	6
3 Battery	7
3.1 Battery - general notes	7
3.2 Battery types	7
27 - Starter, current supply, CCS	8
1 Safety information	8
2 Battery	9
2.1 Assembly overview - battery	9
2.2 Disconnecting and connecting battery	15
2.3 Removing and installing earth cable with battery monitor control unit J367	19
2.4 Removing and installing battery	21
2.5 Removing and installing protective housing for battery, 48 V A6	29
2.6 Removing and installing battery fan V457 / V458	31
2.7 Inspecting and classifying battery, 48 V A6	32
2.8 Charging battery	33
2.9 Removing and installing battery cut-off relay/battery isolation igniter	34
3 Voltage converter	35
3.1 Assembly overview - voltage converter	35
3.2 Removing and installing voltage converter (48 V/12 V) A7	35
4 Jump-start connection point	37
4.1 Assembly overview - jump-start connection point	37
5 Alternator	38
5.1 Assembly overview - alternator	38
5.2 Removing and installing alternator	45
5.3 Checking alternator	58
6 Starter	59
6.1 Assembly overview - starter	59
6.2 Removing and installing starter	60
7 Adaptive cruise control	67
90 - Gauges, instruments	68
1 Safety information	68
2 Dash panel insert	69
2.1 Assembly overview - dash panel insert	69
2.2 Assembly overview - head-up display	69



2.3	Removing and installing dash panel insert with control unit in dash panel insert J285	71
2.4	Removing and installing control unit for head-up display	73
3	Horn	75
3.1	Assembly overview - horn	75
3.2	Removing and installing treble horn H2 / bass horn H7	76
92	Windscreen wash/wipe system	78
1	Safety information	78
2	Windscreen wiper system	79
2.1	Overview of fitting locations - windscreen wiper system	79
2.2	Assembly overview - windscreen wiper system	81
2.3	Moving wipers to service position	83
2.4	Removing and installing wiper blade	84
2.5	Removing and installing wiper arms	85
2.6	Adjusting wiper arms	88
2.7	Removing and installing wiper motor V	89
2.8	Removing and installing rain and light sensor	91
3	Windscreen washer system	96
3.1	Assembly overview - windscreen washer system	96
3.2	Removing and installing washer fluid reservoir	100
3.3	Removing and installing windscreen washer fluid level sender	101
3.4	Removing and installing washer pump	101
3.5	Removing and installing windscreen washer pump control unit J1100	102
3.6	Removing and installing washer jets	102
3.7	Adjusting washer jets	102
4	Headlight washer system	104
4.1	Assembly overview - headlight washer system	104
4.2	Removing and installing headlight washer system pump V11	106
4.3	Removing and installing rear window washer pump V13	107
4.4	Removing and installing washer jets	108
5	Washer fluid hoses	111
94	Lights, bulbs, switches - exterior	112
1	Safety information	112
2	Headlights	113
2.1	Assembly overview - headlight	113
2.2	Removing and installing headlights	122
2.3	Adjusting headlights	125
2.4	Removing and installing LED module for daytime running light and side light L176 / L177	163
2.5	Removing and installing output module for headlight	165
2.6	Removing and installing control unit for projection modules in matrix headlights J1231 - from product upgrade onwards	169
2.7	Removing and installing light control unit J1018 / J1023 - before product upgrade	171
2.8	Removing and installing headlight fan	172
2.9	Installing repair kit for headlight housing	173
2.10	Adapting headlights for driving on the left side of the road	174
2.11	Adapting headlights for driving on the right side of the road	175
3	Daytime running lights	176
3.1	Assembly overview - signature lighting	176
3.2	Removing and installing signature lighting	176
3.3	Removing and installing light for signature lighting L275 / L276	177
4	Lights in exterior mirror	178
4.1	Assembly overview - lights in exterior mirror	178
4.2	Removing and installing turn signal	178

5	Lights in exterior door handle	180
5.1	Assembly overview - lights in exterior door handle	180
5.2	Removing and installing exterior door handle illumination bulb	180
6	Lights in sill panel moulding	182
6.1	Assembly overview - entry light	182
7	Tail light clusters	185
7.1	Assembly overview - tail light cluster on body	185
7.2	Assembly overview - tail light cluster on rear lid	186
7.3	Removing and installing tail light cluster	188
7.4	Removing and installing tail light cluster on rear lid	189
7.5	Correcting installation position of tail light cluster	191
8	High-level brake light	194
8.1	Assembly overview - high-level brake light	194
8.2	Removing and installing high-level brake light bulb	194
9	Entry and start authorisation	196
9.1	Overview of fitting locations - entry and start authorisation system	196
9.2	Overview of fitting locations - keyless entry system	197
9.3	Assembly overview - exterior door handle for keyless entry system	199
9.4	Removing and installing front exterior door handle switches	201
9.5	Removing and installing rear exterior door handle switches	201
9.6	Removing and installing interior aerial 1 for entry and start system R138	202
9.7	Removing and installing front aerial for entry and start authorisation R376	202
9.8	Removing and installing luggage compartment aerial for entry and start system R137	203
9.9	Removing and installing aerial for entry and start authorisation R200 / R201	203
9.10	Removing and installing near field communication control unit 2 J1170	203
9.11	Alcohol interlock	203
10	Steering column switch module	214
10.1	Assembly overview - steering column switch module	214
10.2	Removing and installing steering column switch module	214
11	Parking aid	216
12	Park assist steering	217
96	Lights, bulbs, switches - interior	218
1	Safety information	218
2	Lights	220
2.1	Overview of fitting locations - lights in dash panel	221
2.2	Overview of fitting locations - lights in front doors	223
2.3	Overview of fitting locations - lights in rear doors	225
2.4	Overview of fitting locations - background lighting in doors	227
2.5	Overview of fitting locations - lights in centre console	232
2.6	Overview of fitting locations - lights in luggage compartment	235
2.7	Overview of fitting locations - lights in roof trim	235
2.8	Removing and installing glove compartment light W6	237
2.9	Removing and installing front footwell illumination bulb L151 / L152	237
2.10	Removing and installing central locking SAFELOCK function warning lamp K133	238
2.11	Removing and installing light for front interior door handle illumination L219 / L220	238
2.12	Removing and installing front entry light W92 / W93	239
2.13	Removing and installing light for rear interior door handle illumination L221 / L222	239
2.14	Removing and installing rear entry light W83 / W84	239
2.15	Removing and installing bulb for dash panel background lighting	240
2.16	Removing and installing front door background lighting bulb	242
2.17	Removing and installing front door storage compartment illumination bulb	244
2.18	Removing and installing light for door loudspeaker trim L223 / L224	245
2.19	Removing and installing rear door background lighting bulb	246



2.20	Removing and installing light for rear door storage compartment illumination	249
2.21	Removing and installing light for rear door loudspeaker trim L225 / L226	250
2.22	Removing and installing light for centre console background lighting	250
2.23	Removing and installing selector lever position display Y5	252
2.24	Removing and installing storage compartment illumination bulb in rear centre console L159	252
2.25	Removing and installing right centre armrest illumination bulb L228	253
2.26	Removing and installing rear left footwell light W45 / rear right footwell light W46	254
2.27	Removing and installing luggage compartment light	255
2.28	Removing and installing illuminated vanity mirror W20 / W14	256
3	Controls	258
3.1	Overview of fitting locations - controls in dash panel	259
3.2	Overview of fitting locations - controls in front doors	261
3.3	Overview of fitting locations - controls in rear doors	263
3.4	Overview of fitting locations - controls in centre console	265
3.5	Overview of fitting locations - controls in luggage compartment	268
3.6	Overview of fitting locations - controls in roof trim	268
3.7	Assembly overview - front interior light	269
3.8	Removing and installing light switch E1	271
3.9	Removing and installing steering column adjustment switch E167	271
3.10	Removing and installing buttons/switches in dash panel	272
3.11	Removing and installing valet parking button E536	275
3.12	Removing and installing glove compartment light switch E26	275
3.13	Removing and installing exterior mirror adjuster EX11	276
3.14	Removing and installing operating unit for window regulator in driver door EX36	276
3.15	Removing and installing window regulator switch in front passenger door EX27	276
3.16	Removing and installing interior locking button for central locking system E308 / E309	276
3.17	Removing and installing operating unit for memory settings E464 / E465	277
3.18	Removing and installing rear lid remote release button E233	277
3.19	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	278
3.20	Removing and installing operating unit in rear door EX60 / EX61	278
3.21	Removing and installing rear interior locking switch E273 / E274	278
3.22	Removing and installing operating unit for rear memory settings E935 / E939	279
3.23	Removing and installing electromechanical parking brake button E540 / auto hold button E538	280
3.24	Removing and installing entry and start authorisation button E408	280
3.25	Removing and installing operating and display unit for air conditioning system E778 / E884	281
3.26	Removing and installing buttons for rear seat heating E737 / E738	281
3.27	Removing and installing button for electric swivelling towing bracket E474	282
3.28	Removing and installing rear lid handle release button E234	282
3.29	Removing and installing operating unit for rear lid control EX58	283
3.30	Removing and installing sunroof button E325	283
3.31	Removing and installing front interior light/reading light	284
3.32	Dismantling and assembling front interior light/reading light	285
3.33	Removing and installing rear vanity mirror	288
3.34	Removing and installing rear interior light/reading light	289
4	Anti-theft alarm system	290
4.1	Assembly overview - interior monitoring	290
4.2	Removing and installing alarm horn H12	291
4.3	Removing and installing anti-theft alarm sensor G578	292
5	Lane change assist	294
6	Front camera for driver assist systems	295
7	Towing bracket	296
7.1	Trailer socket	296

8	Cigarette lighter, socket	297
8.1	Assembly overview - cigarette lighter, 12 V socket	297
8.2	Removing and installing 12 V socket U5	299
8.3	Removing and installing cigarette lighter illumination bulb L28	300
8.4	Removing and installing socket illumination bulb L42	301
8.5	Removing and installing rear cigarette lighter U9 / 12 V socket 4 U20	301
8.6	Removing and installing 12 V socket 3 U19	302
8.7	Renewing 12 V socket 3 U19	303
8.8	Removing and installing AC/DC converter with socket, 12 V - 230 V U13	304
97	- Wiring	305
1	Safety information	305
2	Relay carriers, fuse carriers, electronics boxes	306
2.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	306
2.2	Assembly overview - main fuse carrier	312
2.3	Removing and installing relay and fuse carrier (front left)	314
2.4	Removing and installing coupling point on right A-pillar, bottom TARU	316
2.5	Removing and installing suppression capacitor C24	317
2.6	Removing and installing wiring junction	317
2.7	Removing and installing fuse holder F SF	322
2.8	Removing and installing relay and fuse holders in luggage compartment (left-side)	323
2.9	Removing and installing main fuse carrier on battery	325
3	Control units	328
3.1	Overview of fitting locations - control units	328
3.2	Assembly overview - data bus diagnostic interface	329
3.3	Removing and installing onboard supply control unit J519	331
3.4	Removing and installing garage door operation control unit	334
3.5	Removing and installing data bus diagnostic interface J533	334
4	Connectors	336
4.1	Overview of fitting locations - connectors	336
4.2	Unplugging door coupling point	337
4.3	Repairing electrical wiring harnesses and electrical connectors	337
5	Releasing and dismantling connector housings	338
6	Cleaning contact surfaces	339
7	Repairing aerial wires	340
8	Fibre optic cables	341
9	Vehicle diagnostic, testing and information systems	342