

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
<b>2 Repair instructions</b>	<b>4</b>
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	5
2.4 ESD (electrostatic discharge) workplace	5
2.5 Routing and attachment of pipes, hoses and wiring	5
2.6 Identification plates	5
2.7 Use of impact wrenches	6
<b>91 - Communication</b>	<b>7</b>
<b>1 Safety information</b>	<b>7</b>
<b>2 Infotainment system</b>	<b>8</b>
2.1 Layout - infotainment system	8
2.2 Overview of fitting locations - infotainment system	17
2.3 Removing and installing infotainment system display	18
2.4 Removing and installing control unit 1 for information electronics J794	20
2.5 Removing and installing driver side volume regulator E67	23
2.6 Removing and installing additional display and operating unit 1 E857	24
2.7 Removing and installing wireless operating unit 1 E859	25
<b>3 Sound system</b>	<b>27</b>
3.1 Layout - sound system	27
3.2 Overview of fitting locations - sound system	43
3.3 Overview of fitting locations - ANC microphones	51
3.4 Removing and installing digital sound package control unit/amplifier	51
3.5 Removing and installing rear treble loudspeakers R14 / R16	56
3.6 Removing and installing rear treble loudspeakers 2 R217 / R218	57
3.7 Removing and installing front treble loudspeakers R20 / R22	57
3.8 Removing and installing front treble loudspeakers 2 R220 / R221	58
3.9 Removing and installing rear mid-range loudspeakers R105 / R106	59
3.10 Removing and installing rear mid-range loudspeakers 2 R341 / R340	59
3.11 Removing and installing front mid-range loudspeakers R103 / R104	60
3.12 Removing and installing front mid-range loudspeakers 2 R276 / R277	60
3.13 Removing and installing rear bass loudspeakers R15 / R17	61
3.14 Removing and installing front bass loudspeakers R21 / R23	62
3.15 Removing and installing subwoofer R211	63
3.16 Removing and installing effect loudspeakers	64
3.17 Removing and installing centre loudspeaker R208	65
3.18 Removing and installing centre loudspeaker 2 R219	65
3.19 Removing and installing internal microphone R74	66
3.20 Removing and installing ANC microphones	66
<b>4 Aerial systems</b>	<b>68</b>
4.1 Layout - aerial systems	68
4.2 Overview of fitting locations - aerial systems	71
4.3 Removing and installing aerial amplifier	75
4.4 Removing and installing window aerial suppression filter C18	75
4.5 Removing and installing roof aerial	76

4.6	Removing and installing GPS aerial .....	77
4.7	Removing and installing LTE aerials .....	77
4.8	Removing and installing satellite tuner aerial R172 .....	78
4.9	Removing and installing digital radio aerial R183 .....	78
4.10	Removing and installing emergency call module aerials .....	79
4.11	Removing and installing bumper aerials .....	80
4.12	Removing and installing traffic data aerial .....	82
4.13	Removing and installing dedicated short-range communication aerial R269 .....	83
4.14	Removing and installing internal vehicle communication aerial R364 .....	84
4.15	Removing and installing wireless data transfer aerial R336 .....	84
4.16	Removing and installing wireless data transfer aerial 2 R366 .....	85
4.17	Removing and installing near field communication aerial R350 .....	85
4.18	Removing and installing near field communication aerial 2 R351 .....	85
4.19	Removing and installing near field communication control unit 2 J1170 .....	86
4.20	Removing and installing roof aerial control unit JX3 .....	86
<b>5</b>	<b>Radio .....</b>	<b>87</b>
5.1	Layout - radio .....	87
5.2	Overview of fitting locations - radio .....	87
5.3	Removing and installing radio .....	87
5.4	Removing and installing digital radio/satellite radio .....	87
<b>6</b>	<b>DVD/CD changer .....</b>	<b>88</b>
6.1	Removing and installing DVD player R7 .....	88
6.2	Removing and installing DVD changer .....	89
<b>7</b>	<b>Telephone system .....</b>	<b>91</b>
7.1	Layout - telephone .....	91
7.2	Overview of fitting locations - telephone system .....	112
7.3	Assembly overview - microphone unit .....	115
7.4	Removing and installing front microphone R140 / R141 .....	117
7.5	Removing and installing aerial amplifier for mobile telephone R86 .....	118
7.6	Removing and installing aerial amplifier 2 for mobile telephone R328 .....	118
7.7	Removing and installing telephone bracket .....	119
<b>8</b>	<b>Navigation system .....</b>	<b>122</b>
8.1	Layout - navigation system .....	122
8.2	Overview of fitting locations - navigation system .....	122
8.3	Removing and installing control unit for navigation system .....	122
8.4	Removing and installing chip card reader control unit .....	122
<b>9</b>	<b>TV system .....</b>	<b>124</b>
9.1	Layout - TV system .....	124
9.2	Overview of fitting locations - TV system .....	127
9.3	Removing and installing TV tuner .....	128
9.4	Removing and installing TV card reader .....	130
<b>10</b>	<b>Reversing camera system .....</b>	<b>131</b>
<b>11</b>	<b>Multifunction steering wheel .....</b>	<b>132</b>
11.1	Layout - multifunction steering wheel .....	132
11.2	Assembly overview - multi-function steering wheel .....	132
11.3	Removing and installing multifunction buttons in steering wheel E441 / E440 .....	133
11.4	Removing and installing Tiptronic switches in steering wheel E480 / E479 .....	134
<b>12</b>	<b>Voice control system .....</b>	<b>136</b>
12.1	Layout - voice control system .....	136
12.2	Removing and installing voice control system .....	136
<b>13</b>	<b>Connection for external multimedia devices .....</b>	<b>138</b>
13.1	Layout - external multimedia devices .....	138
13.2	Removing and installing connection for external multimedia devices .....	139
13.3	Removing and installing USB connection 1 U41 .....	140

---

13.4	Removing and installing control unit with Android operating system J1243 .....	140
<b>14</b>	<b>Rear Seat Entertainment system (RSE) .....</b>	<b>142</b>
14.1	Layout - Rear Seat Entertainment system .....	142
14.2	Overview of fitting locations - Rear Seat Entertainment system .....	142
14.3	Removing and installing multimedia system display unit Y31 / Y32 .....	144
14.4	Removing and installing holder for multimedia system display unit R315 / R316 .....	145
14.5	Removing and installing rear information display and operating unit control unit J648 / J649 .....	146
<b>15</b>	<b>Night vision system .....</b>	<b>148</b>
<b>16</b>	<b>Overhead view camera .....</b>	<b>149</b>
<b>17</b>	<b>Online services .....</b>	<b>150</b>
17.1	Layout - online services .....	150
17.2	Overview of fitting locations - mobile online services .....	154
17.3	Removing and installing emergency call module control unit and communication unit J949 .....	158
17.4	Removing and installing emergency battery, telematics A16 .....	160
17.5	Removing and installing loudspeaker for emergency call module R335 .....	161
17.6	Removing and installing interface control unit for telematics J1221 .....	162
17.7	Removing and installing telephone and telematics control unit J526 .....	162
17.8	Removing and installing data transmission aerials .....	163