

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on the cooling system	1
1.4 Safety precautions when working on vehicles with active suspension	2
1.5 Safety precautions when working on the high-voltage system	2
1.6 Safety precautions when working in the vicinity of high-voltage components	3
2 Repair instructions	5
2.1 Routing and attachment of pipes, hoses and wiring	5
2.2 Contact corrosion	5
2.3 Requirements for self-adhesive components	5
2.4 General information on using adhesives	7
2.5 Secure threaded connections	8
2.6 Removing and installing diagonal struts	8
2.7 Identification plates	8
2.8 Use of impact wrenches	8
50 - Body - front	10
1 Safety information	10
2 Lock carrier	11
2.1 Assembly overview - lock carrier	11
2.2 Removing and installing lock carrier	14
2.3 Removing and installing upper longitudinal member	20
2.4 Removing and installing lower longitudinal member	20
2.5 Removing and installing bracket for longitudinal member	21
2.6 Removing and installing spacer for bumper cover	22
2.7 Removing and installing connecting piece	22
2.8 Removing and installing diagonal strut	24
3 Wing	26
3.1 Assembly overview - wing	26
3.2 Removing and installing wing	28
3.3 Removing and installing wing panel brace	30
3.4 Removing and installing front cover for wing	35
3.5 Removing and installing rear cover for wing	36
3.6 Removing and installing closure plate	37
4 Bulkhead	39
4.1 Assembly overview - plenum chamber partition panel	39
4.2 Assembly overview - plenum chamber cover	39
4.3 Removing and installing plenum chamber partition panel	40
4.4 Removing and installing plenum chamber cover	42
4.5 Removing and installing side plenum chamber cover	43
55 - Bonnet, rear lid	46
1 Safety information	46
2 Bonnet	47
2.1 Assembly overview - bonnet	47
2.2 Assembly overview - Bowden cable	49
2.3 Removing and installing bonnet	50
2.4 Adjusting bonnet	52
2.5 Removing and installing hinges	58
2.6 Resetting hinge	59



2.7	Removing and installing striker	60
2.8	Removing and installing gas strut	60
2.9	Releasing gas from gas strut	61
2.10	Removing and installing impact guard	62
2.11	Removing and installing Bowden cable	63
2.12	Removing and installing bonnet lock	66
2.13	Removing and installing operating lever for bonnet lock	67
2.14	Removing and installing mounting bracket for operating lever for bonnet lock	67
2.15	Removing and installing mounting bracket with Bowden cable for operating lever for arrester	68
3	Rear lid	70
3.1	Assembly overview - rear lid	70
3.2	Assembly overview - rear lid power opening	73
3.3	Assembly overview - sensor-operated rear lid opening	74
3.4	Removing and installing rear lid	75
3.5	Adjusting rear lid	76
3.6	Removing and installing hinges	80
3.7	Removing and installing rear lid seal	80
3.8	Removing and installing adjusting buffers	81
3.9	Removing and installing stop for adjusting buffer	82
3.10	Removing and installing cover for water channel	82
3.11	Removing and installing gas strut	83
3.12	Releasing gas from gas strut	84
3.13	Removing and installing extension spring	85
3.14	Removing and installing rear lid lock	85
3.15	Removing and installing operating cable for bonnet lock	86
3.16	Removing and installing lock cylinder	87
3.17	Removing and installing striker	89
3.18	Removing and installing power latching motor for rear lid V382	89
3.19	Removing and installing Bowden cable for power latching system	90
3.20	Removing and installing motor for rear lid V444	91
3.21	Adapting motor for rear lid V444	91
3.22	Removing and installing rear lid control unit J605	92
3.23	Removing and installing rear lid power opening control unit J938	92
3.24	Removing and installing rear lid power opening sender G750/G760	93
4	Tank flap unit	96
4.1	Assembly overview - tank flap unit	96
4.2	Removing and installing tank flap unit	96
4.3	Removing and installing trim panel for tank flap	98
4.4	Removing and installing drain hose for tank flap unit	99
4.5	Removing and installing manual release cable	100
5	Charging flap unit	101
5.1	Assembly overview - charging flap unit	101
5.2	Removing and installing charging flap unit	101
5.3	Removing and installing charging flap unit trim	103
5.4	Removing and installing manual release cable	104
57	Front doors, door components, central locking	105
1	Safety information	105
2	Door	106
2.1	Assembly overview - door	106
2.2	Assembly overview - door seals	108
2.3	Removing and installing door	109
2.4	Adjusting door	110
2.5	Removing and installing door arrester	117

2.6	Removing and installing inner door seal	118
2.7	Removing and installing outer door seal	119
2.8	Removing and installing joint seal	127
3	Door components	129
3.1	Assembly overview - window regulator	129
3.2	Assembly overview - door handle and door lock	130
3.3	Assembly overview - window guides and window slot seals	132
3.4	Removing and installing window regulator	133
3.5	Removing and installing window regulator motor	135
3.6	Removing and installing door handle	136
3.7	Removing and installing door handle trim	138
3.8	Removing and installing trim strip for door handle	138
3.9	Removing and installing mounting bracket	139
3.10	Removing and installing exterior door handle switch F546/F547	141
3.11	Removing and installing operating cable for exterior door handle	142
3.12	Removing and installing lock cylinder	143
3.13	Removing and installing cap on door handle	144
3.14	Removing and installing trim strip for cap	144
3.15	Removing and installing door lock	144
3.16	Removing and installing striker	146
3.17	Removing and installing operating cable for interior door handle	146
3.18	Removing and installing inner door cover	147
3.19	Removing and installing power latching motor V302/V303	149
3.20	Removing and installing window guide	149
3.21	Removing and installing outer window slot seal	150
4	Central locking system	152
4.1	Overview of fitting locations - central locking system	152
4.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	154
4.3	Removing and installing rear left door control unit J388 and rear right door control unit J389	154
4.4	Removing and installing convenience system central control unit J393	155
4.5	Removing and installing tank filler flap locking motor V155	156
4.6	Removing and installing actuator for high-voltage charging flap lock 1 F496	157
58	Rear doors, door components	158
1	Safety information	158
2	Door	159
2.1	Assembly overview - door	159
2.2	Assembly overview - door seals	160
2.3	Removing and installing door	161
2.4	Adjusting door	162
2.5	Removing and installing door arrester	169
2.6	Removing and installing inner door seal	170
2.7	Removing and installing outer door seal	171
2.8	Removing and installing joint seal	179
3	Door components	180
3.1	Assembly overview - window regulator	180
3.2	Assembly overview - door handle and door lock	181
3.3	Assembly overview - window guides and window slot seals	183
3.4	Removing and installing window regulator	184
3.5	Removing and installing window regulator motor	186
3.6	Removing and installing door handle	187
3.7	Removing and installing door handle trim	188
3.8	Removing and installing trim strip for door handle	189
3.9	Removing and installing mounting bracket	189



3.10	Removing and installing exterior door handle switch F548/F549	191
3.11	Removing and installing operating cable for exterior door handle	192
3.12	Removing and installing housing	193
3.13	Removing and installing cap on door handle	193
3.14	Removing and installing trim strip for cap	194
3.15	Removing and installing door lock	194
3.16	Removing and installing striker	195
3.17	Removing and installing operating cable for interior door handle	196
3.18	Removing and installing inner door cover	197
3.19	Removing and installing power latching motor V541/V542	198
3.20	Removing and installing window guide	198
3.21	Removing and installing guide rail for door window	200
3.22	Removing and installing outer window slot seal	201
60	- Sunroof	203
1	Safety information	203
2	Repair instructions	204
2.1	Tools and materials required for installation and removal	204
2.2	Preparing new glass trim for installation	206
2.3	Preparing a new glass panel (rear) for installation	208
2.4	Preparing an undamaged glass panel (rear) for installation	210
2.5	Preparing a new sunroof frame for installation	210
3	Sliding sunroof	213
3.1	Assembly overview - sliding sunroof	213
3.2	Assembly overview - adhesive beads on sliding sunroof	216
3.3	Assembly overview - adhesive beads on glass panel (rear)	219
3.4	Assembly overview - sunroof roller blind	220
3.5	Assembly overview - wind deflector	222
3.6	Removing and installing sliding sunroof frame	223
3.7	Removing and installing drain pipe	237
3.8	Removing and installing glass trim	239
3.9	Removing and installing glass panel	242
3.10	Adjusting glass panel	246
3.11	Removing and installing sliding sunroof adjustment control unit J245	248
3.12	Removing and installing rear sliding sunroof control unit J392	249
3.13	Adapting sliding sunroof adjustment control unit J245	250
3.14	Adapting rear sliding sunroof control unit J392	250
3.15	Removing and installing sliding sunroof motor V1	250
3.16	Adapting sliding sunroof motor V1	251
3.17	Removing and installing cable for sunroof drive	251
3.18	Removing and installing side trim	254
3.19	Removing and installing slide and tilt mechanism	255
3.20	Removing and installing sliding sunroof seals	257
3.21	Removing and installing sunroof roller blind	260
3.22	Removing and installing sunroof roller blind (rear)	261
3.23	Removing and installing sunroof roller blind motor V260	265
3.24	Removing and installing sunroof roller blind motor 2 V583	266
3.25	Adapting sunroof roller blind motor V260	267
3.26	Adapting sunroof roller blind motor 2 V583	267
3.27	Removing and installing wind deflector	267
3.28	Manual actuation	268
4	Water drain hoses	269
4.1	Assembly overview - water drain hoses	269
4.2	Cleaning water drain hoses	269
4.3	Removing and installing water drain hoses	270

63 - Bumpers	271
1 Safety information	271
2 Front bumper	272
2.1 Assembly overview - bumper cover	272
2.2 Assembly overview - bumper carrier	281
2.3 Removing and installing bumper cover	283
2.4 Adjusting bumper cover	286
2.5 Removing and installing bumper cover mounting	287
2.6 Removing and installing cover for headlight washer jet	287
2.7 Removing and installing dummy cover in bumper cover	288
2.8 Removing and installing centre air intake grille	288
2.9 Removing and installing side air intake grille for front bumper	290
2.10 Removing and installing trim for side air intake grille	293
2.11 Removing and installing front spoiler	293
2.12 Removing and installing trim strips	294
2.13 Removing and installing closure plate for bumper cover	297
2.14 Removing and installing insert for closure plate	299
2.15 Removing and installing lock carrier cover	300
2.16 Removing and installing bumper carrier	300
2.17 Removing and installing moulded foam insert	307
3 Rear bumper	309
3.1 Assembly overview - bumper cover	309
3.2 Assembly overview - bumper carrier	318
3.3 Removing and installing bumper cover	319
3.4 Removing and installing base plate for bumper cover	322
3.5 Removing and installing lower section of bumper cover	323
3.6 Removing and installing bumper cover mounting	325
3.7 Removing and installing trim strip for rear bumper	326
3.8 Removing and installing bumper cover trim	334
3.9 Removing and installing reflector for rear bumper	336
3.10 Removing and installing bumper carrier	337
64 - Glazing	340
1 Safety information	340
2 Repair instructions	341
2.1 Minimum drying times for bonded windows	341
2.2 Repairing windows	341
2.3 Notes on installing flush-bonded windows	341
2.4 Preparing undamaged windows for installation	344
2.5 Preparing new windows for installation	345
2.6 Preparing body flange for installation	346
2.7 Cleaning off adhesive sealant	349
3 Windscreen	350
3.1 Assembly overview - windscreen	350
3.2 Removing and installing windscreen	352
3.3 Removing and installing heated windscreen control unit J505	358
4 Rear window	360
4.1 Assembly overview - rear window	360
4.2 Removing and installing rear window	360
5 Side windows	367
5.1 Assembly overview - rear side window	367
5.2 Removing and installing rear side window	367
6 Door windows	370
6.1 Assembly overview - front door window	370



6.2	Assembly overview - rear door window	370
6.3	Removing and installing front door window	371
6.4	Removing and installing rear door window	373
66	Exterior equipment	375
1	Safety information	375
2	Radiator grille/front trim	376
2.1	Assembly overview - radiator grille	376
2.2	Removing and installing radiator grille	382
2.3	Preparing new radiator grille for installation	383
2.4	Removing and installing centre closure plate	384
2.5	Removing and installing lower closure plate	386
2.6	Removing and installing number plate holder	387
3	Strips/trim panels/extensions	390
3.1	Assembly overview - trim strips	390
3.2	Assembly overview - covers	391
3.3	Assembly overview - side member trim	392
3.4	Assembly overview - water deflector strip	393
3.5	Assembly overview - trim panel for A-pillar	394
3.6	Assembly overview - trim panel for B-pillar	395
3.7	Assembly overview - trim panel for C-pillar	396
3.8	Removing and installing trim strip	397
3.9	Removing and installing cover	402
3.10	Removing and installing side member trim	404
3.11	Removing and installing water deflector strip	406
3.12	Removing and installing trim panel for A-pillar	408
3.13	Removing and installing trim panel for B-pillar on door	408
3.14	Removing and installing trim panel for C-pillar on door	410
4	Noise insulation	412
4.1	Assembly overview - noise insulation	412
5	Underbody cladding	414
5.1	Assembly overview - underbody cladding	414
5.2	Assembly overview - underbody struts	417
5.3	Removing and installing tunnel cross-piece	420
5.4	Removing and installing diagonal struts	421
5.5	Removing and installing brace for subframe	422
5.6	Removing and installing impact guard	424
6	Exterior mirror	425
6.1	Assembly overview - exterior mirror	425
6.2	Removing and installing exterior mirror	427
6.3	Removing and installing mirror glass	429
6.4	Removing and installing mirror adjustment unit	430
6.5	Removing and installing mirror trim (bottom)	430
6.6	Removing and installing mirror trim	432
7	Wheel housing liner	433
7.1	Assembly overview - front wheel housing liner	433
7.2	Assembly overview - rear wheel housing liner	433
7.3	Removing and installing wheel spoiler (front)	434
8	Lettering and badges	436
8.1	Assembly overview - lettering and badges	436
8.2	Dimensions - lettering and badges on rear	436
8.3	Dimensions - lettering and badges on side	438
8.4	General notes on renewing lettering and badges	438
8.5	Removing and installing lettering and badges for radiator grille	439

9	Towing bracket	445
9.1	Assembly overview - towing bracket	445
9.2	Removing and installing trailer detector control unit J345	445
10	Heat shields	447
10.1	Assembly overview - heat shields	447
10.2	Removing and installing heat shield for plenum chamber partition panel	449
10.3	Removing and installing heat shield (bottom) for plenum chamber partition panel	450
10.4	Removing and installing heat shield (front) for longitudinal member	450
10.5	Removing and installing heat shield for tunnel (front)	451
10.6	Removing and installing heat shield for tunnel (centre)	454
10.7	Removing and installing heat shield for tunnel (rear)	456
10.8	Removing and installing heat shield for centre silencer	457
10.9	Removing and installing heat shield for floor (rear)	457
10.10	Removing and installing heat shield for rear silencer	458