

Contents

00 - Technical data	1
1 Safety information	1
1.1 Checking child seat anchors following an accident	1
2 Repair instructions	2
2.1 Routing and attachment of pipes, hoses and wiring	2
2.2 Contact corrosion	2
2.3 Secure threaded connections	2
2.4 Identification plates	2
2.5 Impact wrenches	3
72 - Seat frames	4
1 Safety information	4
2 Front seats	5
2.1 Assembly overview - front seat	5
2.2 Assembly overview - seat pan	7
2.3 Assembly overview - seat pan adjustment	10
2.4 Assembly overview - front seat backrest	12
2.5 Assembly overview - head restraint	18
2.6 Overview of fitting locations - electrical and electronic components	20
2.7 Removing and installing front seat	23
2.8 Attaching front seat to seat repair stand	31
2.9 Dismantling and assembling seat pan	32
2.10 Removing and installing seat height adjuster	42
2.11 Removing and installing seat rake adjuster	43
2.12 Removing and installing front seat backrest	44
2.13 Removing and installing backrest cover panel	45
2.14 Removing and installing bracket for backrest cover panel	48
2.15 Removing and installing trim for backrest fitting (sill side)	49
2.16 Removing and installing trim for backrest fitting (tunnel side)	50
2.17 Removing and installing pressure distribution plate	51
2.18 Removing and installing lumbar support adjustment motor V125 / V126 / V129 / V130	52
2.19 Removing and installing reclining seat foot rest	53
2.20 Removing and installing seat adjustment operating unit E470 / E471	55
2.21 Removing and installing switch module for front seat E663 / E664	56
2.22 Removing and installing control unit for seat functions J136 / J521	56
2.23 Removing and installing front seat fans	57
2.24 Removing and installing seat heating control unit	59
2.25 Removing and installing head restraint	62
2.26 Removing and installing head restraint guide	64
2.27 Removing and installing head restraint adjustment motor V563 / V564	65
3 Rear seats	69
3.1 Assembly overview - bench seat/individual seats	69
3.2 Assembly overview - rear seat backrest	74
3.3 Assembly overview - centre armrest	76
3.4 Assembly overview - centre storage compartment	78
3.5 Assembly overview - head restraint and head restraint guide	80
3.6 Overview of fitting locations - electrical and electronic components	80
3.7 Removing and installing bench seat/individual seats	82
3.8 Removing and installing rear seat backrest	87
3.9 Removing and installing seat rake adjuster	89
3.10 Removing and installing rear seat fan	89
3.11 Removing and installing control unit for seat adjustment	90
3.12 Removing and installing retaining bracket for gap cover	91



3.13	Removing and installing retaining plate for backrest cover	91
3.14	Removing and installing centre armrest	92
3.15	Removing and installing cup holder	93
3.16	Removing and installing cover (top) for centre armrest	94
3.17	Removing and installing storage compartment for centre armrest	94
3.18	Removing and installing centre armrest trim	96
3.19	Removing and installing operating unit for rear seats	97
3.20	Removing and installing centre storage compartment	98
3.21	Removing and installing trim for centre storage compartment	99
3.22	Removing and installing mounting for DVD changer R161	100
3.23	Removing and installing trim cover for sliding cover	101
3.24	Removing and installing flap for load-through hatch	101
3.25	Removing and installing head restraint	102
3.26	Removing and installing head restraint guide	104
4	Front seat pneumatic system	105
4.1	Connection diagram - pneumatic system, sports seat	105
4.2	Assembly overview - pneumatic system	106
4.3	Checking pneumatic system	109
4.4	Severing and connecting pneumatic lines	113
4.5	Servicing pneumatic lines	114
4.6	Removing and installing lumbar support with air cushions - module with valve block and backrest bolster adjusters	114
4.7	Removing and installing air cushion for seat bolster adjustment	115
4.8	Removing and installing massage mat	116
4.9	Removing and installing valve block for massage function	117
4.10	Removing and installing compressor for pneumatic system	118
4.11	Removing and installing carrier module for massage/heating mat for foot rest on reclining seat	119
5	Rear seat pneumatic system	121
5.1	Connection diagram - pneumatic system	121
5.2	Assembly overview - pneumatic system	122
5.3	Checking pneumatic system	123
5.4	Severing and connecting pneumatic lines	126
5.5	Removing and installing compressor for pneumatic system	127
5.6	Removing and installing lumbar support - module with air cushions and valve block	128
5.7	Removing and installing valve block for massage function	129
5.8	Removing and installing massage mat	129
74	Seat - padding, covers	131
1	Safety information	131
2	Covers and padding on front seats	132
2.1	Assembly overview - seat pan cover and padding	132
2.2	Assembly overview - backrest cover and padding	134
2.3	Assembly overview - seat heater element	136
2.4	Removing and installing seat pan cover and padding	138
2.5	Separating seat pan cover and padding	142
2.6	Removing and installing backrest cover and padding	143
2.7	Separating backrest cover and padding	147
2.8	Removing and installing seat heater element Z6 / Z8	148
2.9	Removing and installing backrest heater element Z7 / Z9	149
3	Covers and padding on rear seats	151
3.1	Assembly overview - cover and padding	151
3.2	Assembly overview - seat heater element	156
3.3	Removing and installing cover and padding	158
3.4	Detaching cover from padding	163
3.5	Removing and installing seat heater element	164

3.6 Removing and installing backrest heater element 165