

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety precautions</b>	<b>1</b>
1.1 Safety precautions when working on air conditioners	1
1.2 Safety precautions when handling refrigerants	1
1.3 Safety precautions when working on vehicles with high-voltage system	2
1.4 Safety precautions when working in the vicinity of high-voltage components	2
1.5 Safety precautions when working on vehicles with start/stop system	3
1.6 Safety precautions when using testers and measuring instruments during a road test	3
1.7 Safety precautions when working on the cooling system	4
1.8 Safety precautions when working on vehicles with auxiliary/supplementary heater	4
<b>2 Identification</b>	<b>5</b>
2.1 Identification of heater and air conditioning unit	5
<b>3 General notes</b>	<b>7</b>
3.1 Type plates	7
<b>4 Repair instructions</b>	<b>8</b>
4.1 Rules for cleanliness	8
4.2 General notes	8
4.3 Contact corrosion	9
4.4 Routing and attachment of pipes, hoses and wiring	9
4.5 Installing radiators and condensers	9
4.6 Checking heating output	10
4.7 Checking cooling output	10
4.8 Checking air conditioning system functions - vehicles with high-voltage system	10
4.9 Working on refrigerant circuit	11
4.10 Paintwork repairs on vehicles with air conditioning system	11
4.11 Refrigerant circuit seals	12
4.12 Notes on high-voltage components and potential equalisation lines	14
4.13 Use of impact wrenches	14
4.14 Identification plates	15
<b>5 Technical data</b>	<b>16</b>
5.1 Refrigerant capacities	16
5.2 Approved refrigerant oils and refrigerant oil capacities	17
5.3 Oil distribution	22
<b>80 - Heating</b>	<b>24</b>
<b>1 Safety information</b>	<b>24</b>
<b>2 Overview of fitting locations - heater</b>	<b>25</b>
<b>87 - Air conditioning system</b>	<b>26</b>
<b>1 Safety information</b>	<b>26</b>
<b>2 Overview of fitting locations - air conditioner</b>	<b>27</b>
2.1 Overview of fitting locations - components not located in passenger compartment	27
2.2 Overview of fitting locations - components in front passenger compartment	33
2.3 Overview of fitting locations - components in rear passenger compartment	35
<b>3 Refrigerant circuit</b>	<b>38</b>
3.1 System overview - refrigerant circuit	39
3.2 Assembly overview - condenser	52
3.3 Assembly overview - refrigerant lines	54
3.4 Assembly overview - heat exchanger for heat pump operation	81
3.5 Assembly overview - heat exchanger for high-voltage battery	82
3.6 Removing and installing heat exchanger for heat pump operation with refrigerant receiver	82
3.7 Removing and installing refrigerant receiver	87

3.8	Removing and installing heat exchanger for high-voltage battery .....	89
3.9	Removing and installing high-pressure sender G65 .....	95
3.10	Removing and installing refrigerant pressure and temperature sender G395 .....	97
3.11	Removing and installing refrigerant pressure and temperature sender 2 G826 .....	100
3.12	Removing and installing refrigerant pressure and temperature sender, low-pressure side G1052 .....	103
3.13	Removing and installing refrigerant pressure and temperature sender, high-pressure side G1053 .....	103
3.14	Removing and installing refrigerant shut-off valve V424 .....	105
3.15	Removing and installing refrigerant lines with internal heat exchanger .....	107
3.16	Removing and installing refrigerant lines in plenum chamber .....	115
3.17	Removing and installing leadthrough for refrigerant lines in plenum chamber .....	119
3.18	Removing and installing expansion valve .....	124
3.19	Removing and installing non-return valves in refrigerant circuit .....	138
3.20	Unfastening and assembling connection points of refrigerant lines - PR numbers KK1/KK3 .....	148
3.21	Detaching and attaching refrigerant lines - PR numbers KK1/KK3 .....	149
3.22	Removing and installing refrigerant lines to rear heater and air conditioning unit .....	152
3.23	Removing and installing condenser/gas cooler .....	154
3.24	Detaching and attaching refrigerant lines at condenser .....	157
3.25	Removing and installing accumulator - vehicles with R744 .....	161
3.26	Removing and installing desiccant bag/desiccant cartridge - vehicles with R134a/R1234yf .....	163
3.27	Removing and installing evacuating and charging valve (low-pressure and high-pressure sides) .....	167
3.28	Starting up air conditioner after charging refrigerant circuit .....	169
3.29	Removing and installing pressure limiting valve (low-pressure side) .....	173
3.30	Cleaning air conditioner refrigerant circuit - vehicles with high-voltage system .....	174
<b>4</b>	<b>Heat pump valve unit .....</b>	<b>193</b>
4.1	Assembly overview - heat pump valve unit .....	193
4.2	Removing and installing heat pump valve unit .....	194
4.3	Dismantling and assembling heat pump valve unit .....	198
4.4	Removing and installing refrigerant expansion valve 2 N637 .....	201
<b>5</b>	<b>Air conditioner compressor .....</b>	<b>205</b>
5.1	Assembly overview - air conditioner compressor .....	205
5.2	Assembly overview - pulley .....	212
5.3	Detaching and attaching air conditioner compressor at bracket .....	222
5.4	Detaching and attaching refrigerant lines at air conditioner compressor .....	230
5.5	Removing and installing air conditioner compressor .....	242
5.6	Preparations for renewing pulley .....	255
5.7	Removing and installing pulley (without magnetic clutch) .....	256
5.8	Removing and installing pulley with air conditioning system magnetic clutch N25 .....	261
<b>6</b>	<b>Control motors .....</b>	<b>268</b>
6.1	Overview of fitting locations - front control motors .....	269
6.2	Assembly overview - front control motors .....	273
6.3	Overview of fitting locations - rear control motors .....	282
6.4	Assembly overview - rear control motors .....	284
6.5	General information and procedure for removing and installing control motors .....	287
6.6	Removing and installing fresh air flap control motor V438, operation .....	289
6.7	Removing and installing defroster flap control motor V107 .....	292
6.8	Removing and installing left footwell flap control motor V108/control motor for left footwell temperature flap V411 .....	296
6.9	Removing and installing right footwell flap control motor V109/control motor for right footwell temperature flap V412 .....	298
6.10	Removing and installing left centre vent control motor V110 .....	300
6.11	Removing and installing right centre vent control motor V111 .....	302
6.12	Removing and installing air recirculation flap control motor V113 .....	304

6.13	Removing and installing rear temperature flap control motor V137/rear left air quantity flap control motor V239 .....	306
6.14	Removing and installing left temperature flap control motor V158 .....	308
6.15	Removing and installing right temperature flap control motor V159 .....	310
6.16	Removing and installing right B-pillar and footwell shut-off flap control motor V211 .....	312
6.17	Removing and installing left B-pillar and footwell shut-off flap control motor V212 .....	314
6.18	Removing and installing left side vent control motor V299 .....	317
6.19	Removing and installing right side vent control motor V300 .....	319
6.20	Removing and installing rear left temperature flap control motor V313 .....	321
6.21	Removing and installing rear right temperature flap control motor V314 .....	323
6.22	Removing and installing rear left chest vent control motor V315 .....	325
6.23	Removing and installing rear right chest vent control motor V316 .....	327
6.24	Removing and installing rear air recirculation flap control motor V421 .....	329
6.25	Removing and installing rear air distribution flap control motor V427/rear right air distribution control motor V594 .....	331
6.26	Removing and installing rear left air distribution control motor V593 .....	334
6.27	Removing and installing control motor for left side window defroster flap V409 .....	336
6.28	Removing and installing control motor for right side window defroster flap V410 .....	338
6.29	Removing and installing rear right air quantity flap control motor V240 .....	340
6.30	Removing and installing brackets for control motors on front heater and air conditioning unit .....	342
<b>7</b>	<b>Front heater and air conditioning unit .....</b>	<b>353</b>
7.1	Assembly overview - heater and air conditioning unit .....	353
7.2	Assembly overview - air intake box of heater and air conditioning unit .....	357
7.3	Assembly overview - evaporator housing .....	359
7.4	Removing and installing evaporator .....	361
7.5	Checking electric supplementary heater (auxiliary air heater control unit J604 with auxiliary air heater element Z35) .....	364
7.6	Removing and installing auxiliary air heater control unit J604 (with auxiliary air heater element Z35) .....	366
7.7	Removing and installing heater and air conditioning unit .....	370
7.8	Detaching and attaching air intake box at heater and air conditioning unit .....	377
7.9	Removing and installing dust and pollen filter .....	378
7.10	Removing and installing fresh air blower V2 with fresh air blower control unit J126 .....	380
7.11	Removing and installing heat exchanger .....	382
7.12	Removing and installing condensation drain .....	391
7.13	Checking condensation drain .....	393
<b>8</b>	<b>Rear heater and air conditioning unit .....</b>	<b>394</b>
8.1	Assembly overview - attachments for heater and air conditioning unit and air intake box ..	394
8.2	Removing and installing evaporator .....	398
8.3	Removing and installing heater and air conditioning unit .....	401
8.4	Removing and installing rear fresh air blower V80 .....	408
8.5	Removing and installing rear fresh air blower control unit J391 .....	411
8.6	Removing and installing heat exchanger - vehicles with PR number 9AH .....	411
8.7	Checking condensation drain hose .....	415
<b>9</b>	<b>Air duct system .....</b>	<b>417</b>
9.1	Assembly overview - routing of air flow and air distribution in passenger compartment ..	417
9.2	Assembly overview - fresh air intake .....	423
9.3	Air intake and air outlet openings .....	424
9.4	Removing and installing air distribution housing (driver side) .....	432
9.5	Removing and installing air distribution housing (passenger side) .....	434
9.6	Removing and installing footwell vent (driver side) .....	436
9.7	Removing and installing footwell vent (front passenger side) .....	437
9.8	Removing and installing rear footwell vent .....	438
9.9	Removing and installing air duct for glove compartment cooling .....	438
9.10	Removing and installing forced ventilation vents in passenger compartment .....	439

9.11	Checking forced ventilation vents in passenger compartment .....	441
9.12	Removing and installing fresh air intake .....	442
9.13	Removing and installing cover for fresh air intake .....	444
9.14	Removing and installing plenum chamber water drain .....	445
9.15	Checking plenum chamber water drain .....	446
9.16	Cleaning plenum chamber water drain .....	446
<b>10</b>	<b>Coolant circuit .....</b>	<b>447</b>
10.1	Assembly overview - high-voltage heater (PTC) Z115 .....	447
10.2	Integration of heater and air conditioning unit into engine coolant circuit .....	448
10.3	Removing and installing high-voltage heater (PTC) Z115 (with high-voltage heater (PTC) control unit J848) .....	453
<b>11</b>	<b>Operating and display unit .....</b>	<b>458</b>
11.1	Overview - operating and display unit .....	458
11.2	Removing and installing operating and display unit .....	459
<b>12</b>	<b>Further control components .....</b>	<b>461</b>
12.1	Removing and installing rear sunlight penetration photosensor G914 .....	461
12.2	Removing and installing external air quality and air humidity sensor G935 .....	462
12.3	Removing and installing ambient temperature sensor G17 .....	463
12.4	Removing and installing front chest vent temperature sensor G385/G386 .....	463
12.5	Removing and installing left footwell vent temperature sender G261 .....	465
12.6	Removing and installing right footwell vent temperature sender G262 .....	466
12.7	Removing and installing evaporator output temperature sender G263 .....	467
12.8	Removing and installing rear right chest vent temperature sender G636/rear left chest vent temperature sender G635 - vehicles with PR number 9AU .....	468
12.9	Removing and installing rear left chest vent temperature sender G635 - vehicles with PR number 9AH .....	468
12.10	Removing and installing rear right chest vent temperature sender G636 - vehicles with PR number 9AH .....	469
12.11	Removing and installing vent temperature sender for rear footwell G637/G638 - vehicles with PR number 9AH .....	470
12.12	Removing and installing sensor for interior carbon dioxide concentration G929 .....	471
12.13	Removing and installing dash panel temperature sensor G56 .....	472
12.14	Removing and installing rear chest vent temperature sensor G537 .....	473
12.15	Removing and installing humidity sender G355 .....	473
12.16	Removing and installing thermal management control unit J1024 .....	473
<b>13</b>	<b>Air quality improvement system .....</b>	<b>475</b>
13.1	Overview of fitting locations - air quality improvement system .....	475
13.2	Assembly overview - fragrance diffuser system .....	477
13.3	Removing and installing control unit for fragrance diffuser system J1101 with blower for fragrance diffuser system V686 .....	481
13.4	Removing and installing function unit for fragrance diffuser system GX43 .....	483
13.5	Removing and installing bracket for function unit for fragrance diffuser system GX43 and control unit for fragrance diffuser system J1101 - right-hand drive vehicles .....	485
13.6	Removing and installing control motor for fragrance diffuser system V687 .....	486
13.7	Removing and installing temperature sensor for fragrance diffuser system G1056 .....	487
13.8	Removing and installing ioniser control unit J897 .....	488
13.9	Removing and installing driver side ioniser J1105 .....	488
13.10	Removing and installing passenger side ioniser J1106 .....	489