

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on vehicles with high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when working on the fuel system	2
1.5 Safety precautions when using testers and measuring instruments during a road test	3
1.6 Safety precautions when working on the cooling system	3
1.7 Safety precautions when working on vehicles with auxiliary/supplementary heater	3
<b>2 General notes</b>	<b>5</b>
2.1 Type plates	5
2.2 Notes on operation of auxiliary/supplementary heater on vehicles with diesel engine	6
2.3 Notes on operation of auxiliary/supplementary heater with biofuel	6
2.4 Starting conditions for auxiliary/supplementary heater	7
2.5 Rules for cleanliness when working on the auxiliary/supplementary heater and fuel system	7
<b>3 Repair instructions</b>	<b>8</b>
3.1 Rules for cleanliness	8
3.2 General repair instructions	8
3.3 Contact corrosion	10
3.4 Checking heating output	10
3.5 Routing and attachment of pipes, hoses and wiring	10
3.6 Use of impact wrenches	10
3.7 Identification plates	11
<b>82 - Auxiliary heating</b>	<b>12</b>
<b>1 Overview of fitting locations - auxiliary/supplementary heater</b>	<b>12</b>
1.1 Overview of fitting locations - components not located in passenger compartment	12
<b>2 Auxiliary/supplementary heater</b>	<b>15</b>
2.1 Overview of fitting locations - auxiliary/supplementary heater	15
2.2 Assembly overview - attachments for auxiliary/supplementary heater	16
2.3 Assembly overview - components inside auxiliary/supplementary heater	19
2.4 Removing and installing auxiliary/supplementary heater	22
2.5 Removing and installing bracket for auxiliary/supplementary heater	28
2.6 Dismantling and assembling auxiliary/supplementary heater	29
2.7 Removing and installing air intake silencer	40
2.8 Removing and installing circulation pump V55	41
2.9 Removing and installing exhaust system	44
2.10 Removing and installing temperature sensor G18 and temperature sensor 2 for supplementary and auxiliary heating G587	45
2.11 Pin assignment for auxiliary/supplementary heater	47
<b>3 Coolant circuit with auxiliary/supplementary heater</b>	<b>50</b>
3.1 Connection diagram - coolant hoses	50
3.2 Assembly overview - coolant shut-off valve	54
3.3 Removing and installing heater coolant shut-off valve	55
3.4 Bleeding coolant circuit	58
<b>4 Fuel supply system</b>	<b>60</b>
4.1 Overview of fitting locations - fuel supply system	60
4.2 Fuel take-off from fuel tank	61
4.3 Checking CO <sub>2</sub> content in exhaust gas of auxiliary/supplementary heater	67
4.4 Checking fuel delivery rate	69
4.5 Removing and installing metering pump V54	72



<b>5</b>	<b>Auxiliary/supplementary heater control</b> .....	<b>75</b>
5.1	Switching auxiliary/supplementary heater and auxiliary ventilation on and off .....	75
<b>6</b>	<b>Further control components</b> .....	<b>76</b>
6.1	Removing and installing ambient temperature sensor .....	76
6.2	Removing and installing remote control receiver for auxiliary heater R64 .....	76
6.3	Adapting remote control for auxiliary heater .....	77
6.4	Functional description of remote control for auxiliary/supplementary heater .....	77