

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Gearbox identification	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety precautions when working on vehicle	2
2.2 Safety precautions when working on vehicles with start/stop system	3
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the subframe	3
2.5 Safety precautions when tow-starting and towing	3
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair instructions	6
3.4 Contact corrosion	8
3.5 Routing and attachment of pipes, hoses and wiring	8
<b>4 Technical data</b>	<b>10</b>
4.1 Capacities	10
4.2 Oil distribution	11
4.3 Clutch logic	11
<b>5 Overview - power transmission</b>	<b>12</b>
<b>32 - Torque converter</b>	<b>13</b>
<b>1 Torque converter</b>	<b>13</b>
<b>37 - Controls, housing</b>	<b>14</b>
<b>1 Selector mechanism</b>	<b>14</b>
1.1 Assembly overview - selector mechanism	14
1.2 Assembly overview - manual release mechanism for parking lock	16
1.3 Checking selector mechanism	17
1.4 Manual release from position P	21
1.5 Removing and installing selector lever handle	22
1.6 Removing and installing selector mechanism	24
1.7 Removing and installing manual release cable (front) for parking lock	25
1.8 Removing and installing manual release cable (rear) for parking lock	26
1.9 Renewing seal for parking lock shaft	32
<b>2 Removing and installing gearbox</b>	<b>36</b>
2.1 Tightening torques for gearbox	36
2.2 Removing gearbox	37
2.3 Installing gearbox	72
<b>3 Assembly mountings</b>	<b>80</b>
3.1 Assembly overview - assembly mountings	80
3.2 Removing and installing tunnel cross member	82
<b>4 Transporting gearbox</b>	<b>89</b>
<b>5 Securing to engine and gearbox support</b>	<b>91</b>
<b>6 ATF circuit</b>	<b>92</b>
6.1 Assembly overview - ATF circuit	92
6.2 Removing and installing ATF cooler	94
6.3 Removing and installing ATF lines	96
<b>7 ATF</b>	<b>98</b>
7.1 Checking ATF level	98
7.2 Draining and filling ATF	102



<b>38 - Gears, control</b>	<b>106</b>
<b>1 ATF system</b>	<b>106</b>
1.1 Removing and installing oil pan	106
<b>2 Mechatronic unit</b>	<b>110</b>
<b>39 - Final drive - front differential</b>	<b>111</b>
<b>1 Final drive</b>	<b>111</b>
1.1 Assembly overview - final drive	111
1.2 Removing and installing O-ring on cover for front final drive	114
<b>2 Gear oil</b>	<b>116</b>
2.1 Checking gear oil level	116
2.2 Draining and filling gear oil	120
<b>3 Oil seals</b>	<b>127</b>
3.1 Overview of fitting locations - oil seals	127
3.2 Renewing left oil seal	127
3.3 Renewing right oil seal	131
<b>4 Differential</b>	<b>133</b>
4.1 Removing and installing left flange shaft	133
4.2 Removing and installing right flange shaft	137
<b>5 Centre differential</b>	<b>140</b>
<b>6 Transfer box</b>	<b>141</b>
<b>7 Gearbox control system</b>	<b>142</b>
7.1 Overview of fitting locations - gearbox control system	142