

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Safety information	2
2.1 Safety precautions when working on vehicle	2
2.2 Safety precautions when working on vehicles with start/stop system	3
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the subframe	3
2.5 Safety precautions when tow-starting and towing	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair instructions	6
3.4 Contact corrosion	9
3.5 Routing and attachment of pipes, hoses and wiring	9
4 Technical data	10
4.1 Capacities	10
4.2 Oil distribution	11
4.3 Clutch logic	12
5 Overview - power transmission	13
32 - Torque converter	14
1 Torque converter	14
37 - Controls, housing	15
1 Selector mechanism	15
1.1 Assembly overview - selector mechanism	15
1.2 Assembly overview - manual release mechanism for parking lock	16
1.3 Checking selector mechanism	17
1.4 Manual release from position P	21
1.5 Removing and installing selector lever handle	22
1.6 Removing and installing selector mechanism	24
1.7 Removing and installing manual release cable for parking lock	25
1.8 Renewing seal for parking lock shaft	29
2 Removing and installing gearbox	33
2.1 Removing gearbox	33
2.2 Installing gearbox	47
2.3 Tightening torques for gearbox	53
3 Assembly mountings	55
3.1 Assembly overview - assembly mountings	55
3.2 Removing and installing tunnel cross member	57
4 Transporting gearbox	62
5 Securing to engine and gearbox support	64
6 ATF circuit	65
6.1 Assembly overview - ATF circuit	65
6.2 Removing and installing ATF cooler	67
6.3 Removing and installing ATF lines	69
7 ATF	71
7.1 Checking ATF level	71
7.2 Draining and filling ATF	75



38 - Gears, control	79
1 ATF system	79
1.1 Removing and installing oil pan	79
2 Mechatronic unit	83
39 - Final drive - front differential	84
1 Final drive	84
1.1 Assembly overview - final drive	84
1.2 Removing and installing O-ring on cover for front final drive	87
2 Gear oil	89
2.1 Checking gear oil level	89
2.2 Draining and filling gear oil	92
3 Oil seals	96
3.1 Overview of fitting locations - oil seals	96
3.2 Renewing left oil seal	96
3.3 Renewing right oil seal	100
4 Differential	102
4.1 Removing and installing left flange shaft	102
4.2 Removing and installing right flange shaft	106
5 Centre differential	110
6 Transfer box	111
7 Gearbox control system	112
7.1 Overview of fitting locations - gearbox control system	112