

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
<b>2 Safety information</b> .....	<b>2</b>
<b>3 Repair instructions</b> .....	<b>3</b>
<b>10 - Removing and installing engine</b> .....	<b>4</b>
<b>1 Removing and installing engine</b> .....	<b>4</b>
1.1 Removing engine .....	4
1.2 Separating engine and gearbox .....	37
1.3 Removing engine from scissor-type assembly platform .....	43
1.4 Securing engine to engine and gearbox support .....	44
1.5 Installing engine .....	46
<b>2 Assembly mountings</b> .....	<b>50</b>
2.1 Assembly overview - assembly mountings .....	50
2.2 Supporting engine in installation position .....	54
2.3 Removing and installing engine mountings .....	56
2.4 Removing and installing power unit mounting senders .....	60
2.5 Removing and installing gearbox mountings .....	61
2.6 Removing and installing power unit mounting control unit J931 .....	63
<b>3 Engine cover panel</b> .....	<b>66</b>
3.1 Removing and installing engine cover panel .....	66
<b>13 - Crankshaft group</b> .....	<b>67</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>67</b>
1.1 Assembly overview - cylinder block (pulley end) .....	67
1.2 Assembly overview - sealing flange (pulley end) .....	67
1.3 Removing and installing poly V-belts .....	67
1.4 Removing and installing poly V-belt tensioner .....	69
1.5 Removing and installing vibration damper .....	69
1.6 Removing and installing bracket for ancillaries .....	69
1.7 Removing and installing engine support .....	70
1.8 Renewing crankshaft oil seal (pulley end) .....	71
1.9 Removing and installing sealing flange (pulley end) .....	71
<b>2 Cylinder block (gearbox end)</b> .....	<b>72</b>
<b>3 Crankshaft</b> .....	<b>73</b>
<b>4 Balance shaft</b> .....	<b>74</b>
<b>5 Pistons and conrods</b> .....	<b>75</b>
<b>15 - Cylinder head, valve gear</b> .....	<b>76</b>
<b>1 Timing chain cover</b> .....	<b>76</b>
1.1 Assembly overview - timing chain cover .....	76
1.2 Removing and installing timing chain cover .....	76
<b>2 Chain drive</b> .....	<b>77</b>
2.1 Assembly overview - camshaft timing chains .....	77
2.2 Assembly overview - drive chain for oil pump .....	77
2.3 Removing camshaft timing chain from camshafts .....	77
2.4 Removing and installing camshaft timing chain .....	78
2.5 Removing and installing chain tensioner .....	79
<b>3 Cylinder head</b> .....	<b>80</b>
<b>4 Valve gear</b> .....	<b>81</b>
4.1 Assembly overview - valve gear .....	81



4.2	Measuring axial clearance of camshaft	81
4.3	Measuring radial clearance of camshaft	81
4.4	Removing and installing camshaft	81
4.5	Removing and installing cam actuators	81
4.6	Removing and installing camshaft control valve 1 N205	86
4.7	Removing and installing valve stem oil seals	86
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>87</b>
<b>17</b>	<b>- Lubrication</b>	<b>88</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>88</b>
1.1	Assembly overview - sump/oil pump	88
1.2	Engine oil	88
1.3	Removing and installing lower part of sump	88
1.4	Removing and installing upper part of sump	88
1.5	Removing and installing oil pump	89
1.6	Removing and installing oil level and oil temperature sender G266	89
<b>2</b>	<b>Engine oil cooler</b>	<b>90</b>
<b>3</b>	<b>Crankcase breather</b>	<b>91</b>
3.1	Assembly overview - crankcase breather system	91
3.2	Removing and installing oil separator	91
<b>4</b>	<b>Oil filter/oil pressure switches</b>	<b>92</b>
4.1	Assembly overview - oil filter	92
4.2	Assembly overview - oil pressure switches/oil pressure control	92
4.3	Removing and installing oil filter housing	92
4.4	Removing and installing oil pressure switch F22	92
4.5	Removing and installing oil temperature sender G8	93
4.6	Removing and installing oil pressure sender G10	93
4.7	Checking oil pressure	93
4.8	Removing and installing valve for oil pressure control N428	93
4.9	Removing and installing piston cooling jet control valve N522	94
<b>19</b>	<b>- Cooling</b>	<b>95</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>95</b>
1.1	Connection diagram - coolant hoses	95
1.2	Checking cooling system for leaks	99
1.3	Draining and filling cooling system	99
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>105</b>
2.1	Assembly overview - coolant pump/thermostat	105
2.2	Assembly overview - electric coolant pump	105
2.3	Assembly overview - coolant valves	108
2.4	Removing and installing electric coolant pump	110
2.5	Removing and installing coolant pump	114
2.6	Removing and installing housing for map-controlled engine cooling system thermostat F265	114
2.7	Removing and installing map-controlled engine cooling system thermostat F265	117
2.8	Removing and installing radiator outlet coolant temperature sender G83	118
2.9	Removing and installing engine temperature sender G407	118
2.10	Removing and installing coolant valves	120
<b>3</b>	<b>Coolant pipes</b>	<b>123</b>
3.1	Assembly overview - coolant pipes	123
3.2	Removing and installing coolant pipes	127
<b>4</b>	<b>Radiator/radiator fans</b>	<b>139</b>
4.1	Assembly overview - radiator/radiator fans	139
4.2	Removing and installing radiator	142
4.3	Removing and installing radiator cowl	145

4.4	Removing and installing radiator fan V7	146
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>147</b>
<b>1</b>	<b>Turbocharger</b>	<b>147</b>
1.1	Assembly overview - turbochargers	147
1.2	Removing and installing turbochargers	147
1.3	Removing and installing overrun air recirculation valve	148
<b>2</b>	<b>Charge air system</b>	<b>149</b>
2.1	Assembly overview - charge air system	149
2.2	Assembly overview - hose connections for charge air system	150
2.3	Removing and installing air intake pipe	150
2.4	Removing and installing charge air cooler	155
2.5	Removing and installing charge pressure sender G31	157
2.6	Removing and installing charge pressure sender 2 G447	157
2.7	Checking charge air system for leaks	158
<b>24</b>	<b>Mixture preparation - injection</b>	<b>160</b>
<b>1</b>	<b>Injection system</b>	<b>160</b>
1.1	Overview of fitting locations - injection system	160
1.2	Checking fuel system for leaks	171
<b>2</b>	<b>Vacuum system</b>	<b>172</b>
2.1	Assembly overview - vacuum system	172
2.2	Checking vacuum system	174
2.3	Removing and installing switch valve for mechanical coolant pump	174
2.4	Removing and installing charge pressure control solenoid valve	175
2.5	Removing and installing vacuum line	175
<b>3</b>	<b>Air filter</b>	<b>177</b>
3.1	Assembly overview - air filter housing	177
3.2	Removing and installing air filter housing	178
<b>4</b>	<b>Intake manifold</b>	<b>179</b>
4.1	Assembly overview - intake manifold	179
4.2	Removing and installing intake manifold	179
4.3	Removing and installing throttle valve module GX3	182
<b>5</b>	<b>Injectors</b>	<b>185</b>
5.1	Assembly overview - fuel rail with injectors	185
5.2	Removing and installing fuel rail	185
5.3	Removing and installing injectors	189
5.4	Cleaning injectors	189
<b>6</b>	<b>Senders and sensors</b>	<b>190</b>
6.1	Removing and installing actuator for structure-borne sound R214	190
6.2	Removing and installing control unit for structure-borne sound J869	190
6.3	Assembly overview - pressure differential sender	191
6.4	Removing and installing intake manifold pressure sender	191
6.5	Removing and installing fuel pressure sender G247	191
6.6	Removing and installing fuel pressure sender for low pressure G410	192
6.7	Removing and installing pressure differential sender	192
<b>7</b>	<b>High-pressure pump</b>	<b>193</b>
7.1	Assembly overview - high-pressure pump	193
7.2	Removing and installing high-pressure pump	193
7.3	Removing and installing high-pressure pipe	197
<b>8</b>	<b>Lambda probe</b>	<b>202</b>
8.1	Assembly overview - Lambda probe	202
8.2	Removing and installing Lambda probe	202
<b>9</b>	<b>Engine control unit</b>	<b>203</b>



9.1	Assembly overview - engine control unit	203
9.2	Removing and installing engine control unit J623	203
<b>26</b>	<b>- Exhaust system</b>	<b>205</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>205</b>
1.1	Assembly overview - silencers	205
1.2	Removing and installing front silencers	209
1.3	Separating exhaust pipes/silencers	210
1.4	Removing and installing silencers	211
1.5	Stress-free alignment of exhaust system	213
1.6	Checking exhaust system for leaks	214
<b>2</b>	<b>Emission control system</b>	<b>215</b>
2.1	Assembly overview - emission control system	215
2.2	Removing and installing catalytic converter	215
2.3	Removing and installing exhaust flap control unit J883	219
<b>28</b>	<b>- Ignition system</b>	<b>220</b>
<b>1</b>	<b>Ignition system</b>	<b>220</b>
1.1	Assembly overview - ignition system	220
1.2	Removing and installing ignition coil	220
1.3	Removing and installing knock sensor 1 G61	224
1.4	Removing and installing Hall senders	225
1.5	Removing and installing engine speed sender G28	226