

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	21
1.3 Removing engine from scissor-type assembly platform	28
1.4 Securing engine to engine and gearbox support	30
1.5 Installing engine	32
2 Assembly mountings	36
2.1 Assembly overview - assembly mountings	36
2.2 Supporting engine in installation position	40
2.3 Removing and installing engine mountings	42
2.4 Removing and installing power unit mounting senders	47
2.5 Removing and installing gearbox mountings	48
2.6 Removing and installing power unit mounting control unit J931	51
3 Engine cover panel	52
13 - Crankshaft group	53
1 Cylinder block (pulley end)	53
1.1 Assembly overview - cylinder block (pulley end)	53
1.2 Assembly overview - sealing flange (pulley end)	53
1.3 Removing and installing poly V-belt	53
1.4 Removing and installing poly V-belt tensioner	53
1.5 Removing and installing vibration damper	53
1.6 Removing and installing bracket for ancillaries	54
1.7 Removing and installing engine support	54
1.8 Renewing crankshaft oil seal (pulley end)	55
1.9 Removing and installing sealing flange (pulley end)	55
2 Cylinder block (gearbox end)	56
3 Crankshaft	57
4 Balance shaft	58
5 Pistons and conrods	59
15 - Cylinder head, valve gear	60
1 Timing chain cover	60
2 Chain drive	61
2.1 Assembly overview - camshaft timing chains	61
2.2 Assembly overview - drive chain for high-pressure pump	61
2.3 Assembly overview - drive chain for oil pump	61
2.4 Assembly overview - intermediate drive	61
2.5 Removing camshaft timing chain from camshafts	61
2.6 Removing and installing camshaft timing chain	62
2.7 Removing and installing drive chain for high-pressure pump	62
2.8 Installing intermediate drive	62
3 Cylinder head	63
3.1 Assembly overview - cylinder head	63
3.2 Assembly overview - cylinder head cover	63

3.3	Removing and installing cylinder head	63
3.4	Removing and installing cylinder head cover	63
3.5	Removing and installing seals for injectors	64
3.6	Checking compression	64
4	Valve gear	65
4.1	Assembly overview - valve gear	65
4.2	Measuring axial clearance of camshaft	65
4.3	Measuring radial clearance of camshaft	65
4.4	Removing and installing camshaft	65
4.5	Removing and installing valve stem oil seals	65
5	Inlet and exhaust valves	66
17 - Lubrication		67
1	Sump/oil pump	67
1.1	Assembly overview - sump/oil pump	67
1.2	Engine oil	67
1.3	Removing and installing lower part of sump	67
1.4	Removing and installing upper part of sump	67
1.5	Removing and installing oil pump	67
1.6	Removing and installing oil level and oil temperature sender G266	68
2	Engine oil cooler	69
3	Crankcase breather	70
4	Oil filter/oil pressure switches	71
19 - Cooling		72
1	Cooling system/coolant	72
1.1	Connection diagram - coolant hoses	72
1.2	Checking cooling system for leaks	76
1.3	Draining and filling cooling system	76
2	Coolant pump/thermostat assembly	82
2.1	Assembly overview - coolant pump	82
2.2	Assembly overview - electric coolant pump	82
2.3	Assembly overview - thermostat	83
2.4	Assembly overview - coolant temperature senders	83
2.5	Assembly overview - coolant valves	83
2.6	Removing and installing electric coolant pump	84
2.7	Removing and installing coolant pump	86
2.8	Removing and installing thermostat	86
2.9	Removing and installing coolant temperature sender G62	86
2.10	Removing and installing temperature sender for engine temperature regulation G694	86
2.11	Removing and installing coolant valves	86
3	Coolant pipes	88
3.1	Assembly overview - coolant pipes	88
3.2	Removing and installing coolant pipes	91
4	Radiator/radiator fans	99
4.1	Assembly overview - radiator/radiator fans	99
4.2	Removing and installing radiator	102
4.3	Removing and installing radiator cowl	106
4.4	Removing and installing radiator fan V7	108
21 - Turbocharging/supercharging		110
1	Turbocharger	110
2	Charge air system	111
2.1	Assembly overview - charge air system	111

2.2	Assembly overview - hose connections for charge air system	113
2.3	Removing and installing charge air cooler	113
2.4	Removing and installing charge pressure sender G31	115
2.5	Removing and installing intake air temperature sender G42	115
2.6	Checking charge air system for leaks	115
23 - Mixture preparation - injection	116
1	Injection system	116
1.1	Overview - fuel system	116
1.2	Overview of fitting locations - injection system	116
1.3	Filling and bleeding fuel system	124
1.4	Checking fuel system for leaks	124
2	Vacuum system	125
3	Air filter	126
3.1	Assembly overview - air filter housing	126
3.2	Removing and installing air filter housing	127
4	Intake manifold	129
4.1	Assembly overview - intake manifold	129
4.2	Removing and installing upper part of intake manifold	129
4.3	Removing and installing lower part of intake manifold	130
4.4	Removing and installing intake manifold flap motor V157	130
4.5	Removing and installing throttle valve module J338	130
5	Injectors/high-pressure reservoir (rail)	131
5.1	Assembly overview - injectors	131
5.2	Checking injectors	131
5.3	Performing adaption of correction values for injectors	131
5.4	Checking for injectors sticking open	131
5.5	Checking return flow rate of injectors with engine running	133
5.6	Checking return flow rate of injectors at starter cranking speed	134
5.7	Checking pressure retention valve in fuel return line	135
5.8	Removing and installing injectors	135
5.9	Removing and installing high-pressure pipes	137
5.10	Removing and installing high-pressure reservoir (rail)	137
6	Senders and sensors	139
6.1	Removing and installing air mass meter G70	139
6.2	Removing and installing fuel temperature sender G81	140
6.3	Removing and installing fuel pressure sender G247	140
6.4	Removing and installing fuel pressure sender for low pressure G410	140
6.5	Checking fuel pressure regulating valve N276	140
6.6	Removing and installing fuel pressure regulating valve N276	142
6.7	Removing and installing pressure differential sender G505	143
7	High-pressure pump	144
8	Lambda probe	145
8.1	Assembly overview - Lambda probe	145
8.2	Removing and installing Lambda probe	145
9	Engine control unit	146
9.1	Assembly overview - engine control unit	146
9.2	Removing and installing engine/motor control unit J623	146
26 - Exhaust system	148
1	Exhaust pipes/silencers	148
1.1	Assembly overview - silencers	148
1.2	Removing and installing front exhaust pipe	150
1.3	Separating exhaust pipes/silencers	152

1.4	Removing and installing silencers	153
1.5	Stress-free alignment of exhaust system	155
1.6	Checking exhaust system for leaks	155
2	Emission control system	156
2.1	Assembly overview - emission control system	156
2.2	Removing and installing emission control module	156
2.3	Removing and installing ammonia trap	159
3	Exhaust gas temperature regulation	160
3.1	Assembly overview - exhaust gas temperature regulation	160
3.2	Removing and installing exhaust gas temperature sender 1 G235	160
3.3	Removing and installing exhaust gas temperature sender 2 G448	160
3.4	Removing and installing exhaust gas temperature sender 3 G495	160
3.5	Removing and installing exhaust gas temperature sender 4 G648	161
4	Exhaust gas recirculation	163
5	Exhaust manifolds	164
5.1	Assembly overview - exhaust manifold	164
5.2	Removing and installing exhaust manifolds	164
28 - Glow plug system	168	
1	Glow plug system	168
1.1	Assembly overview - glow plug system	168
1.2	Removing and installing glow plug	168
1.3	Removing and installing automatic glow period control unit J179	168
1.4	Removing and installing Hall sender G40	168
1.5	Removing and installing engine speed sender G28	168