

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on vehicles with start/stop system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
1.6 Safety precautions when working on the SCR system	3
2 Repair instructions	5
2.1 Rules for cleanliness	5
2.2 Test conditions	5
2.3 Contact corrosion	5
2.4 Routing and attachment of pipes, hoses and wiring	6
2.5 Identification plates	6
2.6 Use of impact wrenches	6
2.7 Nuts, bolts	7
2.8 Checking fuel system for leaks	7
20 - Fuel supply system	8
1 Safety information	8
2 Fuel tank	9
2.1 Assembly overview - fuel tank	9
2.2 Draining fuel tank	18
2.3 Removing and installing fuel tank	26
2.4 Removing and installing misfuelling prevention device	47
2.5 Deactivating misfuelling prevention device	50
3 Fuel delivery unit/fuel gauge senders	52
3.1 Assembly overview - fuel delivery unit/fuel gauge senders	52
3.2 Removing and installing fuel delivery unit/fuel gauge senders	56
3.3 Bleeding fuel line for metering pump	68
3.4 Removing and installing fuel gauge sender G	69
4 Plug-in connectors	71
4.1 Disconnecting plug-in connectors	71
5 Fuel filter	76
5.1 Assembly overview - fuel filter	76
5.2 Assembly overview - water separator	77
5.3 Removing and installing water separator	78
6 Activated charcoal filter system	81
6.1 Connection diagram - activated charcoal filter system	81
6.2 Assembly overview - activated charcoal filter system	85
6.3 Removing and installing activated charcoal filter	89
6.4 Removing and installing fuel tank leak detection module GX36	90
6.5 Removing and installing control unit for fuel tank leak detection J909	92
6.6 Checking fuel system for leaks - vehicles with fuel tank leak detection module GX36	92
6.7 Operation of fuel tank leak detection - vehicles with fuel tank leak detection module GX36	100
6.8 Operation of activated charcoal filter system - vehicles with high-voltage system	100
7 Accelerator mechanism	102
7.1 Assembly overview - accelerator pedal module	102
7.2 Removing and installing accelerator pedal module GX2	104
8 Fuel pump	106
8.1 Checking fuel system pressurisation pump G6	106
8.2 Removing and installing suction-jet pump	117



8.3 Removing and installing fuel pump control unit J538 118