

Contents

00 - Technical data	1
1 Safety precautions	1
2 Repair instructions	2
2.1 Rules for cleanliness	2
2.2 General notes	2
2.3 Contact corrosion	2
2.4 ESD (electrostatic discharge) workplace	2
2.5 Routing and attachment of lines and wiring	3
3 Battery	4
3.1 Battery - general notes	4
3.2 Battery types	4
4 Maintenance	5
4.1 “Mandatory report” form	5
5 Procedures for additional maintenance work	6
5.1 Second battery A1	6
5.2 Personal danger alarm system	6
5.3 Fire extinguisher system	6
5.4 Emergency exit system	7
5.5 Running gear	7
27 - Starter, current supply, CCS	9
1 Battery	9
1.1 Safety measures and procedures to be followed	9
1.2 Electrical system and power supply for special security components	12
1.3 Exploded view - battery	19
1.4 Disconnecting and connecting battery	21
1.5 Removing and installing battery	23
1.6 Inspecting and classifying battery, 48 V A6	29
1.7 Charging second battery A1	30
1.8 Checking second battery A1	30
1.9 Removing and installing rear stop command light G955	30
2 Voltage converter	32
2.1 Exploded view - voltage converter	32
2.2 Removing and installing voltage converter	33
3 Battery isolation relay J7	35
3.1 Removing and installing battery isolation relay J7	35
91 - Communication	37
1 Telephone system	37
1.1 Removing and installing microphone unit in front roof module R164	37
1.2 Removing and installing aerial amplifier for mobile telephone R86	37
2 Emergency services radio system	39
2.1 Overview - emergency services radio system	39
2.2 Removing and installing emergency services radio system	40
96 - Lights, bulbs, switches - interior	42
1 Personal danger alarm system	42
1.1 Overview - personal danger alarm system	42
1.2 Checking function	50
1.3 Checking siren	51
1.4 Diagnosis of special security equipment	52
1.5 Checking voltage of batteries	53



1.6	Assignment of buttons on operating unit with buttons for special functions EX42/switch module 1 in centre console EX23	54
1.7	Removing and installing personal danger alarm system	55
2	Fire extinguisher system	61
2.1	General notes	61
2.2	Overview - fire extinguisher system	62
2.3	Removing and installing extinguishing agent containers	68
2.4	Removing and installing fire extinguisher system control unit J475	70
2.5	Fire extinguisher system maintenance guidelines	71
3	Emergency exit system	73
3.1	General notes	73
3.2	Overview - emergency exit system	74
3.3	Renewing jettison bolts	78
3.4	Removing and installing emergency exit control unit J1051	78
3.5	Renewing battery in emergency exit control unit J1051	79
4	Accident data recorder (ADR)	81
4.1	Overview - accident data recorder (ADR)	81
4.2	General information and function	83
4.3	Deleting manually stored events	84
4.4	Checking function of accident data recorder G396	85
4.5	Removing and installing accident data recorder G396	87
5	Emergency fresh air system	88
5.1	General information and function	88
5.2	Overview - emergency fresh air system	88
5.3	Removing and installing oxygen tanks	91
6	Convoy display	92
6.1	General notes	92
6.2	Overview - convoy display	92
7	Front, mirror and rear flashing lights	94
7.1	General notes	94
7.2	Overview - front, mirror and rear flashing lights	94
7.3	Removing and installing flashing lights	99
97 - Wiring		102
1	Electronics box in luggage compartment	102
1.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	102
1.2	Exploded view - relay and fuse carriers for special vehicles	104
1.3	Removing and installing relay and fuse carriers for special vehicles	106
1.4	Removing and installing warning buzzer switch E296	107
1.5	Removing and installing terminal 40 wiring junction 2 TV67	108
1.6	Removing and installing terminal 30 wiring junction 3 TV28	109
2	Fitting locations, fuse assignment	111
3	Releasing and dismantling connector housings	112
4	Cleaning contact surfaces	113
5	Repairing aerial wires	114
6	Fibre optic cables	115
7	Vehicle diagnostic, testing and information systems	116