

Contents

00 - Technical data	1
1 Safety precautions	1
2 Repair instructions	2
20 - Fuel supply system	3
1 Removing and installing fuel delivery unit/fuel gauge senders	3