

Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Technical data | 1 |
| 1.1 Technical data | 1 |
| 1.2 Brakes | 1 |
| 2 Prescribed disposal procedure for oil-filled components | 2 |
| 2.1 Prescribed disposal procedure for oil-filled components | 2 |
| 2.2 Draining pressure container | 2 |
| 45 - Anti-locking brake system | 3 |
| 1 General information on anti-locking brake system | 3 |
| 1.1 General information on anti-locking brake system | 3 |
| 1.2 Notes on ABS repair work | 3 |
| 1.3 High and low-pressure test | 4 |
| 2 Removing and installing hydraulic unit | 5 |
| 2.1 Removing and installing hydraulic unit | 5 |
| 2.2 Hydraulic pipe connections for vehicles with ABS/EDL | 9 |
| 3 Removing and installing electronic control system components | 13 |
| 3.1 Removing and installing electronic control system components | 13 |
| 3.2 Removing and installing ABS control unit | 13 |
| 3.3 Removing and installing combi relay | 14 |
| 4 Removing and installing ABS system components | 15 |
| 4.1 Removing and installing ABS system components | 15 |
| 4.2 Front axle | 15 |
| 4.3 Rear axle | 19 |
| 46 - Brakes, Brake mechanics | 22 |
| 1 Servicing front brake | 22 |
| 1.1 Servicing front brake | 22 |
| 1.2 Exploded view of Teves/Ate single-piston brake | 22 |
| 1.3 Removing and installing brake pads - Teves/Ate single-piston brake | 25 |
| 1.4 Exploded view of Girling/Lucas single-piston brake | 28 |
| 1.5 Removing and installing brake pads - Girling/Lucas single-piston brake | 30 |
| 1.6 Exploded view of dual-piston brake | 33 |
| 1.7 Removing and installing brake pads - dual-piston brake | 35 |
| 2 Servicing rear brake | 37 |
| 2.1 Servicing rear brake | 37 |
| 2.2 Exploded view of rear brake up to vehicle identification no. 8G_P_005 533 | 38 |
| 2.3 Exploded view of rear brake as of vehicle identification no. 8G_P_005 534 | 41 |
| 2.4 Removing and installing brake pads | 44 |
| 2.5 Basic setting of rear brake | 45 |
| 3 Handbrake | 47 |
| 3.1 Handbrake | 47 |
| 3.2 Exploded view of handbrake | 47 |
| 3.3 Removing and installing handbrake lever | 49 |
| 3.4 Adjusting handbrake | 50 |
| 4 Removing and installing pedal cluster - exploded view | 52 |
| 4.1 Removing and installing pedal cluster - exploded view | 52 |
| 47 - Brakes, Brake hydraulics | 58 |
| 1 Pressurised leak test | 58 |
| 1.1 Pressurised leak test | 58 |
| 2 Servicing front brake caliper | 59 |



| | | |
|----------|--|------------|
| 2.1 | Servicing front brake caliper | 59 |
| 2.2 | Servicing front brake caliper - Teves/Ate single-piston version | 59 |
| 2.3 | Removing and installing piston for front brake caliper - Teves/Ate | 62 |
| 2.4 | Servicing front brake caliper - Girling/Lucas single-piston version | 65 |
| 2.5 | Removing and installing piston for front brake caliper - Girling/Lucas | 67 |
| 2.6 | Servicing brake caliper - dual-piston version | 70 |
| 2.7 | Removing and installing piston for front brake caliper - dual-piston version | 73 |
| 3 | Servicing rear brake caliper | 75 |
| 3.1 | Servicing rear brake caliper | 75 |
| 3.2 | Exploded view of rear brake caliper | 76 |
| 3.3 | Removing and installing piston for rear brake caliper | 79 |
| 4 | Bleeding brake system | 82 |
| 4.1 | Bleeding brake system | 82 |
| 4.2 | Changing brake fluid (every 2 years) | 84 |
| 5 | Pneumatic brake servo/brake master cylinder | 86 |
| 5.1 | Pneumatic brake servo/brake master cylinder | 86 |
| 5.2 | Exploded view: Vehicles with 4 and 5-cyl. engine | 87 |
| 5.3 | Exploded view: Vehicles with 6-cylinder engine | 94 |
| 5.4 | Replacing sealing plug for primary piston circuit | 100 |
| 6 | Hydraulic brake servo/brake master cylinder | 102 |
| 6.1 | Hydraulic brake servo/brake master cylinder | 102 |
| 6.2 | Vehicles with 4-cyl. 5V engine/6-cyl. engine (right-hand drive) | 102 |
| 7 | Pressure container for hydraulic brake servo | 108 |
| 7.1 | Pressure container for hydraulic brake servo | 108 |
| 7.2 | Exploded view of pressure container | 108 |
| 8 | Hydraulic brake servo system pressure test | 112 |
| 8.1 | Hydraulic brake servo system pressure test | 112 |
| 8.2 | Fault table | 112 |
| 8.3 | Connecting tester V.A.G 1441 for pressure test | 112 |
| 8.4 | Checking operating pressure | 114 |
| 8.5 | Checking gas filling pressure of pressure container | 115 |
| 8.6 | Checking pressure relief valve | 115 |
| 8.7 | Checking non-return valve | 115 |
| 9 | Brake pressure regulator | 116 |
| 9.1 | Brake pressure regulator | 116 |
| 9.2 | Exploded view of brake pressure regulator | 116 |
| 9.3 | Checking brake pressure regulator | 118 |
| 9.4 | Adjusting brake pressure regulator | 118 |
| 9.5 | Pressurised leak test | 119 |