

Contents

01 - Self-diagnosis, Electrical check	1
1 ABS, ABS/EDL self-diagnosis	1
1.1 ABS, ABS/EDL self-diagnosis	1
1.2 Technical data of self-diagnosis	1
1.3 Safety precautions	1
1.4 Function of ABS and ABS/EDL	1
1.5 Additional functions with ABS/EDL	2
1.6 Connecting vehicle diagnostic, testing and information system VAS 5051/ fault reader V.A.G 1551 and selecting functions	2
2 Interrogating and erasing fault memory	5
2.1 Interrogating and erasing fault memory	5
2.2 Fault table	6
3 Reading measured value block	14
3.1 Reading measured value block	14
4 Electrical check - vehicles with ABS/EDL only	16
4.1 Electrical check - vehicles with ABS/EDL only	16
4.2 Connecting test box V.A.G 1598 A	17
5 Checking wiring of diagnostic connectors	22
5.1 Checking wiring of diagnostic connectors	22
5.2 Checking power supply for "black" diagnostic connector	23
5.3 Checking wiring between "white" diagnostic connector and ABS control unit	23