

Contents

01 - Self-diagnosis	1
1 Connecting vehicle diagnostic, testing and information system VAS 5051/ fault reader V.A.G 1551	1
1.1 Connecting vehicle diagnostic, testing and information system VAS 5051/ fault reader V.A.G 1551	1
2 Immobilizer self-diagnosis - fixed code	3
2.1 Immobilizer self-diagnosis - fixed code	3
2.2 General	3
2.3 Starting immobilizer self-diagnosis	4
2.4 Interrogating fault memory	5
2.5 Erasing fault memory	5
2.6 Fault table	6
2.7 Reading measured value block	7
2.8 Adaption	8
2.9 Matching of vehicle keys	9
2.10 Procedure in the event of loss of keys	11
2.11 Adaption following replacement of engine control unit	11
2.12 Adaption following replacement of immobilizer control unit	12
2.13 Emergency starting function with V.A.G 1551	12
3 Immobilizer self-diagnosis - variable code	13
3.1 Immobilizer self-diagnosis - variable code	13
3.2 General	14
3.3 Starting immobilizer self-diagnosis	15
3.4 Interrogating fault memory	15
3.5 Erasing fault memory	16
3.6 Fault table	17
3.7 Reading measured value block	18
3.8 Adaption	19
3.9 Matching of vehicle keys	20
3.10 Procedure in the event of loss of keys	22
3.11 Adaption following replacement of engine control unit	22
3.12 Adaption following replacement of immobilizer control unit	23
3.13 Emergency starting function with V.A.G 1551	24
4 Cruise control system self-diagnosis	25
4.1 Cruise control system self-diagnosis	25
4.2 Diesel engine	25
27 - Starter, Current supply, Cruise control system	28
1 Battery	28
1.1 Battery	28
1.2 Removing and installing battery	28
1.3 Visual inspection	30
1.4 Checking electrolyte level	30
1.5 No-load voltage measurement	33
1.6 Checking specific gravity of electrolyte	34
1.7 Measuring voltage under load	36
1.8 Charging battery	37
1.9 Rapid charging/boost starting	39
2 Removing and installing alternator	39
2.1 Removing and installing alternator	39
2.2 4-cylinder 2V and 4V petrol engine	39
2.3 4-cylinder 5V petrol engine	41
2.4 5-cylinder engine	44
2.5 6-cylinder engine	46

2.6	TDI engine	49
3	Removing and installing starter	52
3.1	Removing and installing starter	52
3.2	4 and 5-cylinder petrol engine	52
3.3	6-cylinder engine	53
3.4	TDI engine	53
4	Removing and installing cruise control system	54
4.1	Removing and installing cruise control system	54
4.2	Cruise control system for vehicles with diesel engine	54
4.3	Exploded view of cruise control system for vehicles with petrol engine	55
4.4	Checking cruise control vacuum system	61
90 - Gauges, Instruments	63	
1	Dash panel insert	63
1.1	Dash panel insert	63
1.2	Exploded view of VDO dash panel insert	63
1.3	Exploded view of Nippon Seiki dash panel insert	66
1.4	Removing and installing dash panel insert	69
1.5	Assignment of lamps in dash panel insert	70
1.6	Assignment of contacts at multi-pin connectors at dash panel insert	73
1.7	Removing and installing connector for multi-pin connections	76
2	Checking dash panel insert components	77
2.1	Checking dash panel insert components	77
2.2	Checking voltage stabilizer	78
2.3	Checking and adjusting fuel gauge	79
2.4	Checking oil pressure switch - vehicles with mini-check system	80
2.5	Checking oil pressure switch - vehicles with auto-check system	81
2.6	Checking coolant temperature gauge	82
2.7	Checking speedometer sender	86
2.8	Checking speed sender signal at dash panel wiring harness	86
2.9	Checking engine-speed signal	87
3	Removing and installing dash panel insert components	88
3.1	Removing and installing dash panel insert components	88
3.2	VDO dash panel insert	88
3.3	Removing and installing printed-circuit board (VDO)	96
3.4	Removing and installing front frame (VDO)	96
3.5	Removing and installing speedometer (VDO)	96
3.6	Removing and installing rev counter (VDO)	97
3.7	Removing and installing fuel gauge (VDO)	97
3.8	Removing and installing coolant temperature gauge (VDO)	98
3.9	Removing and installing digital clock (VDO)	98
3.10	Nippon Seiki dash panel insert	99
3.11	Removing and installing printed-circuit board (Nippon Seiki)	106
3.12	Removing and installing front frame (Nippon Seiki)	106
3.13	Removing and installing speedometer (Nippon Seiki)	108
3.14	Removing and installing rev counter (Nippon Seiki)	108
3.15	Removing and installing fuel gauge (Nippon Seiki)	109
3.16	Removing and installing coolant temperature gauge (Nippon Seiki)	110
3.17	Removing and installing digital clock (Nippon Seiki)	110
3.18	Removing and installing illumination control for dash panel insert, switches and instruments	111
3.19	Removing and installing cap-type lamps	111
3.20	Removing and installing display unit for mini-check system	112
3.21	Removing and installing display unit for auto-check system/on-board computer	112
3.22	Removing and installing voltage stabilizer	112
3.23	Removing and installing gear selection indicator	113
3.24	Checking 5-pin connector behind dash panel insert	113

3.25	5-pin connector for gear selection indicator	114
3.26	5-pin connector for ambient temperature gauge	115
3.27	Removing and installing ambient temperature gauge	117
3.28	Checking ambient temperature gauge	117
3.29	Removing and installing ambient temperature gauge sender	118
4	Additional instruments	119
4.1	Additional instruments	119
4.2	Servicing additional instruments - left-hand drive vehicles	119
4.3	Removing and installing components of additional instruments - left-hand drive vehicles	122
4.4	Servicing additional instruments - right-hand drive vehicles	124
5	Checking additional instruments	127
5.1	Checking additional instruments	127
5.2	Checking oil-pressure gauge	127
5.3	Checking oil-temperature gauge	129
5.4	Checking voltmeter	130
92 - Windscreen wipe and wash system	131	
1	Servicing windscreen wiper system	131
1.1	Servicing windscreen wiper system	131
2	Servicing windscreen and headlight washer system	136
2.1	Servicing windscreen and headlight washer system	136
2.2	Removing and installing reservoir for windscreen and headlight washer system	144
2.3	Removing and installing spray jets of windscreen washer system	144
94 - Lights, Lamps, Switches - exterior	147	
1	Servicing headlights	147
1.1	Servicing headlights	147
1.2	Exploded view of headlights	148
1.3	Exploded view of DE headlight	153
1.4	Servicing electric headlight range control	160
1.5	Removing and installing positioning motor	162
2	Servicing taillight	163
2.1	Servicing taillight	163
2.2	Removing and installing number plate lights	166
2.3	Exploded view of additional brake light	167
2.4	Removing and installing additional brake light	168
2.5	Changing bulb for additional brake light	168
2.6	Removing and installing side-mounted turn signal indicator	169
3	Steering column switch	170
3.1	Steering column switch	170
3.2	Exploded view of steering column switch	170
3.3	Removing and installing steering column switch	175
4	Removing and installing ignition/starter switch	176
4.1	Removing and installing ignition/starter switch	176
5	Removing and installing steering lock with lock cylinder	178
5.1	Removing and installing steering lock with lock cylinder	178
96 - Lights, Lamps, Switches - interior, anti-theft protection	181	
1	Servicing switches in centre console	181
1.1	Servicing switches in centre console	181
1.2	Exploded view	181
1.3	Removing and installing pushbutton switch	183
1.4	Replacing bulbs in pushbutton switches	184
1.5	Checking switch for electrically heated mirrors and rear window blower 07.92 ä	185
2	Servicing electric window lifters	187

2.1	Servicing electric window lifters	187
2.2	Exploded view of front electric window lifters	188
2.3	Dismantling and assembling front electric window lifters	192
2.4	Exploded view of rear electric window lifters	196
2.5	Removing and installing rear window lifter motor	197
3	Servicing blower for rear window	200
3.1	Servicing blower for rear window	200
3.2	Exploded view	200
3.3	Checking blower for rear window	202
4	Servicing components of manual convertible top actuator mechanism	204
4.1	Servicing components of manual convertible top actuator mechanism	204
4.2	Exploded view	204
4.3	Checking opening of convertible top - vehiclesä06.94	208
4.4	Checking closing of convertible top - vehiclesä06.94	210
4.5	Switch and solenoid for convertible top release lock at roof frame	211
4.6	Emergency unlocking for release lock on left of roof frame	212
4.7	Removing and installing convertible top operation control unit -J256	212
5	Servicing components of electrohydraulic convertible top actuator mechanism	214
5.1	Servicing components of electrohydraulic convertible top actuator mechanism	214
5.2	Exploded view	214
5.3	Exploded view of connectors	218
5.4	Removing and installing convertible top switch -E137	222
5.5	Removing and installing switches for electrohydraulic convertible top actuator mechanism	223
5.6	Removing and installing switch and solenoid for convertible top release lock at roof frame	225
5.7	Removing and installing convertible top operation control unit -J256	226
6	Servicing immobilizer	228
6.1	Servicing immobilizer	228
6.2	Exploded view	228
6.3	Removing and installing immobilizer control unit	229
6.4	Replacing immobilizer reading coil -D2	230
6.5	Assignment of contacts at control unit connector	231
6.6	Procedure for replacing lock set or immobilizer control unit	231
6.7	System test	232
7	Servicing remote control for central locking system	233
7.1	Servicing remote control for central locking system	233
7.2	General	233
7.3	Checking operation	233
7.4	Replacing transmitter batteries	234
7.5	Removing and installing remote control unit	234
7.6	Transmitter initialisation	235
7.7	Fault-finding	235
97 - Wiring	237	
1	Relay plate	237
1.1	Relay plate	237
1.2	Removing and installing relay plate with fuse box	237
1.3	Removing and installing auxiliary fuse adapter	239
1.4	Wiring harness connections	241
1.5	Removing and installing auxiliary relay carrier with connector point	243
2	Wiring harness and connector repair	245
2.1	Wiring harness and connector repair	245
2.2	Servicing connector for multi-pin connections	246