



## Contents

<b>50 - Body front</b> .....	<b>1</b>
<b>1 Front body</b> .....	<b>1</b>
1.1 Front body .....	1
1.2 Removing and installing front-end assembly .....	1
1.3 Removing and installing lock carrier support .....	3
1.4 Removing lower cross member .....	5
1.5 Removing and installing left and right lock carrier .....	5
1.6 Removing and installing front wing .....	7
1.7 Removing and installing noise insulation .....	10
<b>55 - Bonnet, Flaps</b> .....	<b>13</b>
<b>1 Bonnet</b> .....	<b>13</b>
1.1 Bonnet .....	13
1.2 Removing and installing bonnet .....	13
1.3 Releasing gas from gas-filled strut .....	17
1.4 Removing and installing Bowden cable for bonnet .....	18
<b>2 Radiator grille</b> .....	<b>19</b>
2.1 Radiator grille .....	19
2.2 Removing and installing radiator grille .....	19
<b>3 Boot lid</b> .....	<b>20</b>
3.1 Boot lid .....	20
3.2 Removing and installing boot lid .....	20
3.3 Removing and installing boot lid lock .....	23
<b>4 Convertible top compartment lid</b> .....	<b>27</b>
4.1 Convertible top compartment lid .....	27
4.2 Removing and installing convertible top compartment lid .....	27
4.3 Exploded view of cover for convertible top compartment lid .....	31
4.4 Replacing cover for convertible top compartment lid .....	33
<b>57 - Front doors/Door components/Central locking system</b> .....	<b>35</b>
<b>1 Front door</b> .....	<b>35</b>
1.1 Front door .....	35
1.2 Exploded view of door shell .....	35
1.3 Exploded view of door subframe .....	40
1.4 Adjusting front door window .....	43
<b>2 Exploded view of door lock with operating elements</b> .....	<b>45</b>
2.1 Exploded view of door lock with operating elements .....	45
<b>3 Exploded view of front door handle</b> .....	<b>52</b>
3.1 Exploded view of front door handle .....	52
<b>4 Door adjustment sequence</b> .....	<b>56</b>
4.1 Door adjustment sequence .....	56
4.2 I - Adjusting door shell .....	56
4.3 II - Adjusting window lifter .....	59
<b>5 Central locking system</b> .....	<b>61</b>
5.1 Central locking system .....	61
5.2 Exploded view of central locking system .....	62
5.3 Synchronising key for infrared remote control .....	66
<b>61 - Convertible top, Hardtop, Canopy</b> .....	<b>67</b>
<b>1 Convertible top</b> .....	<b>67</b>
1.1 Convertible top .....	67
1.2 Exploded view .....	67
1.3 Removing and installing convertible top frame with cover and headliner .....	70



<b>2</b>	<b>Convertible top lock</b> .....	<b>74</b>
2.1	Convertible top lock .....	74
2.2	Removing and installing convertible top lock and roof frame seals .....	74
2.3	Removing and installing handle .....	78
2.4	Adjusting joint dimensions at convertible top .....	81
<b>3</b>	<b>Convertible top headliner</b> .....	<b>83</b>
3.1	Convertible top headliner .....	83
3.2	Removing and installing convertible top headliner > 02.95 .....	83
3.3	Removing and installing convertible top headliner 03.95 ä .....	90
<b>4</b>	<b>Convertible top cover</b> .....	<b>99</b>
4.1	Convertible top cover .....	99
4.2	Removing and installing convertible top cover and seals .....	99
<b>5</b>	<b>Renewing threaded pivot pins on soft top frame</b> .....	<b>112</b>
5.1	Renewing threaded pivot pins on soft top frame .....	112
5.2	Fitting location .....	112
5.3	Soft top pivot pins (overview) .....	116
<b>6</b>	<b>Convertible top leakage</b> .....	<b>123</b>
6.1	Convertible top leakage .....	123
6.2	Checking and adjusting position of convertible top .....	124
6.3	Checking position and sealing action of fabric sealing lip at front edge of convertible top ..	126
6.4	Checking and adjusting door seal .....	127
6.5	Adjusting roof frame seals .....	129
6.6	Rear end sealing measures .....	131
<b>7</b>	<b>Hydraulic system</b> .....	<b>133</b>
7.1	Hydraulic system .....	133
7.2	Exploded view of hydraulic system .....	134
7.3	Rules for cleanliness .....	136
7.4	Filling and venting hydraulic system .....	136
7.5	Removing and installing hydraulic pump - Vehicles with upright emergency spare wheel ..	138
7.6	Removing and installing hydraulic pump - Vehicles with horizontal emergency spare wheel .....	141
7.7	Replacing 8-valve hydraulic pump .....	145
7.8	Removing and installing fluid reservoir .....	147
7.9	Removing and installing solenoid valve .....	148
7.10	Removing and installing lower hydraulic cylinder .....	150
7.11	Removing and installing upper hydraulic cylinder .....	152
7.12	Removing and installing hydraulic cylinder for convertible top compartment lid .....	154
7.13	Removing and installing catch for convertible top compartment lid .....	155
7.14	Removing and installing hydraulic pipes to lower hydraulic cylinder .....	157
7.15	Removing and installing hydraulic pipe to upper hydraulic cylinder .....	161
7.16	Removing and installing hydraulic pipe to hydraulic cylinder for convertible top compartment lid .....	164
7.17	Routing of hydraulic pipes .....	166
7.18	Connection table for hydraulic pump .....	168
<b>8</b>	<b>Hardtop</b> .....	<b>169</b>
8.1	Hardtop .....	169
8.2	Adjusting hardtop .....	169
8.3	Height adjustment at upper part of mounting bracket .....	175
8.4	Removing and installing front locking mechanism for hardtop .....	177
8.5	Adjusting front catch for hardtop .....	178
8.6	Adjusting seals .....	179
<b>9</b>	<b>Service installation of hardtop</b> .....	<b>182</b>
9.1	Service installation of hardtop .....	182
9.2	General .....	182
9.3	Exploded view of service installation kit .....	183
9.4	Exploded view of fitting locations .....	187



9.5	Body components . . . . .	189
9.6	Work to be completed . . . . .	191
9.7	Installing hardtop . . . . .	193
<b>63</b>	<b>- Bumpers . . . . .</b>	<b>211</b>
1	<b>Front bumper . . . . .</b>	<b>211</b>
1.1	Front bumper . . . . .	211
1.2	Exploded view of front bumper . . . . .	211
2	<b>Rear bumper . . . . .</b>	<b>216</b>
2.1	Rear bumper . . . . .	216
2.2	Exploded view of rear bumper . . . . .	216
<b>64</b>	<b>- Glazing . . . . .</b>	<b>219</b>
1	<b>Windows bonded flush with bodywork . . . . .</b>	<b>219</b>
1.1	Windows bonded flush with bodywork . . . . .	219
1.2	General information on removal and installation of windows bonded flush with bodywork . . . . .	219
1.3	Windscreen repair work using special tool VAS 1993 . . . . .	221
1.4	Materials . . . . .	221
1.5	Minimum setting times . . . . .	222
1.6	Re-sealing windows . . . . .	222
2	<b>Exploded view of windscreenremoval . . . . .</b>	<b>223</b>
2.1	Exploded view of windscreenremoval . . . . .	223
2.2	Exploded view of windscreenremoval and installation . . . . .	223
2.3	Removing . . . . .	224
2.4	Installing . . . . .	228
3	<b>Removing and installing hardtop rear window . . . . .</b>	<b>233</b>
3.1	Removing and installing hardtop rear window . . . . .	233
3.2	Removing . . . . .	234
3.3	Installing . . . . .	236
4	<b>Removing and installing convertible top rear window . . . . .</b>	<b>241</b>
4.1	Removing and installing convertible top rear window . . . . .	241
5	<b>Removing and installing rear side window . . . . .</b>	<b>249</b>
5.1	Removing and installing rear side window . . . . .	249
5.2	Exploded view of rear side window . . . . .	249
5.3	Adjusting side window . . . . .	255
<b>66</b>	<b>- Exterior equipment . . . . .</b>	<b>258</b>
1	<b>Trim strips . . . . .</b>	<b>258</b>
1.1	Trim strips . . . . .	258
1.2	Removing and installing trim strip for convertible top compartment lid . . . . .	258
1.3	Exploded view of trim strip for window slot and seal for convertible top compartment . . . . .	259
2	<b>Removing and installing outer trim . . . . .</b>	<b>262</b>
2.1	Removing and installing outer trim . . . . .	262
2.2	Removing A-pillar trim > 02.95 . . . . .	262
2.3	Removing and installing A-pillar trim 03.95 ä . . . . .	264
2.4	Removing and installing scuttle panel trim . . . . .	265
3	<b>Protective mouldings . . . . .</b>	<b>266</b>
3.1	Protective mouldings . . . . .	266
3.2	Removing and installing protective moulding . . . . .	266
3.3	Removing and installing trim cover for sill panel . . . . .	268
3.4	Removing and installing outer sill panel trim . . . . .	270
4	<b>Exterior mirrors . . . . .</b>	<b>271</b>
4.1	Exterior mirrors . . . . .	271
4.2	Removing and installing exterior mirror . . . . .	271
4.3	Removing and installing mirror glass . . . . .	272



<b>5</b>	<b>Wheel housing liners</b> .....	<b>273</b>
5.1	Wheel housing liners .....	273
5.2	Removing and installing front wheel housing liner .....	273