

## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis of air conditioner</b> .....	<b>1</b>
1.1 Self-diagnosis of air conditioner .....	1
1.2 Self-diagnosis function .....	1
1.3 Fault detection .....	1
1.4 Technical data of self-diagnosis .....	2
1.5 Safety precautions .....	2
1.6 Connecting vehicle diagnostic, testing and information system VAS 5051/ fault reader V.A.G 1551 and selecting functions .....	2
1.7 List of available functions .....	5
1.8 Interrogating fault memory .....	5
1.9 Fault table .....	6
1.10 Implementing final control diagnosis .....	9
1.11 Reading measured value block .....	11
<b>2 Checking wiring of diagnostic connectors</b> .....	<b>14</b>
2.1 Checking wiring of diagnostic connectors .....	14
2.2 Checking power supply for "black" diagnostic connector .....	15
2.3 Checking wiring between "white" diagnostic connector and magnetic clutch control unit ..	15
<b>80 - Heating</b> .....	<b>18</b>
<b>1 Servicing heater</b> .....	<b>18</b>
1.1 Servicing heater .....	18
1.2 Dash panel vents and air ducts .....	18
1.3 Heater, heater controls and air ducts .....	23
1.4 Removing and installing heater controls .....	26
1.5 Connection diagram for Bowden cables at heater controls .....	27
1.6 Removing and installing heater .....	27
1.7 Connection diagram for Bowden cables at heater flap housing .....	30
<b>2 Dismantling and assembling heater</b> .....	<b>31</b>
2.1 Dismantling and assembling heater .....	31
2.2 Removing and installing heat exchanger for heater .....	32
2.3 Removing and installing fresh-air blower -V2 .....	34
2.4 Removing and installing fresh-air blower with overheating fuse series resistor -N24 .....	34
2.5 Removing and installing footwell vent .....	34
<b>3 Removing and installing dust and pollen filter</b> .....	<b>35</b>
3.1 Removing and installing dust and pollen filter .....	35
<b>4 Servicing electric additional heater - vehicles with TDI engine</b> .....	<b>37</b>
4.1 Servicing electric additional heater - vehicles with TDI engine .....	37
4.2 Checking operation of electric additional heater .....	37
<b>87 - Air conditioning</b> .....	<b>38</b>
<b>1 Safety measures when working on vehicles with air conditioner and for handling refrigerant</b> .....	<b>38</b>
1.1 Safety measures when working on vehicles with air conditioner and for handling refrigerant .....	38
<b>2 Notes on general repairs</b> .....	<b>41</b>
2.1 Notes on general repairs .....	41
<b>3 Servicing work on refrigerant circuit</b> .....	<b>41</b>
3.1 Servicing work on refrigerant circuit .....	41
3.2 Refrigerant circuit with refrigerant R12 - Nippondenso compressor > approx. 09.91 .....	42
3.3 Refrigerant circuit with refrigerant R12 - Zexel compressor approx. 09.91 ä .....	46
3.4 Refrigerant circuit with refrigerant R134a - Zexel compressor 10.92 ä .....	51
3.5 High-pressure switch for air conditioner -F23 .....	57



3.6	Removing and installing high-pressure switch for air conditioner -F23 . . . . .	57
3.7	High-pressure switch for magnetic coupling -F118 . . . . .	58
3.8	Removing and installing high-pressure switch for magnetic coupling -F118 . . . . .	59
3.9	Low-pressure switch for air conditioner -F73 . . . . .	59
3.10	Removing and installing low-pressure switch for air conditioner -F73 . . . . .	60
3.11	O-ring seals for refrigerant circuit . . . . .	61
3.12	Checking air conditioner compressor speed sender -G111 . . . . .	62
3.13	Complaint "Unpleasant odour from air conditioner" . . . . .	63
3.14	Cleaning evaporator . . . . .	64
<b>4</b>	<b>Detaching compressor from bracket/attaching; removing and installing compressor bracket</b> . . . . .	<b>65</b>
4.1	Detaching compressor from bracket/attaching; removing and installing compressor bracket . . . . .	65
4.2	4-cylinder 2V and 4V petrol engine . . . . .	66
4.3	Removing and installing V-belt - 4-cylinder 2V and 4V petrol engine . . . . .	68
4.4	Checking V-belt tension, tensioning V-belt - 4-cylinder 2V and 4V petrol engine . . . . .	69
4.5	Unscrewing air-conditioner compressor from bracket - 4-cylinder 2V and 4V petrol engine . . . . .	69
4.6	4-cylinder 5V petrol engine and TDI engine . . . . .	71
4.7	Removing and installing ribbed belt - 4-cylinder 5V petrol engine . . . . .	74
4.8	Unscrewing air-conditioner compressor from bracket - 4-cylinder 5V petrol engine . . . . .	75
4.9	Removing and installing ribbed belt - 4-cylinder TDI engine . . . . .	75
4.10	Unscrewing air-conditioner compressor from bracket - 4-cylinder TDI engine . . . . .	78
4.11	5-cylinder engine with Nippondenso compressor . . . . .	80
4.12	5-cylinder engine with Zexel compressor . . . . .	83
4.13	Removing, installing and tensioning V-belt - 5-cylinder engine with Nippondenso and Zexel compressor . . . . .	86
4.14	Unscrewing air-conditioner compressor from bracket - 5-cylinder engine with Nippondenso and Zexel compressor . . . . .	88
4.15	6-cylinder engine . . . . .	89
4.16	Removing, installing and tensioning ribbed belt - 6-cylinder engine . . . . .	91
4.17	Unscrewing air-conditioner compressor from bracket . . . . .	93
<b>5</b>	<b>Servicing air conditioning system magnetic coupling -N25</b> . . . . .	<b>94</b>
5.1	Servicing air conditioning system magnetic coupling -N25 . . . . .	94
5.2	Nippondenso compressor . . . . .	95
5.3	Zexel compressor . . . . .	99
<b>6</b>	<b>Connection diagram for vacuum hoses</b> . . . . .	<b>103</b>
6.1	Connection diagram for vacuum hoses . . . . .	103
<b>7</b>	<b>Servicing components of manually controlled air conditioner</b> . . . . .	<b>107</b>
7.1	Servicing components of manually controlled air conditioner . . . . .	107
7.2	Exploded view . . . . .	108
7.3	Ambient temperature switch -F38 . . . . .	111
7.4	Removing and installing ambient temperature switch -F38 . . . . .	112
7.5	Checking fresh/recirculated-air flap . . . . .	113
7.6	Removing and installing fresh-air blower with overheating fuse series resistor -N24 . . . . .	114
7.7	Removing and installing fresh-air blower -V2 . . . . .	114
7.8	Checking, removing and installing condensate drain hose with valve . . . . .	116
7.9	Checking cooling capacity of manually controlled air conditioner . . . . .	117
7.10	Nippondenso compressor . . . . .	118
7.11	Zexel compressor . . . . .	121
<b>8</b>	<b>Servicing work on refrigerant circuit</b> . . . . .	<b>124</b>
8.1	Servicing work on refrigerant circuit . . . . .	124
8.2	Notes for refrigerant R12 > 09.92 . . . . .	124
8.3	Nippondenso compressor > approx. 09.91 for refrigerant R12 . . . . .	125
8.4	Zexel compressor approx. 09.91 > for refrigerant R12 . . . . .	131
8.5	Notes for refrigerant R134a 10.92 ä . . . . .	137
8.6	Zexel compressor 10.92 > for refrigerant R134a . . . . .	139

8.7	Removing and installing reservoir . . . . .	149
8.8	Removing and installing condenser . . . . .	150
8.9	Removing and installing air conditioner compressor speed sender -G111 . . . . .	150
8.10	Removing and installing restrictor . . . . .	151
8.11	Removing and installing air conditioner unit . . . . .	153
<b>9</b>	<b>Dismantling and assembling air conditioner unit . . . . .</b>	<b>157</b>
9.1	Dismantling and assembling air conditioner unit . . . . .	157
9.2	Removing and installing heat exchanger for air conditioner unit . . . . .	158
9.3	Removing and installing vacuum unit for fresh/recirculated-air flap . . . . .	160
9.4	Dismantling and assembling evaporator housing . . . . .	161
<b>10</b>	<b>Servicing electric additional heater - vehicles with TDI engine . . . . .</b>	<b>163</b>
10.1	Servicing electric additional heater - vehicles with TDI engine . . . . .	163
10.2	Checking operation of electric additional heater . . . . .	163