

## Contents

<b>00 - Technical data . . . . .</b>	<b>1</b>
<b>1     Gearbox identification . . . . .</b>	<b>1</b>
1.1    Gearbox identification . . . . .	1
1.2    Code letters, gearbox allocation, ratios, capacities . . . . .	2
<b>2     Transmission layout . . . . .</b>	<b>7</b>
2.1    Transmission layout . . . . .	7
<b>3     Calculations . . . . .</b>	<b>9</b>
3.1    Calculations . . . . .	9
3.2    Calculating transmission ratios "i" . . . . .	9
<b>4     General repair instructions . . . . .</b>	<b>9</b>
4.1    General repair instructions . . . . .	9
<b>30 - Clutch . . . . .</b>	<b>13</b>
<b>1     Servicing clutch mechanism . . . . .</b>	<b>13</b>
1.1    Servicing clutch mechanism . . . . .	13
1.2    Assembly overview, pedal cluster . . . . .	14
1.3    Hydraulic system - general layout . . . . .	19
1.4    Removing and installing master cylinder . . . . .	22
1.5    Bleeding clutch system . . . . .	23
<b>2     Servicing clutch release mechanism . . . . .</b>	<b>25</b>
2.1    Servicing clutch release mechanism . . . . .	25
<b>3     Servicing clutch . . . . .</b>	<b>29</b>
3.1    Servicing clutch . . . . .	29
<b>34 - Controls, Housing . . . . .</b>	<b>36</b>
<b>1     Servicing selector mechanism . . . . .</b>	<b>36</b>
1.1    Servicing selector mechanism . . . . .	36
1.2    Gear selector mechanism on vehicles > VIN 8G-X-003 500 . . . . .	36
1.3    Removing and installing selector mechanism . . . . .	42
1.4    Adjusting gear selector mechanism on vehiclesä VIN 8G-X-003 500 . . . . .	43
1.5    Gear selector mechanism on vehicles from 05..99, VIN8G-X-003 501 ä(without vertical travel on reverse gear selector lock) . . . . .	46
1.6    Adjusting gear selector mechanism on vehicles from 05.99, VIN 8G-X-003 501 > (without vertical travel on reverse gear selector lock) . . . . .	49
<b>2     Removing and installing gearbox . . . . .</b>	<b>51</b>
2.1    Removing and installing gearbox . . . . .	51
2.2    Securing gearbox to repair stand . . . . .	62
2.3    Transporting the gearbox . . . . .	62
<b>3     Checking oil level in gearbox . . . . .</b>	<b>67</b>
3.1    Checking oil level in gearbox . . . . .	67
<b>4     Dismantling and assembling gearbox . . . . .</b>	<b>68</b>
4.1    Dismantling and assembling gearbox . . . . .	68
4.2    Overview . . . . .	68
4.3    Assembly overview . . . . .	70
4.4    Removing and installing input shaft ball bearing and multi-function sender . . . . .	71
4.5    Removing and installing input shaft, pinion shaft, selector rods and gearbox cover . . . . .	75
4.6    Removing and installing input shaft ball bearing, multi-function sender, input shaft, pinion shaft, selector rods and gearbox cover . . . . .	78
<b>5     Dismantling and assembling selector mechanism in gearbox . . . . .</b>	<b>87</b>
5.1    Dismantling and assembling selector mechanism in gearbox . . . . .	87
<b>35 - Gears, Shafts . . . . .</b>	<b>95</b>
<b>1     Dismantling and assembling input shaft . . . . .</b>	<b>95</b>

1.1	Dismantling and assembling input shaft . . . . .	95
<b>2</b>	<b>Adjusting input shaft . . . . .</b>	<b>110</b>
2.1	Adjusting input shaft . . . . .	110
<b>3</b>	<b>Dismantling and assembling pinion shaft . . . . .</b>	<b>112</b>
3.1	Dismantling and assembling pinion shaft . . . . .	112
3.2	Reinforcement measures from 08.98 > in area of 4th gear wheel . . . . .	135
<b>4</b>	<b>Removing and installing reverse gear wheel . . . . .</b>	<b>138</b>
4.1	Removing and installing reverse gear wheel . . . . .	138
<b>39 - Final drive, Differential . . . . .</b>		<b>140</b>
<b>1</b>	<b>Renewing seal for flange shaft . . . . .</b>	<b>140</b>
1.1	Renewing seal for flange shaft . . . . .	140
<b>2</b>	<b>Removing and installing speedometer sender and drive wheel . . . . .</b>	<b>143</b>
2.1	Removing and installing speedometer sender and drive wheel . . . . .	143
2.2	Removing and installing speedometer sender -G22 . . . . .	143
2.3	Removing and installing speedometer drive wheel . . . . .	144
<b>3</b>	<b>Removing and installing differential . . . . .</b>	<b>145</b>
3.1	Removing and installing differential . . . . .	145
<b>4</b>	<b>Dismantling and assembling differential . . . . .</b>	<b>151</b>
4.1	Dismantling and assembling differential . . . . .	151
<b>5</b>	<b>Adjusting pinion shaft and crown wheel . . . . .</b>	<b>162</b>
5.1	Adjusting pinion shaft and crown wheel . . . . .	162
5.2	Adjusting and marking of gear sets . . . . .	162
5.3	Position of shims . . . . .	164
5.4	Adjustment overview . . . . .	164
5.5	Recommended sequence for readjusting final drive set . . . . .	165
5.6	Adjusting pinion shaft . . . . .	166
5.7	Re-determining "S4" shim when fitting new gearbox cover . . . . .	175
5.8	Adjusting crown wheel . . . . .	177