

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
2 Notes on "Automatic Gearbox 01N"	2
2.1 Notes on "Automatic Gearbox 01N"	2
2.2 Two gearbox generations	2
2.3 Self-diagnosis	2
3 Code letters, assignment of mechanical units, transmission ratios, features	3
3.1 Code letters, assignment of mechanical units, transmission ratios, features	3
4 Capacities	6
4.1 Capacities	6
5 Repair work with exchange component	7
5.1 Repair work with exchange component	7
5.2 Scope of delivery of exchange component	8
6 General repair instructions	15
6.1 General repair instructions	15
32 - Torque converter	17
1 Torque converter	17
1.1 Torque converter	17
1.2 Torque converter assignment	18
1.3 Torque converter identification	18
1.4 Removing friction bearing from turbine shaft	19
1.5 Replacing oil seal for torque converter	21
1.6 Draining torque converter	22
1.7 Checking torque converter	23
1.8 Installing torque converter	23
37 - Controls, Housing	25
1 Servicing shift mechanism	25
1.1 Servicing shift mechanism	25
1.2 Dismantling and assembling shift mechanism	25
1.3 Checking shift mechanism	34
1.4 Removing, installing and adjusting selector lever cable	35
1.5 Removing, installing and adjusting locking cable	36
1.6 Checking ignition key removal lock	38
2 Checking gearbox	38
2.1 Checking gearbox	38
2.2 Measuring system pressure	38
3 Removing and installing gearbox	42
3.1 Removing and installing gearbox	42
3.2 Transporting automatic gearbox	53
3.3 Attaching gearbox to repair stand	55
3.4 Removing and installing gearbox support	57
4 Checking and topping up ATF level	60
4.1 Checking and topping up ATF level	60
4.2 Checking ATF level	61
4.3 Changing ATF/topping up after repair work	66
5 Gearbox with selector elements	70
5.1 Gearbox with selector elements	70
5.2 Position of selector elements	71
6 Dismantling and assembling gearbox	72



6.1	Dismantling and assembling gearbox	72
6.2	Rules for cleanliness when working on automatic gearbox	72
7	Removing and installing ATF pipes	72
7.1	Removing and installing ATF pipes	72
7.2	4-cylinder engine	73
7.3	6-cylinder engine	75
7.4	Cleaning ATF pipes and ATF cooler	76
8	Dismantling and assembling planetary gearbox	77
8.1	Dismantling and assembling planetary gearbox	77
8.2	Exploded view: Dismantling planetary gearbox	77
8.3	Dismantling planetary gearbox	83
8.4	Exploded view: Assembling planetary gearbox	89
8.5	I - Installing planet carrier	91
8.6	II - Installing reverse gear brake -B1- as far as circlip for supporting tube for -B2-	93
8.7	III - Installing large sun gear as far as reverse gear clutch -K2-	96
8.8	IV- Installing supporting tube for -B2- as far as ATF pump	101
8.9	Assembling planetary gearbox	105
8.10	Pressing clutch -K1- onto -K3-	116
8.11	Exploded view: Planetary gearbox adjustment work	118
8.12	I - Adjusting planet carrier	119
8.13	II - Exploded view: Adjusting reverse gear brake -B1-	125
8.14	III - Adjusting clutch clearance between -K1- and -K2-	130
8.15	IV - Adjusting 2nd and 4th gear brake -B2-	135
38 - Gears, Hydraulic controls		150
1	Dismantling and assembling ATF pump	150
1.1	Dismantling and assembling ATF pump	150
2	Dismantling and assembling free-wheel with piston -B1-	154
2.1	Dismantling and assembling free-wheel with piston -B1-	154
3	Dismantling and assembling 1st to 3rd gear clutch -K1-	157
3.1	Dismantling and assembling 1st to 3rd gear clutch -K1-	157
4	Dismantling and assembling reverse gear clutch -K2-	163
4.1	Dismantling and assembling reverse gear clutch -K2-	163
5	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	168
5.1	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	168
6	Removing and installing valve body	174
6.1	Removing and installing valve body	174
6.2	Removing and installing sump	181
6.3	Removing and installing ATF screen	182
6.4	Removing and installing valve body	183
6.5	Operating rod for manual selector valve	185
6.6	Removing and installing conductor strip with 10-pin connector	187
7	Dismantling and assembling parking lock	188
7.1	Dismantling and assembling parking lock	188
8	Removing and installing senders on gearbox housing	197
8.1	Removing and installing senders on gearbox housing	197
8.2	Removing and installing speedometer sender -G22	197
8.3	Removing and installing gearbox speed sender -G38	198
8.4	Removing and installing road speed sender -G68	199
39 - Final drive, Differential		200
1	Checking gear oil in final drive	200
1.1	Checking gear oil in final drive	200
2	Replacing oil seals for flange shafts	201
2.1	Replacing oil seals for flange shafts	201

2.2	Replacing oil seal for left flange shaft201
2.3	Replacing oil seal for right drive flange203
2.4	Removing and installing grooved ball bearing for drive flange output shaft206
3	Dismantling and assembling final drive208
3.1	Dismantling and assembling final drive208
3.2	Exploded view of final drive repair work208
3.3	Removing and installing input gear209
3.4	Removing and installing drive pinion217
3.5	Removing and installing differential228
3.6	Dismantling and assembling differential234
3.7	Removing and installing bevel gears243
4	Adjusting final drive244
4.1	Adjusting final drive244
4.2	Exploded view of adjustment work245
4.3	Adjustment table247
4.4	Adjusting input gear247
5	Adjusting drive pinion and crown wheel249
5.1	Adjusting drive pinion and crown wheel249
5.2	Adjustment and labelling of pinion sets250
5.3	Pinion set readjustment sequence251
5.4	Adjusting drive pinion255
5.5	Adjusting crown wheel262