

Contents

01 - Self-diagnosis, Electrical check	1
1 Self-diagnosis function	1
1.1 Self-diagnosis function	1
1.2 Technical data of self-diagnosis	2
2 Electrical/electronic components and fitting locations	3
2.1 Electrical/electronic components and fitting locations	3
2.2 Adjusting kick-down switch -F8	11
3 Performing self-diagnosis	13
3.1 Performing self-diagnosis	13
3.2 Safety precautions	13
3.3 Connecting vehicle diagnostic, testing and information system VAS 5051/fault reader V.A.G 1551 and selecting functions	13
3.4 List of available functions	16
3.5 Interrogating fault memory	16
3.6 Fault table	17
3.7 Erasing fault memory	23
3.8 Starting basic setting	24
3.9 Reading measured value block	25
3.10 Test table	26
4 Electrical check	34
4.1 Electrical check	34
4.2 Test table	36