

Contents

01 - Self-diagnosis, Electrical check	1
1 Self-diagnosis function	1
1.1 Self-diagnosis function	1
1.2 Technical data of self-diagnosis	2
2 Locations of electrical/electronic components	3
2.1 Locations of electrical/electronic components	3
2.2 Adjusting kickdown switch -F8	16
3 Performing self-diagnosis	17
3.1 Performing self-diagnosis	17
3.2 Safety precautions	18
3.3 Connecting vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions	18
3.4 Listof selectable functions	21
4 Interrogating fault memory	21
4.1 Interrogating fault memory	21
5 Fault table	22
5.1 Fault table	22
6 Erasing fault memory	31
6.1 Erasing fault memory	31
7 Initiating basic setting	32
7.1 Initiating basic setting	32
8 Read measured value block	33
8.1 Read measured value block	33
8.2 Test table	35
9 Electrical test	48
9.1 Electrical test	48
9.2 Test table	51