

## Contents

<b>01 - Self-diagnosis . . . . .</b>	<b>1</b>
<b>1 Self-diagnosis of Motronic system . . . . .</b>	<b>1</b>
1.1 Self-diagnosis of Motronic system . . . . .	1
1.2 Technical data of self-diagnosis . . . . .	1
1.3 Safety precautions . . . . .	1
1.4 Connecting vehicle diagnostic, testing and information system VAS 5051 or fault reader V.A.G 1551 and selecting functions . . . . .	1
<b>2 Interrogating and erasing fault memory . . . . .</b>	<b>4</b>
2.1 Interrogating and erasing fault memory . . . . .	4
2.2 Fault table . . . . .	6
<b>3 Final control diagnosis . . . . .</b>	<b>16</b>
3.1 Final control diagnosis . . . . .	16
<b>4 Basic setting . . . . .</b>	<b>18</b>
4.1 Basic setting . . . . .	18
<b>5 Coding control unit . . . . .</b>	<b>21</b>
5.1 Coding control unit . . . . .	21
5.2 Coding table . . . . .	21
<b>6 Reading measured value block . . . . .</b>	<b>22</b>
6.1 Reading measured value block . . . . .	22
6.2 Display group overview . . . . .	23
6.3 Readout specifications . . . . .	28
<b>7 Testing wiring connections of diagnostic connector . . . . .</b>	<b>36</b>
7.1 Testing wiring connections of diagnostic connector . . . . .	36
7.2 Testing voltage supply for black diagnostic connector . . . . .	37
7.3 Testing wiring connection between white diagnostic connector and engine control unit . . . . .	37
<b>24 - Mixture preparation, Injection . . . . .</b>	<b>40</b>
<b>1 Servicing Motronic injection system . . . . .</b>	<b>40</b>
1.1 Servicing Motronic injection system . . . . .	40
1.2 Safety precautions . . . . .	40
1.3 Rules for cleanliness . . . . .	40
1.4 Technical data . . . . .	41
1.5 Fitting locations overview . . . . .	42
1.6 Removing and installing parts of intake manifold change-over . . . . .	45
1.7 Removing and installing throttle valve control part . . . . .	47
1.8 Wiring and component check with test box V.A.G 1598/22 . . . . .	49
1.9 Renewing engine control unit . . . . .	50
1.10 Testing idling speed . . . . .	52
1.11 Checking system pressure, fuel pressure regulator and holding pressure . . . . .	54
1.12 Testing injectors . . . . .	57
1.13 Dismantling and assembling fuel rail with injectors . . . . .	63
1.14 Removing and installing injectors . . . . .	64
1.15 Checking injection quantity, leak-tightness and spray pattern of injectors . . . . .	65
1.16 Testing fuel pump relay -J17 and activation . . . . .	67
1.17 Testing air mass meter -G70 . . . . .	72
1.18 Checking intake air system for leaks (unmetered air) . . . . .	74
<b>2 Testing intake manifold change-over function . . . . .</b>	<b>75</b>
2.1 Testing intake manifold change-over function . . . . .	75
2.2 Testing operation . . . . .	75
2.3 Checking vacuum system for leaks . . . . .	76
2.4 Testing intake manifold change-over valve -N156 . . . . .	78
<b>3 Testing lambda control . . . . .</b>	<b>82</b>
3.1 Testing lambda control . . . . .	82

3.2	Poor performance after cold start . . . . .	82
3.3	Testing operation . . . . .	84
3.4	Testing lambda probe heating . . . . .	86
3.5	Testing lambda probe signal wiring and activation . . . . .	88
3.6	Removing and installing lambda probe . . . . .	90
<b>4</b>	<b>Testing fuel tank breather . . . . .</b>	<b>91</b>
4.1	Testing fuel tank breather . . . . .	91
4.2	Testing operation . . . . .	92
4.3	Testing solenoid valve 1 for activated charcoal filter . . . . .	92
<b>5</b>	<b>Testing throttle valve control part . . . . .</b>	<b>96</b>
5.1	Testing throttle valve control part . . . . .	96
5.2	Performing adaption of throttle valve control part to engine control unit . . . . .	97
5.3	Testing idling speed switch -F60 . . . . .	98
5.4	Testing throttle valve potentiometer -G69 . . . . .	100
5.5	Testing throttle valve positioner sender -G127 . . . . .	102
5.6	Testing throttle valve positioner -V60 . . . . .	104
<b>6</b>	<b>Testing auxiliary signals . . . . .</b>	<b>106</b>
6.1	Testing auxiliary signals . . . . .	106
6.2	Testing signals from/to air conditioner . . . . .	106
6.3	Testing engine speed signal . . . . .	108
6.4	Testing vehicle speed signal . . . . .	108
6.5	Testing ignition retardation when changing gears . . . . .	110
6.6	Testing gear signal . . . . .	112
<b>28</b>	<b>- Ignition system . . . . .</b>	<b>114</b>
<b>1</b>	<b>Testing ignition system . . . . .</b>	<b>114</b>
1.1	Testing ignition system . . . . .	114
1.2	Safety precautions . . . . .	114
1.3	Technical data . . . . .	114
1.4	Removing and installing parts of the ignition system . . . . .	115
1.5	Testing ignition coils . . . . .	119
1.6	Testing engine speed sender -G28 . . . . .	122
1.7	Testing intake air temperature sender -G42 . . . . .	124
1.8	Testing coolant temperature sender -G62 . . . . .	127
1.9	Testing voltage supply for control unit . . . . .	129
1.10	Testing knock sensors . . . . .	131
1.11	Testing Hall sender -G40 . . . . .	134