

Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Technical data of self-diagnosis	1
1.3 Safety precautions	1
1.4 Connecting vehicle diagnostic, testing and information system VAS 5051/ fault reader V.A.G 1551 and selecting functions	1
2 Interrogating and erasing fault memory	4
2.1 Interrogating and erasing fault memory	4
2.2 Fault table	6
3 Final control diagnosis	14
3.1 Final control diagnosis	14
4 Basic setting	15
4.1 Basic setting	15
5 Encoding control unit	17
5.1 Encoding control unit	17
6 Reading measured value block	18
6.1 Reading measured value block	18
6.2 List of display groups	19
7 Checking wiring of diagnostic connectors	30
7.1 Checking wiring of diagnostic connectors	30
7.2 Checking power supply for "black" diagnostic connector	31
7.3 Checking wiring between "white" diagnostic connector and engine control unit	31
24 - Mixture preparation, Injection	35
1 Servicing Digifant injection system	35
1.1 Servicing Digifant injection system	35
1.2 Safety precautions	35
1.3 Rules for cleanliness	35
1.4 Technical data	36
1.5 Exploded view of fitting locations	37
1.6 Removing and installing injection system components	40
1.7 Dismantling and assembling air cleaner	43
1.8 Wiring and component check using test box V.A.G 1598/18	45
1.9 Replacing engine control unit	46
1.10 Checking idling speed	48
1.11 Checking system pressure, fuel pressure regulator and holding pressure	51
1.12 Dismantling and assembling fuel rail with injectors	53
1.13 Checking injectors	55
1.14 Removing and installing injectors	59
1.15 Checking freedom from leaks and spray pattern of injectors	62
1.16 Checking fuel pump relay -J17 and actuation	64
1.17 Checking cold start valve -N17	68
1.18 Checking idling-speed stabilisation valve -N71	73
1.19 Checking acceleration/full throttle enrichment and overrun shutoff	76
1.20 Checking air-flow meter potentiometer -G19	77
1.21 Checking intake system for leaks (unmetered air)	80
2 Checking Lambda control	81
2.1 Checking Lambda control	81
2.2 Engine running problems following cold start	81
2.3 Checking Lambda probe -G39 and Lambda control	83
2.4 Checking Lambda probe heater -Z19	85
3 Checking fuel tank breather system	87



3.1	Checking fuel tank breather system	87
3.2	Checking activated charcoal filter solenoid valve -N80	87
4	Checking throttle valve potentiometer -G69	91
4.1	Checking throttle valve potentiometer -G69	91
4.2	Matching Digifant control unit -J169 and throttle valve potentiometer -G69	94
4.3	Matching automaticgearboxcontrol unit and throttle valve potentiometer -G69	95
4.4	Basic setting of throttle valve	95
4.5	Checking and adjusting throttle damper	96
5	Checking intake air preheating	96
5.1	Checking intake air preheating	96
6	Checking additional signals	98
6.1	Checking additional signals	98
6.2	Checking air-conditioner compressor signal and air-conditioner compressor shutoff	98
6.3	Checking engine-speed signal	100
6.4	Checking fuel consumption signal	100
6.5	Check vehicle-speed signal	101
6.6	Checking ignition timing retardation on changing gear	103
6.7	Checking start signal	105
7	Vacuum diagram	106
7.1	Vacuum diagram	106
28	- Ignition system	109
1	Checking ignition system	109
1.1	Checking ignition system	109
1.2	Safety precautions	109
1.3	Adjustment data, spark plugs	109
1.4	Servicing ignition system	110
1.5	Installing ignition distributor	113
1.6	Checking and adjusting ignition point	114
1.7	Checking ignition transformer -N152	116
1.8	Checking output stage for ignition transformer	118
1.9	Checking intake-air temperature sender -G42	121
1.10	Checking coolant temperature sender -G62	123
1.11	Checking power supply for control unit	126
1.12	Checking current supply relay for Digifant control unit -J176	128
1.13	Checking knock sensor	132
1.14	Checking Hall sender -G40	134