

## Contents

<b>01 - Self-diagnosis . . . . .</b>	<b>1</b>
<b>1 Multi Point Fuel Injection self-diagnosis . . . . .</b>	<b>1</b>
1.1 Multi Point Fuel Injection self-diagnosis . . . . .	1
1.2 Technical data of self-diagnosis . . . . .	1
1.3 Safety precautions . . . . .	1
1.4 Connecting vehicle diagnostic, testing and information system VAS 5051/ fault reader V.A.G 1551 and selecting functions . . . . .	1
<b>2 Interrogating and erasing fault memory . . . . .</b>	<b>4</b>
2.1 Interrogating and erasing fault memory . . . . .	4
2.2 Fault table . . . . .	6
<b>3 Final control diagnosis . . . . .</b>	<b>15</b>
3.1 Final control diagnosis . . . . .	15
<b>4 Basic setting . . . . .</b>	<b>17</b>
4.1 Basic setting . . . . .	17
<b>5 Encoding control unit . . . . .</b>	<b>21</b>
5.1 Encoding control unit . . . . .	21
5.2 Encoding table for control unit no. up to index "C" . . . . .	22
5.3 Encoding table for control unit no. as of index "D" . . . . .	22
<b>6 Reading measured value block . . . . .</b>	<b>23</b>
6.1 Reading measured value block . . . . .	23
6.2 List of display groups . . . . .	24
<b>7 Adaption . . . . .</b>	<b>32</b>
7.1 Adaption . . . . .	32
<b>8 Checking wiring of diagnostic connectors . . . . .</b>	<b>36</b>
8.1 Checking wiring of diagnostic connectors . . . . .	36
8.2 Checking power supply for "black" diagnostic connector . . . . .	37
8.3 Checking wiring between "white" diagnostic connector and engine control unit . . . . .	37
<b>24 - Mixture preparation, Injection . . . . .</b>	<b>41</b>
<b>1 Servicing Multi Point Fuel Injection system . . . . .</b>	<b>41</b>
1.1 Servicing Multi Point Fuel Injection system . . . . .	41
1.2 Safety precautions . . . . .	41
1.3 Rules for cleanliness . . . . .	41
1.4 Technical data . . . . .	42
1.5 Exploded view of fitting locations . . . . .	43
1.6 Wiring and component check using test box V.A.G 1598 A . . . . .	47
1.7 Replacing engine control unit . . . . .	48
1.8 Checking idling speed . . . . .	51
1.9 Checking system pressure, fuel pressure regulator and holding pressure . . . . .	52
1.10 Checking injectors . . . . .	55
1.11 Removing and installing fuel rail with injectors and throttle valve unit . . . . .	60
1.12 Removing and installing injectors . . . . .	62
1.13 Checking injection quantity, freedom from leaks and spray pattern of injectors . . . . .	64
1.14 Checking fuel pump relay -J17 and actuation . . . . .	66
1.15 Checking idling-speed stabilisation valve -N71 . . . . .	71
1.16 Checking intake system for leaks (unmetered air) . . . . .	74
<b>2 Checking Lambda control . . . . .</b>	<b>75</b>
2.1 Checking Lambda control . . . . .	75
2.2 Checking Lambda probe heating . . . . .	76
2.3 Checking Lambda probe and signal wire . . . . .	82
2.4 Checking operation of Lambda probes . . . . .	84
2.5 Removing and installing Lambda probe . . . . .	85



<b>3</b>	<b>Checking fuel tank breather system . . . . .</b>	<b>86</b>
3.1	Checking fuel tank breather system . . . . .	86
3.2	Checking activated charcoal filter solenoid valve -N80 . . . . .	86
<b>4</b>	<b>Checking throttle valve potentiometer -G69 . . . . .</b>	<b>91</b>
4.1	Checking throttle valve potentiometer -G69 . . . . .	91
4.2	Checking idling switch -F60 . . . . .	94
<b>5</b>	<b>Checking additional signals . . . . .</b>	<b>98</b>
5.1	Checking additional signals . . . . .	98
5.2	Checking air-conditioner compressor signal and air-conditioner compressor shutoff . . . . .	98
5.3	Checking engine-speed signal . . . . .	101
5.4	Checking consumption signal for on-board computer . . . . .	101
5.5	Checking vehicle-speed signal . . . . .	102
5.6	Checking output signal for throttle valve position . . . . .	104
5.7	Checking gear signal . . . . .	106
5.8	Checking ignition timing retardation on changing gear . . . . .	109
<b>6</b>	<b>Vacuum diagram . . . . .</b>	<b>111</b>
6.1	Vacuum diagram . . . . .	111
6.2	Vehicles with manual gearbox . . . . .	111
6.3	Vehicles with automatic gearbox . . . . .	113
<b>28 - Ignition system . . . . .</b>	<b>115</b>	
<b>1</b>	<b>Checking ignition system . . . . .</b>	<b>115</b>
1.1	Checking ignition system . . . . .	115
1.2	Safety precautions . . . . .	115
1.3	Technical data . . . . .	115
1.4	Removing and installing ignition system components . . . . .	116
1.5	Checking ignition coil-N, ignition coil 2 -N128 and ignition coil 3 -N158 . . . . .	119
1.6	Checking final output stage -N122 . . . . .	122
1.7	Checking firing point sender -G4 . . . . .	125
1.8	Checking engine speed sender -G28 . . . . .	127
1.9	Checking intake-air temperature sender -G42 . . . . .	132
1.10	Checking coolant temperature sender -G62 . . . . .	135
1.11	Checking control unit power supply . . . . .	138
1.12	Checking knock sensors . . . . .	141
1.13	Checking Hall sender -G40 . . . . .	144