

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine features	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Removing	4
1.3 Attaching engine to repair stand	14
1.4 Installing	15
1.5 Tightening torques	16
13 - Crankshaft group	18
1 Dismantling and assembling engine	18
1.1 Dismantling and assembling engine	18
1.2 Ribbed belt drive for alternator, V-belt drive for coolant pump and vane pump	18
1.3 Removing and installing V-belt for coolant pump and vane pump of power steering	23
1.4 Checking tension of V-belt for coolant pump and vane pump of power steering and tensioning V-belt	23
1.5 Removing and installing ribbed belt for alternator	25
1.6 Checking tension of ribbed belt for alternator and tensioning ribbed belt	26
1.7 V-belt drive for air-conditioner compressor	28
1.8 Removing and installing V-belt for air-conditioner compressor	30
1.9 Checking tension of V-belt for air-conditioner compressor and tensioning V-belt	31
1.10 Toothed belt drive	32
1.11 Removing and installing toothed belt	37
1.12 Checking toothed-belt tension and thermo-tensioning roller - vehicles > approx. 12.94	45
1.13 Checking tensioner - vehicles approx. 12.94 ä	47
2 Removing and installing sealing flanges and flywheel	48
2.1 Removing and installing sealing flanges and flywheel	48
2.2 Replacing crankshaft oil seal on pulley end	52
2.3 Removing and installing flywheel	55
3 Removing and installing crankshaft	56
3.1 Removing and installing crankshaft	56
3.2 Extracting needle bearing from crankshaft/driving in	59
3.3 Crankshaft dimensions	60
4 Dismantling and assembling piston and conrod	61
4.1 Dismantling and assembling piston and conrod	61
4.2 Piston and cylinder dimensions	68
15 - Cylinder head, Valve gear	69
1 Removing and installing cylinder head	69
1.1 Removing and installing cylinder head	69
1.2 Removing and installing intake manifold	74
1.3 Removing and installing cylinder head cover	78
1.4 Removing cylinder head	81
1.5 Installing cylinder head	86
1.6 Checking compression pressure	89
2 Servicing valve gear	91
2.1 Servicing valve gear	91
2.2 Different valve gears	91



2.3	Replacing camshaft oil seal	99
2.4	Removing and installing camshaft	102
2.5	Checking hydraulic bucket tappets	106
2.6	Replacing valve stem seals	107
2.7	Checking valve guides	109
2.8	Replacing valve guides	110
2.9	Reworking valve seats	112
17	- Lubrication	115
1	Removing and installing lubrication system components	115
1.1	Removing and installing lubrication system components	115
1.2	Part I	116
1.3	Part II	120
1.4	Removing and installing sump	124
1.5	Removing and installing oil pump	127
1.6	Checking oil pressure and oil pressure switch	128
1.7	Engine oil	130
1.8	Checking oil level	130
19	- Cooling system	132
1	Removing and installing cooling system components	132
1.1	Removing and installing cooling system components	132
1.2	Cooling system components	133
1.3	Draining off and topping up coolant	135
1.4	Exploded view of coolant pump and thermostat	138
1.5	Removing and installing coolant pump	140
1.6	Removing, installing and checking thermostat	142
1.7	Exploded view of radiator and radiator fan	143
1.8	Removing and installing radiator	146
1.9	Checking cooling system for leaks	148
26	- Exhaust system	150
1	Removing and installing exhaust system components	150
1.1	Removing and installing exhaust system components	150
1.2	Separating centre and rear silencer	155
1.3	Removing and installing exhaust manifold	157
1.4	Stress-free alignment of exhaust system	160
1.5	Checking exhaust system for leaks	161