

Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Modifications made during production period	1
1.4 Engine features	2
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing and installing engine	4
1.2 Removing	5
1.3 Attaching engine to repair stand	20
1.4 Installing	21
1.5 Tightening torques	23
13 - Crankshaft group	25
1 Dismantling and assembling engine	25
1.1 Dismantling and assembling engine	25
1.2 Ribbed belt drive for vane pump, alternator and air conditioner	25
1.3 Removing and installing ribbed belt	30
1.4 Removing and installing vibration damper/pulley	32
1.5 Toothed belt drive	33
1.6 Removing and installing toothed belt	38
2 Removing and installing sealing flange and flywheel/drive plate	43
2.1 Removing and installing sealing flange and flywheel/drive plate	43
2.2 Replacing crankshaft oil seal on pulley end	50
2.3 Removing and installing front sealing flange	52
2.4 Removing and installing dual-mass flywheel/drive plate	59
2.5 Extracting needle bearing from dual-mass flywheel/driving in	62
2.6 Adjusting holder for engine speed sender	63
3 Removing and installing crankshaft	66
3.1 Removing and installing crankshaft	66
3.2 Crankshaft dimensions	71
3.3 Measuring axial and radial clearance	71
3.4 Removing and installing chain sprocket for oil pump	72
4 Dismantling and assembling piston and conrod	73
4.1 Dismantling and assembling piston and conrod	73
4.2 Different conrods and conrod bolts	73
4.3 Sawn conrods	75
4.4 Cracked conrods	78
4.5 Piston and cylinder dimensions	85
4.6 Checking conrod radial clearance	85
15 - Cylinder head, Valve gear	86
1 Removing and installing cylinder head	86
1.1 Removing and installing cylinder head	86
1.2 Different valve gears	86
1.3 Removing and installing intake manifold	93
1.4 Removing and installing left cylinder head cover	98
1.5 Removing and installing right cylinder head cover	99
1.6 Removing left cylinder head	101
1.7 Removing right cylinder head	104
1.8 Installing cylinder head	107
1.9 Checking compression pressure	110

2	Servicing valve gear	112
2.1	Servicing valve gear	112
2.2	Checking axial clearance of camshafts	121
2.3	Replacing front oil seals for camshafts	121
2.4	Replacing rear oil seal for left camshaft	124
2.5	Removing and installing camshafts	125
2.6	Checking hydraulic bucket tappets	127
2.7	Replacing valve stem seals	128
2.8	Checking valve guides	131
2.9	Checking valves	132
2.10	Replacing valve guides	132
2.11	Reworking valve seats	133
17 - Lubrication	136	
1	Removing and installing lubrication system components	136
1.1	Removing and installing lubrication system components	136
1.2	Different oil circuits	136
1.3	Engine generation I	137
1.4	Engine generation II	143
1.5	Engine generation III	148
1.6	Removing and installing lower part of sump	152
1.7	Removing and installing upper part of sump - engine generations I and II	154
1.8	Removing and installing upper part of sump - engine generation III	159
1.9	Removing and installing oil pump - engine generations I and II	167
1.10	Removing oil pump - engine generation III	170
1.11	Checking chain tensioner - engine generation III	171
1.12	Removing and installing chain/chain tensioner for oil pump - engine generation III	172
1.13	Replacing oil retention valves	173
1.14	Checking oil pressure and oil pressure switch	175
1.15	Engine oil	177
1.16	Checking oil level	178
19 - Cooling system	179	
1	Removing and installing cooling system components	179
1.1	Removing and installing cooling system components	179
1.2	Coolant pump and thermostat	180
1.3	Draining off and topping up coolant	181
1.4	Removing and installing coolant pump	185
1.5	Removing, installing and checking thermostat	186
1.6	Exploded view of coolant pipes	188
1.7	Removing and installing small coolant pipe	190
1.8	Removing and installing large coolant pipe	190
1.9	Removing and installing radiator	192
1.10	Checking cooling system for leaks	196
26 - Exhaust system	198	
1	Removing and installing exhaust system components	198
1.1	Removing and installing exhaust system components	198
1.2	Separating centre and rear silencer	206
1.3	Stress-free installation of front exhaust pipes	207
1.4	Removing and installing left exhaust manifold	210
1.5	Removing and installing right exhaust manifold	215
1.6	Stress-free alignment of exhaust system	217
1.7	Checking exhaust system for leaks	219