

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Removing .....	4
1.3 Attaching engine to repair stand .....	15
1.4 Installing .....	16
1.5 Tightening torques .....	17
<b>13 - Crankshaft group</b> .....	<b>19</b>
<b>1 Dismantling and assembling engine</b> .....	<b>19</b>
1.1 Dismantling and assembling engine .....	19
1.2 Ribbed belt drive for alternator, V-belt drive for coolant pump and vane pump .....	19
1.3 Removing and installing V-belt .....	26
1.4 Tensioning V-belt .....	27
1.5 Removing and installing ribbed belt .....	28
1.6 Routing of belts .....	29
1.7 Toothed belt drive .....	30
1.8 Removing and installing toothed belt .....	35
1.9 Checking semi-automatic toothed belt tensioning roller .....	41
1.10 Turning crankshaft to TDC with engine removed .....	41
<b>2 Removing and installing sealing flanges and flywheel</b> .....	<b>43</b>
2.1 Removing and installing sealing flanges and flywheel .....	43
2.2 Renewing crankshaft oil seal - pulley end - .....	48
2.3 Removing and installing flywheel .....	51
<b>3 Removing and installing crankshaft</b> .....	<b>52</b>
3.1 Removing and installing crankshaft .....	52
3.2 Removing and installing needle bearing in crankshaft .....	57
3.3 Crankshaft dimensions .....	58
<b>4 Dismantling and assembling pistons and conrods</b> .....	<b>59</b>
4.1 Dismantling and assembling pistons and conrods .....	59
4.2 Checking piston projection at TDC .....	67
4.3 Piston and cylinder dimensions .....	69
<b>15 - Cylinder head, Valve gear</b> .....	<b>70</b>
<b>1 Removing and installing cylinder head</b> .....	<b>70</b>
1.1 Removing and installing cylinder head .....	70
1.2 Removing and installing cylinder head cover .....	75
1.3 Removing and installing intake manifold .....	77
1.4 Removing cylinder head .....	78
1.5 Installing cylinder head .....	85
1.6 Checking compression pressure .....	89
<b>2 Servicing valve gear</b> .....	<b>91</b>
2.1 Servicing valve gear .....	91
2.2 Checking camshaft axial clearance .....	97
2.3 Removing and installing camshaft .....	97
2.4 Checking hydraulic bucket tappets .....	102
2.5 Renewing valve stem seals .....	103



2.6	Reworking valve seats . . . . .	105
2.7	Checking valve guides . . . . .	107
<b>17</b>	<b>- Lubrication . . . . .</b>	<b>108</b>
<b>1</b>	<b>Removing and installing parts of the lubrication system . . . . .</b>	<b>108</b>
1.1	Removing and installing parts of the lubrication system . . . . .	108
1.2	Part I . . . . .	109
1.3	Part II . . . . .	113
1.4	Removing and installing sump . . . . .	117
1.5	Removing and installing oil pump . . . . .	119
1.6	Testing oil pressure and oil pressure switch . . . . .	120
1.7	Engine oil . . . . .	123
1.8	Checking oil level . . . . .	123
<b>19</b>	<b>- Cooling system . . . . .</b>	<b>124</b>
<b>1</b>	<b>Removing and installing parts of cooling system . . . . .</b>	<b>124</b>
1.1	Removing and installing parts of cooling system . . . . .	124
1.2	Parts of cooling system . . . . .	125
1.3	Draining and filling cooling system . . . . .	127
1.4	Removing and installing coolant pump and coolant thermostat . . . . .	130
1.5	Removing and installing coolant pump . . . . .	132
1.6	Removing and installing, checking coolant thermostat . . . . .	134
1.7	Removing and installing radiator . . . . .	135
1.8	Checking cooling system for leaks . . . . .	140
<b>21</b>	<b>- Charging . . . . .</b>	<b>142</b>
<b>1</b>	<b>Charge air system with turbocharger . . . . .</b>	<b>142</b>
1.1	Charge air system with turbocharger . . . . .	142
1.2	Diagram of connections for charge pressure control system . . . . .	142
1.3	Checking turbocharger and charge pressure control system . . . . .	143
1.4	Checking charge pressure . . . . .	143
1.5	Testing linkage and pressure unit for charge pressure control . . . . .	147
1.6	Testing charge pressure control valve -N75 . . . . .	148
1.7	Testing intake manifold pressure sender . . . . .	152
1.8	Rules for cleanliness . . . . .	153
1.9	Removing and installing turbocharger - overview . . . . .	153
1.10	Removing and installing pressure unit for charge pressure control . . . . .	158
1.11	Removing and installing turbocharger . . . . .	159
1.12	Removing and installing parts of charge air cooling system . . . . .	162
1.13	Removing and installing charge air cooler (intercooler) . . . . .	165
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>168</b>
<b>1</b>	<b>Removing and installing parts of exhaust system . . . . .</b>	<b>168</b>
1.1	Removing and installing parts of exhaust system . . . . .	168
1.2	Separating centre and rear silencers . . . . .	174
1.3	Removing and installing exhaust manifold . . . . .	175
1.4	Removing and installing front exhaust pipe with catalytic converter . . . . .	176
1.5	Stress-free alignment of exhaust system . . . . .	178
1.6	Checking exhaust system for leaks . . . . .	179
<b>2</b>	<b>Exhaust gas recirculation system . . . . .</b>	<b>179</b>
2.1	Exhaust gas recirculation system . . . . .	179
2.2	Removing and installing parts of exhaust gas recirculation system . . . . .	180
2.3	Diagram of vacuum hose connections . . . . .	182
2.4	Checking mechanical exhaust gas recirculation valve . . . . .	183
2.5	Testing exhaust gas recirculation . . . . .	183
2.6	Checking exhaust gas recirculation valve -N18 . . . . .	186