

## Contents

<b>20</b>	<b>Fuel supply system</b>	<b>1</b>
1	Notes on performing work on fuel supply system	1
1.1	Notes on performing work on fuel supply system	1
1.2	General repair instructions	1
1.3	Safety precautions when working on fuel supply system	1
1.4	Rules for cleanliness	2
<b>2</b>	<b>Fuel supply system</b>	<b>2</b>
2.1	Fuel supply system	2
2.2	Exploded view of fuel tank and fuel expansion tank components	3
2.3	Draining fuel tank	8
2.4	Removing and installing fuel tank	8
2.5	Removing and installing fuel expansion tank	11
2.6	Checking fuel gauge sender	12
2.7	Removing and installing fuel gauge sender	13
2.8	Exploded view of fuel pump components	15
2.9	Electrical checking of fuel pump	19
2.10	Checking fuel pump delivery rate - 4-cyl. engine (2-valve)	21
2.11	Checking fuel pump delivery rate - 4-cyl. engine (4-valve)	23
2.12	Checking fuel pump delivery rate - 4-cyl. engine (5-valve)	24
2.13	Checking fuel pump delivery rate - 5-cyl. engine	27
2.14	Checking fuel pump delivery rate - 6-cyl. engine	29
2.15	Removing and installing fuel pump	31
<b>3</b>	<b>Servicing fuel filter</b>	<b>33</b>
3.1	Servicing fuel filter	33
<b>4</b>	<b>Servicing activated charcoal filter system components</b>	<b>37</b>
4.1	Servicing activated charcoal filter system components	37
<b>5</b>	<b>Servicing accelerator mechanism</b>	<b>40</b>
5.1	Servicing accelerator mechanism	40
5.2	Exploded view of accelerator mechanism	40
5.3	Removing and installing throttle cable - vehicles with 4-cyl. 2V and 4V engine as well as 5-cyl. engine	43
5.4	Adjusting throttle cable - vehicles with 4-cyl. 2V and 4V engine as well as 5-cyl. engine	44
5.5	Removing and installing throttle cable - vehicles with 4-cyl. 5V engine	45
5.6	Adjusting throttle cable - vehicles with 4-cyl. 5V engine	46
5.7	Removing and installing throttle cable - vehicles with 6-cylinder engine	47
5.8	Adjusting throttle cable - vehicles with 6-cylinder engine	49
5.9	Checking throttle cable adjustment on vehicles with automatic gearbox (checking kickdown switch)	50