

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety and repair instructions</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Identification</b>	<b>2</b>
2.1 PR number and type of brake system	2
<b>3 Technical data</b>	<b>3</b>
3.1 Test and adjustment values	3
<b>4 Brake test</b>	<b>4</b>
4.1 Checking vehicles on roller dynamometer	4
4.2 Checking electromechanical parking brake	4
<b>5 Checking brake discs</b>	<b>6</b>
5.1 Checking brake discs - steel brakes	6
<b>6 Electrical components</b>	<b>9</b>
6.1 Starting diagnosis	9
<b>45 - Anti-lock brake system</b>	<b>11</b>
<b>1 Safety and repair instructions</b>	<b>11</b>
1.1 Safety information	11
1.2 Repair instructions	11
<b>2 Overview of fitting locations</b>	<b>12</b>
2.1 Overview of fitting locations - ABS/ESP	12
<b>3 Control unit and hydraulic unit</b>	<b>14</b>
3.1 Exploded view - control unit and hydraulic unit	14
3.2 Removing and installing ABS control unit J104/ABS hydraulic unit N55	19
3.3 Separating control unit from and connecting to hydraulic unit	27
3.4 Connecting brake lines to hydraulic unit	30
<b>4 Sensors</b>	<b>35</b>
4.1 Assembly overview – speed sensor on front axle	35
4.2 Assembly overview – speed sensors on rear axle	35
4.3 Removing and installing speed sensor on front axle [G45]/[G47]	36
4.4 Removing and installing speed sensor on rear axle [G44]/[G46]	37
4.5 Checking ABS sensor ring	38
<b>46 - Brakes - mechanism</b>	<b>40</b>
<b>1 Safety and repair instructions</b>	<b>40</b>
1.1 Safety information	40
1.2 Repair instructions	40
<b>2 Front brakes</b>	<b>41</b>
2.1 Exploded view - front brakes	41
2.2 Removing and installing brake pads	43
2.3 Removing and installing brake caliper	51
2.4 Removing and installing brake disc	54
<b>3 Rear brakes</b>	<b>56</b>
3.1 Assembly overview - rear brake, drum brake version	56
3.2 Assembly overview – brake shoes	58
3.3 Removing and installing brake backplate	60
3.4 Removing and installing gasket for brake backplate	62
3.5 Removing and installing brake drum	64
3.6 Removing and installing brake shoes	65
<b>4 Parking brake</b>	<b>74</b>



4.1	Assembly overview - parking brake	74
4.2	Removing and installing control unit for electromechanical parking brake [J540]	74
4.3	Removing and installing parking brake motor [V282]/[V283]	75
<b>5</b>	<b>Brake pedal</b>	<b>77</b>
5.1	Exploded view - brake pedal	77
5.2	Separating brake pedal from and joining to brake servo	78
5.3	Removing and installing brake pedal	79
5.4	Removing and installing mounting of brake pedal on push rod	81
5.5	Removing and installing mounting bracket	82
<b>47</b>	<b>Brakes - hydraulics</b>	<b>87</b>
<b>1</b>	<b>Safety and repair instructions</b>	<b>87</b>
1.1	Safety information	87
1.2	Repair instructions	87
<b>2</b>	<b>Brake servo / brake master cylinder</b>	<b>88</b>
2.1	Exploded view - brake servo / brake master cylinder	88
2.2	Removing and installing brake master cylinder	92
2.3	Removing and installing brake servo	94
<b>3</b>	<b>Hydraulic system</b>	<b>105</b>
3.1	Bleeding hydraulic system	105
3.2	Bleeding hydraulic system (additional bleeding procedure)	106
3.3	Bleeding hydraulic system with vehicle diagnostic tester	107
3.4	Leak test	110
3.5	Check wheel brake cylinder for leaks	111