

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety information	1
2 Repair instructions	2
2.1 Repair instructions	2
3 Electrical components	3
3.1 Starting diagnosis	3
98 - Assist systems	9
1 Safety and repair instructions	9
1.1 Safety information	9
1.2 Repair instructions	9
2 Fitting locations	10
2.1 Overview of fitting locations - senders, sensors and control units in front section of vehicle	10
2.2 Overview of fitting locations - senders, sensors and control units in centre section of vehicle	10
2.3 Overview of fitting locations - senders, sensors and control units in rear section of vehicle	11
3 Senders/sensors/control units	13
3.1 Removing and installing front parking aid senders G252/G253/G254/G255	13
3.2 Removing and installing rear parking aid senders G203/G204/G205/G206	15
3.3 Removing and installing park assist steering senders G568/G569	16
3.4 Removing and installing rear park assist steering senders G716/G717	18
3.5 Removing and installing adaptive cruise control unit J428	19
3.6 Removing and installing parking aid control unit J446	20
3.7 Removing and installing lane change assist control unit J769/J770	21
3.8 Removing and installing reversing camera system control unit J772	22
3.9 Removing and installing control unit for overhead view camera J928	22
3.10 Removing and installing lane change assist warning lamp in exterior mirror K311/K312	23
3.11 Removing and installing reversing camera R189	24
3.12 Removing and installing front camera for driver assist systems [R242]	24
3.13 Removing and installing windscreen heater for front sensors Z113	25
3.14 Removing and installing front overhead view camera R243	26
3.15 Removing and installing right/left overhead view camera R244/R245	26
3.16 Removing and installing rear overhead view camera R246	27
4 Calibration requirements	28
4.1 Calibration requirements	28
5 Adaptive cruise control	29
5.1 Layout - adaptive cruise control	29
5.2 Adjusting/calibrating adaptive cruise control	29
6 Parking aid/park assist steering/autonomous parking	33
6.1 Layout - parking aid/park assist steering/autonomous parking	33
7 Reversing camera system	34
7.1 Layout - reversing camera system	34
7.2 Calibrating reversing camera system	34
8 Front camera for driver assist systems	39
8.1 Layout - front camera for driver assist systems	39
8.2 Exploded view - front camera for driver assist systems	39
8.3 Calibrating front camera for driver assist systems	40
9 Lane change assist	48
9.1 Layout - lane change assist	48
9.2 Calibrating lane change assist - static calibration (setting up calibration stand)	48



10	Overhead view camera	55
10.1	Layout - overhead view camera	55
10.2	Calibrating overhead view camera	55