

## Contents

|   |           |
|---|-----------|
| <b>00 - Technical data</b>  | <b>1</b>  |
| <b>1 Safety precautions</b>   | <b>1</b>  |
| 1.1 Safety information  | 1         |
| <b>2 Repair instructions</b>  | <b>2</b>  |
| 2.1 Repair instructions   | 2         |
| <b>3 Electrical components</b>  | <b>3</b>  |
| 3.1 Starting diagnosis  | 3         |
| <b>27 - Starter, current supply, CCS</b>  | <b>8</b>  |
| <b>1 Safety information and repair notes</b>  | <b>8</b>  |
| 1.1 Safety information  | 8         |
| 1.2 Repair instructions   | 8         |
| <b>2 Battery</b>  | <b>9</b>  |
| 2.1 Assembly overview – battery   | 9         |
| 2.2 Disconnecting and connecting battery  | 10        |
| 2.3 Removing and installing battery   | 12        |
| 2.4 Removing and installing battery tray  | 16        |
| 2.5 Checking battery  | 17        |
| 2.6 Charging battery  | 17        |
| 2.7 Removing and installing earth wire with battery monitor control unit [J367]               | 18        |
| 2.8 Adapting battery monitor control unit [J367]  | 20        |
| <b>90 - Gauges, instruments</b>   | <b>21</b> |
| <b>1 Safety information and repair notes</b>  | <b>21</b> |
| 1.1 Safety information  | 21        |
| 1.2 Repair instructions   | 21        |
| <b>2 Dash panel insert</b>  | <b>22</b> |
| 2.1 Exploded view - dash panel insert   | 22        |
| 2.2 Assembly overview - head-up display   | 22        |
| 2.3 Removing and installing dash panel insert KX2 with control unit in dash panel insert J285 | 23        |
| 2.4 Removing and installing control unit for head-up display J898                             | 25        |
| 2.5 Calibrating control unit for head-up display - left-hand drive vehicles                   | 27        |
| 2.6 Calibrating control unit for head-up display - right-hand drive vehicles                  | 35        |
| <b>3 Horn</b>   | <b>43</b> |
| 3.1 Exploded view - horn  | 43        |
| 3.2 Removing and installing horn or dual tone horn [H1]                                       | 43        |
| <b>92 - Windscreen wash/wipe system</b>   | <b>45</b> |
| <b>1 Safety information and repair notes</b>  | <b>45</b> |
| 1.1 Safety information  | 45        |
| 1.2 Repair instructions   | 45        |
| <b>2 Windscreen wiper system</b>  | <b>46</b> |
| 2.1 Assembly overview - windscreen wiper system   | 46        |
| 2.2 Moving wipers to service position   | 47        |
| 2.3 Removing and installing wiper blade   | 47        |
| 2.4 Removing and installing wiper arms  | 49        |
| 2.5 Adjusting wiper arms  | 51        |
| 2.6 Removing and installing wiper motor V   | 53        |
| 2.7 Deactivating APP function   | 54        |
| 2.8 Removing and installing rain and light sensor [G397]                                      | 54        |
| <b>3 Windscreen washer system</b>   | <b>59</b> |
| 3.1 Assembly overview - windscreen washer system  | 59        |

|           |   |            |
|-----------|---|------------|
| 3.2       | Removing and installing washer fluid reservoir .....  | 61         |
| 3.3       | Removing and installing washer pump V59 .....   | 63         |
| 3.4       | Removing and installing spray jets .....  | 65         |
| 3.5       | Adjusting washer jets .....   | 66         |
| <b>4</b>  | <b>Rear window wiper system .....</b>   | <b>67</b>  |
| 4.1       | Exploded view - rear window wiper system .....  | 67         |
| 4.2       | Removing and installing wiper blade .....   | 67         |
| 4.3       | Removing and installing wiper arm .....   | 68         |
| 4.4       | Adjusting wiper arm .....   | 69         |
| 4.5       | Removing and installing rear window wiper motor V12 .....                                       | 70         |
| <b>5</b>  | <b>Rear window washer system .....</b>  | <b>72</b>  |
| 5.1       | Exploded view - rear window washer system .....   | 72         |
| 5.2       | Removing and installing washer jet for rear window washer system .....                          | 73         |
| 5.3       | Removing and installing washer jet for reversing camera/rear overhead view camera .....         | 73         |
| 5.4       | Adjusting washer jet .....  | 74         |
| <b>6</b>  | <b>Headlight washer system .....</b>  | <b>75</b>  |
| 6.1       | Exploded view - headlight washer system .....   | 75         |
| 6.2       | Removing and installing headlight washer system pump V11 .....                                  | 75         |
| 6.3       | Removing and installing washer jet .....  | 77         |
| <b>7</b>  | <b>Washer fluid lines .....</b>   | <b>78</b>  |
| 7.1       | Repairing washer fluid hoses .....  | 78         |
| <b>94</b> | <b>Lights, bulbs, switches - exterior .....</b>   | <b>79</b>  |
| <b>1</b>  | <b>Safety information and repair notes .....</b>  | <b>79</b>  |
| 1.1       | Safety information .....  | 79         |
| 1.2       | Repair instructions .....   | 79         |
| <b>2</b>  | <b>Headlights .....</b>   | <b>80</b>  |
| 2.1       | Exploded view - LED headlight .....   | 80         |
| 2.2       | Exploded view - matrix LED headlights .....   | 82         |
| 2.3       | Removing and installing headlights .....  | 84         |
| 2.4       | Adjusting LED headlights .....  | 87         |
| 2.5       | Adjusting matrix LED headlights .....   | 93         |
| 2.6       | Installing repair kit for headlight housing .....   | 112        |
| 2.7       | Removing and installing headlight range control motor V48/V49 - ECE vehicles .....              | 113        |
| 2.8       | Removing and installing headlight range control motor V48/V49 - NAR vehicles .....              | 116        |
| 2.9       | Removing and installing output module 1 for LED headlight A27/A31 - LED headlights ..           | 118        |
| 2.10      | Removing and installing output module 1 for LED headlight A27/A31 - matrix LED headlights ..... | 122        |
| 2.11      | Removing and installing filter membrane .....   | 123        |
| 2.12      | Removing and installing sealing frame .....   | 124        |
| <b>3</b>  | <b>Lights in exterior mirror .....</b>  | <b>125</b> |
| 3.1       | Assembly overview - lights in exterior mirror .....   | 125        |
| 3.2       | Removing and installing turn signal repeater bulb [L131]/[L132] .....                           | 127        |
| 3.3       | Removing and installing entry light in exterior mirror [W52]/[W53] .....                        | 128        |
| <b>4</b>  | <b>Lights in sill panel trim .....</b>  | <b>130</b> |
| 4.1       | Assembly overview - entry light .....   | 130        |
| <b>5</b>  | <b>Tail light cluster .....</b>   | <b>131</b> |
| 5.1       | Exploded view - tail light cluster on body .....  | 131        |
| 5.2       | Exploded view - tail light cluster on rear lid .....  | 131        |
| 5.3       | Removing and installing tail light cluster .....  | 133        |
| 5.4       | Removing and installing tail light cluster on rear lid .....                                    | 134        |
| 5.5       | Correcting installation position of tail light cluster .....                                    | 135        |
| <b>6</b>  | <b>High-level brake light .....</b>   | <b>137</b> |
| 6.1       | Assembly overview - high-level brake light, Q4 e-tron .....                                     | 137        |

|           |  |            |
|-----------|--|------------|
| 6.2       | Assembly overview - high-level brake light, Q4 Sportback e-tron  | 137        |
| 6.3       | Removing and installing high-level brake light bulb - Q4 e-tron  | 138        |
| 6.4       | Removing and installing high-level brake light bulb - Q4 Sportback e-tron  | 139        |
| <b>7</b>  | <b>Number plate light</b>  | <b>141</b> |
| 7.1       | Removing and installing number plate light X4/X5   | 141        |
| <b>8</b>  | <b>Entry and start authorisation system</b>  | <b>142</b> |
| 8.1       | Overview of fitting locations - entry and start authorisation system   | 142        |
| 8.2       | Overview of fitting locations - keyless entry system   | 142        |
| 8.3       | Exploded view - exterior door handle for keyless entry system  | 144        |
| 8.4       | Exploded view - control unit for break-in protection   | 144        |
| 8.5       | Removing and installing entry and start authorisation control unit J518  | 145        |
| 8.6       | Removing and installing contact sensor for exterior door handle  | 147        |
| 8.7       | Removing and installing luggage compartment aerial for entry and start system R137                                 | 148        |
| 8.8       | Removing and installing interior aerial 1 for entry and start system R138  | 149        |
| 8.9       | Removing and installing entry and start authorisation aerials  | 150        |
| 8.10      | Removing and installing control unit 2 for break-in protection J1192/ control unit 3 for break-in protection J1193 | 151        |
| 8.11      | Removing and installing control unit 4 for break-in protection J1194/ control unit 5 for break-in protection J1195 | 152        |
| 8.12      | Alcohol interlock  | 153        |
| <b>9</b>  | <b>Steering column switch module</b>   | <b>166</b> |
| 9.1       | Assembly overview - steering column switch module  | 166        |
| 9.2       | Removing and installing steering column switch module  | 166        |
| <b>10</b> | <b>Automatic headlight range control</b>   | <b>169</b> |
| 10.1      | Overview - automatic headlight range control   | 169        |
| <b>11</b> | <b>Towing bracket</b>  | <b>170</b> |
| 11.1      | Removing and installing trailer detector control unit J345   | 170        |
| 11.2      | Removing and installing trailer socket [U10]   | 170        |
| <b>96</b> | <b>Lights, bulbs, switches - interior</b>  | <b>172</b> |
| <b>1</b>  | <b>Safety information and repair notes</b>   | <b>172</b> |
| 1.1       | Safety information   | 172        |
| 1.2       | Repair instructions  | 172        |
| <b>2</b>  | <b>Lights</b>  | <b>173</b> |
| 2.1       | Overview of fitting locations - lights in dash panel   | 173        |
| 2.2       | Overview of fitting locations - lights in front doors  | 175        |
| 2.3       | Overview of fitting locations - lights in rear doors   | 177        |
| 2.4       | Overview of fitting locations - lights in centre console and in seats  | 179        |
| 2.5       | Overview of fitting locations - lights in luggage compartment  | 179        |
| 2.6       | Overview of fitting locations - lights in roof trim  | 180        |
| 2.7       | Removing and installing glove compartment light W6   | 181        |
| 2.8       | Renewing bulb for glove compartment light W6   | 182        |
| 2.9       | Removing and installing front footwell light K268/K269   | 183        |
| 2.10      | Removing and installing central locking SAFELOCK function warning lamp [K133]                                      | 184        |
| 2.11      | Removing and installing front entry light W92/W93  | 184        |
| 2.12      | Removing and installing rear entry light W83/W84   | 185        |
| 2.13      | Removing and installing light for dash panel contour lighting  | 186        |
| 2.14      | Removing and installing light for front door background lighting W86/W87/L199/L200                                 | 187        |
| 2.15      | Removing and installing light for rear door background lighting W88/W89/L201/L202                                  | 188        |
| 2.16      | Removing and installing bulb for centre console background lighting  | 189        |
| 2.17      | Removing and installing storage compartment illumination bulb in front centre console L324                         | 191        |
| 2.18      | Removing and installing rear footwell light W45/W46  | 192        |
| 2.19      | Removing and installing footwell/luggage compartment light   | 193        |
| 2.20      | Removing and installing illuminated vanity mirror W49/W50  | 193        |

|           |  |            |
|-----------|--|------------|
| <b>3</b>  | <b>Controls</b>  | <b>195</b> |
| 3.1       | Overview of fitting locations - controls in dash panel                               | 195        |
| 3.2       | Overview of fitting locations - controls in front doors                              | 195        |
| 3.3       | Overview of fitting locations - controls in rear doors                               | 196        |
| 3.4       | Overview of fitting locations - controls in centre console                           | 197        |
| 3.5       | Overview of fitting locations - controls in luggage compartment                      | 198        |
| 3.6       | Overview of fitting locations - controls in roof trim                                | 199        |
| 3.7       | Removing and installing light switch E1  | 200        |
| 3.8       | Removing and installing operating unit 1 for driver and convenience functions E791   | 201        |
| 3.9       | Removing and installing glove compartment light switch E26                           | 203        |
| 3.10      | Removing and installing exterior mirror adjuster EX11                                | 203        |
| 3.11      | Removing and installing operating unit for window regulator in driver door EX36      | 204        |
| 3.12      | Removing and installing window regulator switch in front passenger door EX27         | 205        |
| 3.13      | Removing and installing interior locking button for central locking system E308/E309 | 206        |
| 3.14      | Removing and installing driver operating unit for memory settings E464               | 207        |
| 3.15      | Removing and installing rear lid remote release button E233                          | 207        |
| 3.16      | Removing and installing operating unit in rear door EX60/EX61                        | 208        |
| 3.17      | Removing and installing starter button E378  | 209        |
| 3.18      | Removing and installing towing bracket release button E754                           | 210        |
| 3.19      | Removing and installing rear lid handle release button E234                          | 211        |
| 3.20      | Removing and installing operating unit for rear lid control EX58                     | 213        |
| 3.21      | Removing and installing rear lid warning buzzer [H32]                                | 214        |
| 3.22      | Removing and installing interior light/reading light (front)                         | 215        |
| 3.23      | Removing and installing interior light/reading light (rear)                          | 215        |
| <b>4</b>  | <b>Anti-theft alarm system</b>   | <b>217</b> |
| 4.1       | Assembly overview - interior monitoring, Q4 e-tron                                   | 217        |
| 4.2       | Assembly overview - interior monitoring, Q4 Sportback e-tron                         | 217        |
| 4.3       | Removing and installing alarm horn [H12]   | 218        |
| 4.4       | Removing and installing anti-theft alarm sensor [G578]                               | 219        |
| <b>5</b>  | <b>Cigarette lighter, socket</b>   | <b>221</b> |
| 5.1       | Exploded view - cigarette lighter, 12 V socket                                       | 221        |
| 5.2       | Removing and installing 12 V socket U5   | 221        |
| 5.3       | Removing and installing 12 V socket 2 U18  | 223        |
| 5.4       | Removing and installing 12 V socket 3U19   | 225        |
| 5.5       | Renewing 12 V socket 3 U19   | 226        |
| 5.6       | Removing and installing illuminated ring   | 228        |
| <b>97</b> | <b>- Wiring</b>  | <b>229</b> |
| <b>1</b>  | <b>Safety information and repair notes</b>   | <b>229</b> |
| 1.1       | Safety information   | 229        |
| 1.2       | Repair instructions  | 229        |
| <b>2</b>  | <b>Relay carriers, fuse holders, electronics boxes</b>                               | <b>230</b> |
| 2.1       | Overview of fitting locations - relay carriers, fuse carriers, electronics boxes     | 230        |
| 2.2       | Exploded view - relay carriers, fuse carriers, electronics boxes                     | 230        |
| 2.3       | Removing and installing electronics box  | 232        |
| 2.4       | Removing and installing fuse holder A [SA]   | 233        |
| 2.5       | Removing and installing fuse holder B [SB]   | 235        |
| 2.6       | Removing and installing fuse holder C [SC]   | 237        |
| <b>3</b>  | <b>Control units</b>   | <b>241</b> |
| 3.1       | Overview of fitting locations - control units  | 241        |
| 3.2       | Exploded view - onboard supply control unit  | 242        |
| 3.3       | Removing and installing onboard supply control unit J519                             | 244        |
| 3.4       | Removing and installing bracket for onboard supply control unit J519                 | 246        |
| 3.5       | Removing and installing data bus diagnostic interface J533                           | 249        |
| 3.6       | Removing and installing fan for control unit [V274]                                  | 250        |

|          |  |            |
|----------|--|------------|
| 3.7      | Removing and installing garage door operation control unit       | 250        |
| <b>4</b> | <b>Connectors</b>  | <b>252</b> |
| 4.1      | Overview of fitting locations - connectors                       | 252        |
| 4.2      | Unplugging door coupling point (front)                           | 252        |
| 4.3      | Unplugging door coupling point (rear)                            | 253        |
| 4.4      | Removing and installing connector point at A-pillar (left-side)  | 253        |
| 4.5      | Removing and installing connector point at A-pillar (right-side) | 254        |
| 4.6      | Repairing electrical wiring harnesses and electrical connectors  | 255        |
| <b>5</b> | <b>Releasing and dismantling connector housings</b>              | <b>256</b> |
| 5.1      | Releasing and dismantling connector housings                     | 256        |
| <b>6</b> | <b>Cleaning contact surfaces</b>                                 | <b>257</b> |
| 6.1      | Cleaning contact surfaces  | 257        |
| <b>7</b> | <b>Repairing aerial wires</b>                                    | <b>258</b> |
| 7.1      | Repairing aerial wires   | 258        |
| <b>8</b> | <b>Fibre optic cables</b>  | <b>259</b> |
| 8.1      | Fibre optic cables   | 259        |