

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions	1
2 Repair instructions	2
2.1 Repair instructions	2
3 Electrical components	3
3.1 Starting diagnosis	3
93 - Electric drive systems	4
1 Safety and repair instructions	4
1.1 Safety precautions	4
1.2 Repair instructions	4
2 High-voltage battery unit	5
2.1 Assembly overview – high-voltage battery, installed	5
2.2 Inspecting and classifying high-voltage battery 1 AX2	8
2.3 Searching for leaks from high-voltage battery	9
2.4 Diagnosis of high-voltage battery 1 AX2	9
2.5 Leak test of high-voltage battery 1 AX2	10
2.6 Removing and installing high-voltage battery 1 [AX2]	14
2.7 Raising high-voltage battery 1 [AX2]	33
2.8 Opening high-voltage battery 1 [AX2]	35
2.9 Sealing high-voltage battery 1 [AX2]	36
2.10 Voltage and insulation measurement	41
2.11 Opening electrical circuit	43
2.12 Removing and installing battery regulation control unit [J840]	47
2.13 Determining mean cell voltage	48
2.14 Renewing battery housing (bottom section)	49
2.15 Charging and discharging battery modules	50
3 High-voltage battery components	52
3.1 Removing battery module	52
3.2 Installing battery module	56
3.3 Removing and installing battery modules control unit	59
3.4 Removing and installing connecting element	60
3.5 Removing and installing switching unit for high-voltage battery, negative terminal [SX7]	67
3.6 Removing and installing switching unit for high-voltage battery, positive terminal [SX8]	71
3.7 Overview of fitting locations – battery connectors	74
3.8 Assembly overview – high-voltage battery, battery modules	75
3.9 Overview of fitting locations – battery modules	76
3.10 Assembly overview – high-voltage battery, removed	80
3.11 Assembly overview – switching unit for high-voltage battery	84
3.12 Assembly overview – high-voltage battery, connecting element	86