

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety information	1
2 Repair instructions	2
2.1 Repair instructions	2
3 Electrical components	3
3.1 Starting diagnosis	3
91 - Communication	6
1 Safety and repair instructions	6
1.1 Safety information	6
1.2 Repair instructions	6
2 Fitting locations	7
2.1 Overview of fitting locations - components/control units in centre section of vehicle	7
2.2 Overview of fitting locations - components/control units in rear section of vehicle	9
3 Components/control units	11
3.1 Removing and installing display unit for front information display and operating unit control unit J685	11
3.2 Control unit 1 for information electronics J794	11
3.3 Removing and installing driver side volume regulator E67	13
3.4 Removing and installing digital sound package control unit J525 - 9VS	14
3.5 Removing and installing rear treble loudspeaker R14/R16 - 9VS	15
3.6 Removing and installing front treble loudspeaker R20/R22	15
3.7 Removing and installing rear bass loudspeaker R15/R17 - 9VD/9VS	16
3.8 Removing and installing front bass loudspeaker - R21/R23	17
3.9 Removing and installing subwoofer R211 - 9VD/9VS	18
3.10 Removing and installing internal microphone R74 - 9VS	18
3.11 Removing and installing aerial amplifier R24	18
3.12 Removing and installing aerial amplifier 2 R111	19
3.13 Removing and installing aerial amplifier 3 for TV R84	19
3.14 Removing and installing GPS aerial R50	20
3.15 Removing and installing satellite tuner aerial R172	20
3.16 Removing and installing digital radio aerial R183	21
3.17 Removing and installing roof aerial RX5	21
3.18 Removing and installing emergency call module aerial R263	22
3.19 Removing and installing emergency call module aerial 2 R322	22
3.20 Removing and installing internal vehicle communication aerial R364	22
3.21 Removing and installing internal vehicle communication aerial 2 R365	23
3.22 Removing and installing LTE aerial 2 R306 - 9ZE	24
3.23 Removing and installing dedicated short-range communication aerial R269	24
3.24 Removing and installing internet access control unit J666	25
3.25 Removing and installing aerial amplifier for mobile telephone R86 - 9ZE	26
3.26 Removing and installing telephone bracket - 9ZE, 9ZV	26
3.27 Removing and installing telephone microphone R38	27
3.28 Removing and installing chip card reader control unit	27
3.29 TV tuner R78	28
3.30 Removing and installing multifunction buttons E440/E441	30
3.31 Removing and installing paddle E755/E756	31
3.32 Removing and installing control unit for steering wheel contact detection J1158	31
3.33 Removing and installing USB connection 1 U41	32
3.34 Removing and installing USB charging socket 1 U37	33
3.35 Removing and installing control unit with Android operating system J1243	34
3.36 Removing and installing emergency call module control unit and communication unit J949	34

3.37	Removing and installing loudspeaker for emergency call module R335	35
3.38	Removing and installing emergency battery, telematics A16	35
4	Infotainment system	37
4.1	Layout - infotainment system	37
5	Sound system	38
5.1	Layout - sound system	38
6	Aerial systems	40
6.1	Layout - aerial systems	40
7	Telephone system	42
7.1	Layout - telephone	42
8	Navigation system	43
8.1	Layout - navigation system	43
9	TV system	44
9.1	Layout - TV system	44
10	Multi-function steering wheel	45
10.1	Layout - multi-function steering wheel	45
10.2	Assembly overview - multi-function steering wheel	45
11	Connection for external multimedia devices	47
11.1	Layout - external multimedia devices	47
12	Online services	48
12.1	Layout - online services	48