

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety information	1
2 Repair instructions	2
2.1 Repair instructions	2
3 Electronic components	3
3.1 Starting diagnosis	3
68 - Interior equipment	4
1 Safety and repair instructions	4
1.1 Repair instructions	4
1.2 Safety information	4
2 Compartments/covers	5
2.1 Overview of fitting locations - storage compartments/covers/trim panels	5
2.2 Assembly overview - dash panel cover (driver side)	5
2.3 Exploded view - steering column trim	6
2.4 Assembly overview - glove compartment	7
2.5 Removing and installing dash panel cover (driver side)	8
2.6 Removing and installing steering column trim (top)	10
2.7 Removing and installing steering column trim (bottom)	11
2.8 Removing and installing glove box opening mechanism	12
2.9 Removing and installing glove compartment	12
2.10 Removing and installing glove box lid	13
2.11 Removing and installing cushioning element for glove box	14
2.12 Removing and installing footwell cover (driver side)	15
2.13 Removing and installing footwell cover (front passenger side)	16
3 Equipment	17
3.1 Assembly overview - net partition	17
3.2 Assembly overview ? sun visors	17
3.3 Exploded view - grab handle	18
3.4 Removing and installing net partition bracket	19
3.5 Removing and installing sun visor	21
3.6 Removing and installing sun visor centre mount	23
3.7 Removing and installing grab handle	24
4 Centre console	26
4.1 Assembly overview - centre console	26
4.2 Removing and installing centre console trim (rear)	29
4.3 Removing and installing centre console insert	29
4.4 Removing and installing centre console storage compartment (front)	30
4.5 Removing and installing centre console	30
4.6 Removing and installing cup holder	32
4.7 Removing and installing centre console storage compartment (rear)	32
4.8 Removing and installing mounting for interface for external multimedia devices	33
4.9 Removing and installing brackets for centre console	34
4.10 Removing and installing side trim for centre console	35
4.11 Removing and installing vent in centre console (rear)	35
4.12 Removing and installing operating panel	36
4.13 Removing and installing operating panel (bottom section)	37
4.14 Removing and installing operating panel (top section)	38
5 Front centre armrest	39
5.1 Exploded view - centre armrest (front)	39
5.2 Removing and installing centre armrest (front)	39

5.3	Removing and installing centre armrest (top section)	40
5.4	Removing and installing cover for centre armrest	41
6	Interior mirror	43
6.1	Assembly overview – interior mirror	43
6.2	Removing and installing interior mirror	43
69	Passenger protection	46
1	Safety and repair instructions	46
1.1	Repair instructions	46
1.2	Safety information	46
2	Seat belts	47
2.1	Overview of fitting locations – seat belts and anchorage points	47
2.2	Assembly overview ? front three-point seat belt	49
2.3	Assembly overview ? rear outer three-point seat belt	51
2.4	Assembly overview – rear centre three-point seat belt	51
2.5	Assembly overview - front belt buckle	52
2.6	Assembly overview – rear belt buckle	53
2.7	Removing and installing front three-point seat belt NX10/NX11	54
2.8	Removing and installing rear three-point seat belt	57
2.9	Removing and installing rear belt guide	60
2.10	Removing and installing front belt guide	61
2.11	Removing and installing front belt end fitting	61
2.12	Removing and installing rear outer belt end fitting	64
2.13	Removing and installing belt height adjuster	64
2.14	Removing and installing front belt buckle	65
2.15	Removing and installing rear belt buckle	66
3	Child seat anchors	69
3.1	Assembly overview ? front child seat anchors	69
3.2	Assembly overview - rear child seat anchors	69
3.3	Removing and installing front child seat anchor	70
3.4	Removing and installing rear child seat anchors	71
4	Airbag system	73
4.1	Overview of fitting locations - airbag system	73
5	Airbag control unit	76
5.1	Assembly overview ? airbag control unit	76
5.2	Removing and installing airbag control unit J234	76
6	Front airbag, driver side	79
6.1	Assembly overview - driver airbag	79
6.2	Removing and installing airbag unit with igniters	79
6.3	Renewing connector at airbag	84
7	Front passenger airbag	86
7.1	Exploded view - airbag (front passenger side)	86
7.2	Removing and installing front passenger airbag unit with igniters	86
7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side E224	88
8	Side airbags	90
8.1	Assembly overview - front outer side airbag	90
8.2	Assembly overview - front inner side airbag	90
8.3	Assembly overview - rear side airbag	91
8.4	Removing and installing front outer side airbag	92
8.5	Removing and installing inner side airbag	94
8.6	Removing and installing rear side airbag with igniter	96
9	Curtain airbags	99
9.1	Exploded view - curtain airbag	99

9.2	Removing and installing curtain airbag with igniter	99
10	Airbag crash sensors	103
10.1	Exploded view - crash sensors for airbags	103
10.2	Removing and installing crash sensor for front airbag G190/G284	105
10.3	Removing and installing front side airbag crash sensor G179/G180	107
10.4	Removing and installing rear side airbag crash sensor G256/G257	108
10.5	Removing and installing crash sensor for side airbag in B-pillar G1101/G1102	110
11	Belt-fastened recognition system	112
11.1	Assembly overview - seat occupied sensor	112
11.2	Removing and installing front seat occupied sensor [G1067]/[G128]	112
11.3	Removing and installing rear seat occupied sensor G177/G178/G1010	113
12	Seat occupied recognition	115
12.1	Overview of fitting locations - seat occupied recognition system	115
12.2	Removing and installing seat occupied sensor	115
12.3	Removing and installing seat occupied recognition control unit J706	116
13	Seat position sensor	118
13.1	Assembly overview ? seat position sensor	118
13.2	Removing and installing seat position sensor	118
70	Trim, insulation	121
1	Safety and repair instructions	121
1.1	Repair instructions	121
1.2	Safety information	121
2	Front door trims	122
2.1	Exploded view - door trim (front)	122
2.2	Removing and installing trim panel	124
2.3	Removing and installing door trim (front)	124
2.4	Removing and installing armrest (front)	127
2.5	Removing and installing interior door handle	129
3	Rear door trims	130
3.1	Exploded view - door trim (rear)	130
3.2	Removing and installing trim panel	132
3.3	Removing and installing interior door handle	132
3.4	Removing and installing door trim (rear)	133
3.5	Removing and installing armrest (rear)	136
3.6	Removing and installing window frame trim	138
4	Dash panel	139
4.1	Exploded view - dash panel	139
4.2	Removing and installing dash panel cover (side)	141
4.3	Removing and installing dash panel trim	142
4.4	Removing and installing cover for MMI screen	145
4.5	Removing and installing trim for dash panel insert	146
4.6	Removing and installing loudspeaker trim	147
4.7	Removing and installing cover for dash panel/head-up display	148
4.8	Removing and installing dash panel	148
4.9	Removing and installing outer dash panel vent	150
4.10	Removing and installing centre vent	152
4.11	Removing and installing defroster vent (front centre)	153
4.12	Removing and installing side defroster vent	153
5	Central tube for dash panel	155
5.1	Exploded view - dash panel cross member	155
5.2	Assembly overview - impact dampers and glove compartment brackets	157
5.3	Removing and installing dash panel cross member	157
5.4	Removing and installing crash bar	161



5.5	Removing and installing impact damper	162
6	Interior trims	164
6.1	Overview of fitting locations - passenger compartment trim panels	164
6.2	Assembly overview - sill panel moulding	164
6.3	Assembly overview - A-pillar trim	165
6.4	Exploded view - B-pillar trim	166
6.5	Assembly overview - C-pillar trim, standard	167
6.6	Assembly overview - C-pillar trim, Sportback	168
6.7	Assembly overview - D-pillar trim, standard	169
6.8	Assembly overview - D-pillar trim, Sportback	170
6.9	Exploded view - foot rest and floor covering	171
6.10	Removing and installing front sill panel moulding	172
6.11	Removing and installing rear sill panel moulding	173
6.12	Removing and installing A-pillar trim (top)	175
6.13	Removing and installing lower A-pillar trim	177
6.14	Removing and installing trim cover for A-pillar trim	178
6.15	Removing and installing B-pillar trim (top)	178
6.16	Removing and installing lower B-pillar trim	180
6.17	Removing and installing C-pillar trim - standard	181
6.18	Removing and installing C-pillar trim - Sportback	182
6.19	Removing and installing D-pillar trim - standard	183
6.20	Removing and installing D-pillar trim - Sportback	184
6.21	Removing and installing floor covering	185
6.22	Removing and installing foot rest	185
7	Luggage compartment trims	187
7.1	Overview of fitting locations - luggage compartment trim panels, standard	187
7.2	Overview of fitting locations - luggage compartment trim panels, Sportback	187
7.3	Assembly overview - luggage compartment side trim	188
7.4	Assembly overview - luggage compartment floor	189
7.5	Assembly overview - lower rear lid trim, standard	190
7.6	Assembly overview - lower rear lid trim, Sportback	191
7.7	Exploded view - rear lid trim (top)	192
7.8	Removing and installing lower rear lid trim - standard	193
7.9	Removing and installing lower rear lid trim - Sportback	194
7.10	Removing and installing rear lid trim (top)	196
7.11	Removing and installing rear lid trim (side)	196
7.12	Removing and installing luggage compartment side trim	197
7.13	Removing and installing lock carrier trim	199
7.14	Removing and installing retainers for luggage compartment floor	200
8	Roof trims	202
8.1	Exploded view - moulded headliner	202
8.2	Removing and installing moulded headliner	202
8.3	Lowering moulded headliner	203
8.4	Attaching roof reinforcement to body	206
72	Seat frames	209
1	Safety and repair instructions	209
1.1	Safety information	209
1.2	Repair instructions	209
2	Overview of seat variants	210
2.1	Overview of fitting locations - seat versions	210
3	Front seats	211
3.1	Overview of fitting locations - electrical and electronic components	211
3.2	Exploded view - front seat	213
3.3	Exploded view - front seat backrest	214

3.4	Exploded view - head restraint	215
3.5	Exploded view - seat pan	216
3.6	Removing and installing front seat	219
3.7	Removing and installing seat height adjuster	222
3.8	Removing and installing seat height adjustment unit	223
3.9	Removing and installing seat rake adjuster	225
3.10	Removing and installing front seat backrest	227
3.11	Removing and installing head restraint	229
3.12	Removing and installing head restraint guide	231
3.13	Removing and installing switch module for lumbar support adjustment	232
3.14	Removing and installing backrest adjuster	232
3.15	Removing and installing backrest cover panel	233
3.16	Securing front seat to seat repair stand	234
3.17	Removing and installing spring mat	235
3.18	Removing and installing lumbar support	235
3.19	Removing and installing seat depth adjuster	237
3.20	Removing and installing seat adjustment operating unit E470/E471	239
3.21	Removing and installing bracket for seat trim	240
3.22	Removing and installing control unit for seat adjustment	241
3.23	Removing and installing driver seat longitudinal adjustment motor V28	242
3.24	Removing and installing seat trim (inside)	244
3.25	Removing and installing seat trim (outside)	245
3.26	Removing and installing seat rail covers	247
3.27	Removing and installing seat longitudinal adjustment handle	248
3.28	Removing and installing bracket for fire extinguisher	249
3.29	Connecting and disconnecting modular wiring	250
4	Rear seats	252
4.1	Assembly overview – bench seat/individual seats	252
4.2	Assembly overview - rear seat backrest	253
4.3	Exploded view - head restraint and head restraint guide	253
4.4	Exploded view - locking mechanism	254
4.5	Exploded view - centre armrest	255
4.6	Removing and installing bench seat/individual seats	256
4.7	Removing and installing rear seat backrest	258
4.8	Removing and installing seat pan	260
4.9	Removing and installing head restraint	261
4.10	Removing and installing head restraint guide	262
4.11	Removing and installing trim for locking mechanism	264
4.12	Removing and installing locking mechanism for rear seat backrest	265
4.13	Removing and installing flap for load-through hatch	266
4.14	Removing and installing centre armrest	267
4.15	Removing and installing outer bearing sleeve	267
4.16	Removing and installing inner pivot pin	268
74	Seat - padding, covers	270
1	Safety and repair instructions	270
1.1	Safety information	270
1.2	Repair instructions	270
2	Covers and padding on front seats	271
2.1	Exploded view - seat pan cover and padding	271
2.2	Assembly overview - backrest cover and padding	273
2.3	Overview - seat heater elements	274
2.4	Removing and installing seat pan cover and padding	277
2.5	Removing and installing backrest cover and padding	279
2.6	Separating seat pan cover and padding	281
2.7	Separating backrest cover and padding	283



2.8	Removing and installing seat heater element Z45/Z46	284
2.9	Removing and installing backrest heater element Z116/Z117	285
2.10	Removing and installing seat depth adjuster heater element	286
2.11	Removing and installing seat bolster heating element	287
3	Rear seat covers and padding	288
3.1	Exploded view - cover and padding	288
3.2	Removing and installing cover and padding of rear bench seat	290
3.3	Removing and installing cover and padding for rear seat backrest	291
3.4	Removing and installing intermediate padding, backrest with load-through hatch	294
3.5	Separating cover and padding for rear seat bench	294
3.6	Separating cover and padding for rear seat backrest	295