

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions	1
2 Repair instructions	2
2.1 Repair instructions	2
2.2 Specifications for self-adhesive components	2
3 Electronic components	5
3.1 Starting diagnosis	5
4 General notes	7
4.1 General notes on the use of adhesives	7
5 Technical data	8
5.1 Dimensions of water drain holes in outer door seal	8
50 - Body - front	9
1 Safety and repair instructions	9
1.1 Safety precautions	9
1.2 Repair instructions	9
2 Wings	10
2.1 Exploded view - wing	10
2.2 Removing and installing wing	10
2.3 Removing and installing wing panel brace	12
2.4 Removing and installing closure plate	12
2.5 Removing and installing guide	14
2.6 Removing and installing wing bracket	14
3 Bulkhead	17
3.1 Exploded view - plenum chamber partition panel	17
3.2 Exploded view - plenum chamber cover	17
3.3 Removing and installing bulkhead	18
3.4 Removing and installing plenum chamber cover	21
4 Lock carrier	23
4.1 Assembly overview – lock carrier	23
4.2 Removing and installing lock carrier	25
4.3 Removing and installing anti-vibration brace	28
4.4 Removing and installing lock carrier support	28
4.5 Removing and installing lock carrier brace	29
4.6 Removing and installing headlight mounting	30
4.7 Headlight mounting carrier	31
4.8 Removing and installing wheel actuator	32
55 - Bonnet, rear lid	33
1 Safety and repair instructions	33
1.1 Safety precautions	33
1.2 Repair instructions	33
2 Bonnet	34
2.1 Exploded view - bonnet	34
2.2 Exploded view - Bowden cable	34
2.3 Adjustment dimensions	36
2.4 Removing and installing bonnet	38
2.5 Adjusting bonnet	38
2.6 Removing and installing bonnet lock	39
2.7 Removing and installing bonnet lock operating lever	40
2.8 Removing and installing striker	41



2.9	Removing and installing hinges	41
2.10	Removing and installing Bowden cable	42
2.11	Removing and installing coupling unit with Bowden cables for bonnet lock (both sides)	44
2.12	Removing and installing bonnet stay	45
2.13	Removing and installing operating lever for arrester	46
2.14	Removing and installing mounting bracket for operating lever for bonnet lock	47
2.15	Removing and installing mounting bracket with Bowden cable for operating lever for arrester	48
2.16	Adjusting hinge	48
2.17	Adjusting striker	49
2.18	Setting adjusting buffers	50
2.19	Removing and installing impact guard	51
3	Rear lid	52
3.1	Assembly overview - rear lid	52
3.2	Removing and installing rear lid	55
3.3	Adjusting rear lid	56
3.4	Adjustment dimensions	57
3.5	Adjusting hinges	58
3.6	Setting adjusting buffers	59
3.7	Removing and installing adjusting buffers	60
3.8	Adjusting striker pin	60
3.9	Removing and installing rear lid lock unit [VX25]	61
3.10	Removing and installing rear lid lock unit VX25 with power latching system	62
3.11	Removing and installing hinges	63
3.12	Removing and installing striker pin	64
3.13	Removing and installing rear lid seal	65
3.14	Preparing gas strut for disposal	65
3.15	Removing and installing rear lid drive unit VX69/rear lid drive unit 2 VX77	66
3.16	Removing and installing rear lid control unit J605	67
3.17	Removing and installing rear lid power opening senders G750/G760	68
3.18	Removing and installing rear lid power opening control unit J938	69
3.19	Preparing rear lid drive unit [VX69]/rear lid drive unit 2 [VX77] for disposal	70
3.20	Removing and installing power latching for rear lid [VX16]	70
3.21	Removing and installing Bowden cable for power latching system	71
3.22	Removing and installing gas strut	73
3.23	Removing and installing gas strut	74
4	Charging flap unit	76
4.1	Exploded view - charging flap unit	76
4.2	Removing and installing charging flap unit	76
4.3	Removing and installing charging flap unit trim	78
4.4	Removing and installing LED module for charging socket L263/L264	79
57	Front doors, door components, central locking	81
1	Safety and repair instructions	81
1.1	Safety precautions	81
1.2	Repair instructions	81
2	Door	82
2.1	Assembly overview – door	82
2.2	Assembly overview - door seals	84
2.3	Adjustment dimensions	85
2.4	Removing and installing inner door seal	85
2.5	Removing and installing outer door seal	87
2.6	Removing and installing door	91
2.7	Adjusting door	92
2.8	Adjusting hinges	92
2.9	Adjusting striker	94

2.10	Removing and installing door hinge	95
2.11	Removing and installing door arrester	97
3	Door components	98
3.1	Assembly overview – assembly carrier	98
3.2	Assembly overview - door handle and door lock	98
3.3	Exploded view - window guides and window slot trim strips	100
3.4	Removing and installing window regulator motor	101
3.5	Removing and installing striker pin	102
3.6	Removing and installing door handle	103
3.7	Removing and installing mounting bracket	105
3.8	Removing and installing door lock	106
3.9	Removing and installing assembly carrier	107
3.10	Removing and installing window guide	108
3.11	Removing and installing window slot inner seal	110
3.12	Removing and installing outer window slot trim strip	111
3.13	Removing and installing cover for window slot trim strip	112
3.14	Removing and installing lock cylinder	113
3.15	Removing and installing cap on door handle	114
3.16	Removing and installing door handle trim	116
3.17	Removing and installing operating cable for exterior door handle	118
3.18	Removing and installing operating cable for interior door handle	119
4	Central locking	120
4.1	Overview of fitting locations - central locking system	120
4.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	122
4.3	Removing and installing rear driver side door control unit J926 and rear passenger side door control unit J927	123
4.4	Removing and installing actuator for high-voltage charging flap lock [F496]	123
58	Rear doors, door components	125
1	Safety and repair instructions	125
1.1	Safety precautions	125
1.2	Repair instructions	125
2	Door	126
2.1	Assembly overview – door	126
2.2	Assembly overview - door seals	128
2.3	Adjustment dimensions	129
2.4	Removing and installing door	130
2.5	Adjusting door	130
2.6	Adjusting hinges	131
2.7	Adjusting striker	133
2.8	Removing and installing door hinge	133
2.9	Removing and installing door arrester	135
2.10	Removing and installing outer door seal	136
2.11	Removing and installing inner door seal	140
2.12	Removing and installing side member seal	141
3	Door components	143
3.1	Assembly overview – assembly carrier	143
3.2	Exploded view - door handle and door lock	143
3.3	Exploded view - window guides and window slot trim strips	145
3.4	Removing and installing window regulator motor	145
3.5	Removing and installing striker pin	146
3.6	Removing and installing door handle	147
3.7	Removing and installing mounting bracket	149
3.8	Removing and installing door lock	150
3.9	Removing and installing assembly carrier	151



3.10	Removing and installing window guide	152
3.11	Removing and installing guide rail for door window	154
3.12	Removing and installing outer window slot trim strip	155
3.13	Removing and installing inner window slot trim strip	156
3.14	Removing and installing door handle trim	157
3.15	Removing and installing operating cable for exterior door handle	158
3.16	Removing and installing operating cable for interior door handle	159
3.17	Removing and installing housing	160
60	- Sunroof	162
1	Safety and repair instructions	162
1.1	Safety precautions	162
1.2	Repair instructions	162
2	Sliding sunroof	163
2.1	Assembly overview - sliding sunroof	163
2.2	Assembly overview - sunroof roller blind	165
2.3	Assembly overview - wind deflector	166
2.4	Adjustment dimensions	167
2.5	Removing and installing sliding sunroof frame	168
2.6	Removing and installing wind deflector	172
2.7	Removing and installing mounting for wind deflector	173
2.8	Removing and installing sliding sunroof adjustment control unit J245	173
2.9	Removing and installing sunroof roller blind	174
2.10	Removing and installing sunroof roller blind motor V260	177
2.11	Removing and installing seal for roof opening	178
2.12	Removing and installing seal for glass panel (front)	180
2.13	Removing and installing seal for glass panel (rear)	181
2.14	Manual actuation	181
2.15	Removing and installing sliding sunroof motor V1	182
2.16	Removing and installing front glass panel	184
2.17	Removing and installing rear glass panel	185
2.18	Adjusting glass panel	186
3	Water drain hoses	189
3.1	Assembly overview - water drain hoses	189
3.2	Cleaning water drain hoses	190
3.3	Removing and installing water drain hoses	191
63	- Bumpers	194
1	Safety and repair instructions	194
1.1	Safety precautions	194
1.2	Repair instructions	194
2	Bumper, front	195
2.1	Assembly overview - bumper cover	195
2.2	Assembly overview - bumper carrier	197
2.3	Removing and installing bumper cover	198
2.4	Removing and installing bumper carrier	200
2.5	Moving bumper carrier to and back from service position	202
2.6	Adjusting bumper cover	204
2.7	Removing and installing cover for headlight washer jet	204
2.8	Removing and installing air intake grille (centre)	205
2.9	Removing and installing trim strip	205
2.10	Removing and installing closure plate for bumper cover	206
2.11	Removing and installing air guide	207
2.12	Removing and installing front spoiler for bumper cover	207
2.13	Removing and installing side panel of bumper cover	208

2.14	Removing and installing bumper cover trim	209
2.15	Removing and installing centre air guide	210
2.16	Removing and installing air intake grille (side)	210
2.17	Removing and installing impact guard	211
2.18	Removing and installing connecting piece	211
3	Bumper, rear	212
3.1	Exploded view - bumper cover, basic version	212
3.2	Exploded view - bumper cover, S line	214
3.3	Assembly overview - bumper carrier	217
3.4	Removing and installing bumper cover	218
3.5	Removing and installing bumper carrier	219
3.6	Removing and installing forced ventilation vent in passenger compartment	221
3.7	Checking forced ventilation for passenger compartment	222
3.8	Removing and installing bumper cover mounting	223
3.9	Removing and installing base plate for bumper cover - basic	225
3.10	Removing and installing base plate for bumper cover - S line	226
3.11	Removing and installing bumper cover trim	226
3.12	Removing and installing spoiler	227
3.13	Removing and installing reflector	228
3.14	Removing and installing trim strip (side)	228
3.15	Removing and installing trim strip (centre)	229
64	Glazing	231
1	Safety and repair instructions	231
1.1	Safety information	231
1.2	Repair instructions	231
2	Repair notes	232
2.1	Minimum drying times for bonded windows	232
2.2	Window repair	232
2.3	Installation instructions for bonded windows	232
2.4	Preparing old undamaged windows for installing	234
2.5	Preparing new windows for installation	235
2.6	Preparing body flange for installing	236
2.7	Cleaning off excess adhesive	238
3	Windscreen	240
3.1	Assembly overview – windscreen	240
3.2	Removing and installing windscreen	240
3.3	Removing damaged windscreen	247
4	Rear windscreen	248
4.1	Assembly overview - rear window, Q4	248
4.2	Assembly overview - rear window, Q4 Sportback	248
4.3	Assembly overview - rear window, routing of adhesive bead, Q4	249
4.4	Assembly overview - rear window, routing of adhesive bead, Q4 Sportback	250
4.5	Removing and installing rear window - Q4	251
4.6	Removing and installing rear window - Q4 Sportback	257
4.7	Removing damaged rear window	266
5	Side windows	268
5.1	Assembly overview - rear side window, Q4	268
5.2	Assembly overview - rear side window, Q4 Sportback	268
5.3	Assembly overview - side window, routing of adhesive bead, Q4	269
5.4	Assembly overview - side window, routing of adhesive bead, Q4 Sportback	270
5.5	Removing and installing rear side window - Q4	271
5.6	Removing and installing rear side window - Q4 Sportback	276
5.7	Removing damaged rear side window	280
6	Door windows	282

6.1	Assembly overview - front door window	282
6.2	Assembly overview ? fixed front door window	282
6.3	Exploded view - rear door window	283
6.4	Removing and installing front door window	284
6.5	Removing and installing rear door window	286
6.6	Removing and installing fixed front door window	288
66	- Exterior equipment	290
1	Safety and repair instructions	290
1.1	Safety precautions	290
1.2	Repair instructions	290
2	Radiator grille/front trim panel	291
2.1	Assembly overview - radiator grille	291
2.2	Removing and installing radiator grille	291
2.3	Removing and installing bracket for overhead view camera	292
2.4	Attaching number plate	293
3	Spoiler	294
3.1	Assembly overview - spoilers, Q4	294
3.2	Assembly overview - spoiler, Q4 Sportback	296
3.3	Removing and installing spoiler - Q4	296
3.4	Removing and installing spoiler - Q4 Sportback	298
3.5	Removing and installing side spoiler	299
4	Mouldings, trims, extensions	302
4.1	Assembly overview - covers	302
4.2	Exploded view - sill panel trim	302
4.3	Exploded view - side member trim	303
4.4	Assembly overview - water deflector strip	304
4.5	Exploded view - trim panel for A-pillar	305
4.6	Exploded view - trim panel for B-pillar	306
4.7	Assembly overview - trim panel for C-pillar	307
4.8	Assembly overview - wheel arch covers	308
4.9	Removing and installing sill panel trim	309
4.10	Removing and installing side member trim	311
4.11	Removing and installing water deflector strip	312
4.12	Removing and installing trim panel for A-pillar	312
4.13	Removing and installing B-pillar trim on door	313
4.14	Removing and installing trim panel for C-pillar	315
4.15	Removing and installing trim panel for C-pillar on door	316
4.16	Removing and installing wheel arch covers (front)	317
4.17	Removing and installing wheel arch cover	318
4.18	Removing and installing front door cover	319
4.19	Removing and installing rear door cover	320
4.20	Removing and installing retaining strip	321
5	Underbody cladding	323
5.1	Assembly overview - underbody cladding, 55 kWh	323
5.2	Assembly overview - underbody cladding, 82 kWh	325
5.3	Removing and installing front underbody cladding	328
5.4	Removing and installing side underbody cladding	328
5.5	Removing and installing rear centre underbody cladding	330
5.6	Removing and installing rear underbody cladding	330
5.7	Removing and installing skid plate	331
5.8	Removing and installing centre underbody cladding	332
5.9	Removing and installing skid plate for high-voltage battery - 55 kWh	333
5.10	Removing and installing skid plate for high-voltage battery - 82 kWh	334
6	Roof moulding and roof railing	336

6.1	Exploded view - roof rail	336
6.2	Removing and installing roof rail	337
7	Exterior mirror	339
7.1	Exploded view - exterior mirror	339
7.2	Removing and installing exterior mirror VX4/VX5	341
7.3	Removing and installing mirror glass	342
7.4	Removing and installing mirror adjustment unit	344
7.5	Removing and installing mirror cover	345
7.6	Removing and installing mirror frame	347
7.7	Removing and installing cover for mirror base	348
8	Wheel housing liner	350
8.1	Assembly overview – front wheel housing liner	350
8.2	Exploded view - wheel housing liner (rear)	350
8.3	Removing and installing front wheel housing liner	351
8.4	Removing and installing wheel housing liner (rear)	353
8.5	Removing and installing wheel spoiler (rear)	354
9	Lettering and emblems	355
9.1	Exploded view - model badges and brand emblems	355
9.2	Dimensions - lettering and badges on rear, Q4	355
9.3	Dimensions - lettering and badges on rear, Q4 Sportback	356
9.4	Removing and installing front emblem	357
9.5	Dimensions - lettering and badges on sides	358
9.6	General notes on renewing lettering and badges	359
10	Towing bracket	361
10.1	Assembly overview - towing bracket	361
10.2	Removing and installing trailer detector control unit J345	361