

Contents

00 - Technical data	1
1 Safety briefing/employee qualification	1
1.1 Qualification	1
2 Safety information	2
2.1 Safety information	2
2.2 Safety precautions when working on the high-voltage system	4
2.3 Safety precautions when working in the vicinity of high-voltage components	5
2.4 Safety precautions when working on the cooling system	5
2.5 Safety precautions when using testers and measuring instruments during a road test	6
2.6 Work that requires high-voltage system to be de-energised	6
3 Repair instructions	7
3.1 Information on handling fine dust, aluminium dust and steel dust	7
3.2 Routing and attachment of pipes, hoses and wiring	8
3.3 Contact corrosion	8
3.4 Bonding surfaces for self-adhesive components	8
3.5 Secure threaded connections	8
3.6 Identification plates	9
3.7 Impact wrenches	9
4 Vehicle identification data	10
4.1 Vehicle identification number	10
4.2 Type plate	11
5 Safety certificate	12
6 Important notes	13
7 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)	14
8 Galvanised body panels, high-strength and extra-high-strength steel	16
9 Aluminium extrusions	21
10 Moulded foam inserts	24
11 Bonded joints	27
11.1 Bonded joints	27
11.2 Spot-welded bonded joints	27
11.3 Inspecting and repairing bonded joints	27
11.4 Repair methods for replacing body parts	28
12 Contact corrosion	29
13 Surface treatment	30
14 Matching the surface contour	31
15 Renewing studs	32
16 Thread repair for M6 pop rivet nut	33
17 Repairing thread for seat belt anchorage	34
18 Body dimensions	35
18.1 Body - front	35
18.2 Body - centre	36
18.3 Floor group	39
18.4 Body - rear	42
19 Tools	45
19.1 Using edge milling unit -VAS 882 005-	48
19.2 Straightening jig	80
50 - Body - front	82
1 Safety information	82



2	Overview of components	83
3	Renewing impact damper mounting	84
3.1	Tools	84
3.2	Procedure	85
4	Renewing battery tray	89
4.1	Tools	89
4.2	Procedure	90
5	Renewing upper wheel housing longitudinal member - partial renewal	94
5.1	Tools	94
5.2	Procedure	95
6	Renewing upper inner wheel housing longitudinal member	101
6.1	Tools	101
6.2	Procedure	102
7	Renewing front wheel housing	108
7.1	Tools	108
7.2	Procedure	109
8	Renewing front wheel housing - partial renewal	120
8.1	Tools	120
8.2	Procedure	121
9	Renewing front left longitudinal member - partial renewal	132
9.1	Tools	132
9.2	Procedure	133
10	Renewing front right longitudinal member - partial renewal	141
10.1	Tools	141
10.2	Procedure	142
11	Renewing front left longitudinal member - partial renewal (second separating cut)	150
11.1	Tools	150
11.2	Procedure	151
12	Renewing front right longitudinal member - partial renewal (second separating cut)	163
12.1	Tools	163
12.2	Procedure	164
51 - Body - centre		176
1	Safety information	176
2	Overview of components	177
3	Permitted separating cuts on complete side frame	178
4	Renewing roof - vehicles without panoramic tilting sunroof	180
4.1	Tools	180
4.2	Procedure	181
5	Renewing roof (vehicles with panoramic sunroof)	195
5.1	Tools	195
5.2	Procedure	196
6	Renewing roof side member	210
6.1	Tools	210
6.2	Procedure	211
7	Renewing roof side member - Sportback	217
7.1	Tools	217
7.2	Procedure	218
8	Renewing A-pillar	224
8.1	Tools	224
8.2	Procedure	225
9	Renewing A-pillar reinforcement - partial renewal	231

9.1	Tools	231
9.2	Procedure	232
10	Renewing B-pillar	242
10.1	Tools	243
10.2	Type plate	243
10.3	Safety certificate	244
10.4	Procedure	245
11	Renewing B-pillar reinforcement	251
11.1	Tools	251
11.2	Type plate	252
11.3	Safety certificate	252
11.4	Procedure	253
12	Renewing outer side member	259
12.1	Tools	259
12.2	Type plate	260
12.3	Safety certificate	261
12.4	Procedure	261
13	Renewing side member reinforcement	267
13.1	Tools	267
13.2	Procedure	268
14	Renewing side panel reinforcement (crash bar)	274
14.1	Tools	274
14.2	Procedure	275
53 - Body - rear		281
1	Safety information	281
2	Overview of components	282
3	Permitted separating cuts on complete side frame	284
4	Renewing rear cross panel	286
4.1	Tools	286
4.2	Procedure	287
5	Renewing rear cross member	293
5.1	Tools	293
5.2	Procedure	294
6	Renewing sealing channel support	300
6.1	Tools	300
6.2	Procedure	301
7	Renewing tail light mounting	305
7.1	Tools	305
7.2	Procedure	306
8	Renewing rear longitudinal member - partial renewal	310
8.1	Tools	310
8.2	Procedure	311
9	Renewing rear longitudinal member (second part section) - partial renewal	319
9.1	Tools	319
9.2	Procedure	320
10	Renewing side panel	331
10.1	Tools	331
10.2	Procedure	332
11	Renewing side panel - Sportback	340
11.1	Tools	340
11.2	Procedure	341
12	Renewing rear floor panel cross member	351

12.1	Tools	351
12.2	Procedure	352
13	Renewing centre floor panel - partial renewal	358
13.1	Tools	358
13.2	Procedure	359
14	Renewing rear floor panel	365
14.1	Tools	365
14.2	Procedure	366
15	Renewing cover plate for longitudinal member	372
15.1	Tools	372
15.2	Procedure	373
16	Renewing floor panel reinforcement	379
16.1	Tools	379
16.2	Procedure	380
17	Renewing outer wheel housing liner	384
17.1	Tools	384
17.2	Procedure	385
18	Renewing outer wheel housing liner - Sportback	391
18.1	Tools	391
18.2	Procedure	392