

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety information	1
2 General notes	2
2.1 Type plates	2
3 Technical data	3
3.1 Capacities for refrigerant R744	3
3.2 Capacities for refrigerant R1234yf	3
3.3 Capacities for refrigerant R134a	3
3.4 Capacities for refrigerant oil R744	3
3.5 Capacities for refrigerant oil R1234yf	4
3.6 Capacities for refrigerant oil R134a	4
3.7 Refrigerant oil capacities after renewal of components - R134a/R1234yf	4
3.8 Oil distribution	4
4 Repair instructions	6
4.1 Repair instructions	6
5 Electrical components	7
5.1 Starting diagnosis	7
87 - Air conditioning system	9
1 Safety and repair instructions	9
1.1 Safety information	9
1.2 Repair instructions	9
2 Overview of fitting locations - air conditioner	10
2.1 Overview of fitting locations - components not located in vehicle interior, vehicles without heat pump	10
2.2 Overview of fitting locations - components not located in vehicle interior, vehicles with heat pump	12
2.3 Overview of fitting locations - components in vehicle interior, front	14
3 Refrigerant circuit	17
3.1 System overview - refrigerant circuit, vehicles without heat pump	17
3.2 System overview - refrigerant circuit, with heat pump	19
3.3 Assembly overview - refrigerant lines, R134a/R1234yf	21
3.4 Exploded view - refrigerant lines, R744	23
3.5 Assembly overview - heat exchanger for high-voltage battery, R134a/R1234yf	25
3.6 Exploded view - condenser	26
3.7 Removing and installing refrigerant pressure and temperature sender G395 - R134a/R1234yf	27
3.8 Removing and installing refrigerant pressure and temperature sender G395 - R744	29
3.9 Removing and installing pressure sender for refrigerant circuit G805 - R134a/R1234yf	31
3.10 Removing and installing expansion valve - R134a/R1234yf	32
3.11 Detaching and attaching refrigerant line at expansion valve - R1234yf	33
3.12 Removing and installing condenser/gas cooler - R134a/R1234yf	34
3.13 Removing and installing condenser/gas cooler - R744	35
3.14 Removing and installing desiccant bag/dryer - R1234yf	36
3.15 Removing and installing desiccant bag/dryer - R744	38
3.16 Removing and installing evacuating and charging valve (low-pressure and high-pressure sides) - R134a/R1234yf	41
3.17 Removing and installing evacuating and charging valve (low-pressure and high-pressure sides) - R744	42
3.18 Removing and installing refrigerant pressure and temperature sender 2 G826 - R744	43
3.19 Removing and installing refrigerant pressure and temperature sender 3 G827 - R744	45
3.20 Removing and installing refrigerant pressure and temperature sender 4 G828 - R744	47

3.21	Removing and installing refrigerant pressure and temperature sender 5 G829 - R744	49
3.22	Removing and installing pressure limiting valve - R744	50
3.23	Removing and installing heat exchanger for high-voltage battery - R134a/R1234yf	52
3.24	Removing and installing heat exchanger for high-voltage battery - R744	55
3.25	Removing and installing heat condenser - R744	57
3.26	Removing and installing refrigerant shut-off valve for heater and air conditioning unit N541 - R134a/R1234yf	57
3.27	Removing and installing refrigerant expansion valve 1 N636 - R134a/R1234yf	60
3.28	Removing and installing refrigerant line - R134a/R1234yf	62
3.29	Removing and installing refrigerant line, R744	71
3.30	Detaching and attaching refrigerant lines at condenser/gas cooler - R134a/R1234yf	85
3.31	Detaching and attaching refrigerant lines at condenser/gas cooler - R744	87
3.32	Cleaning refrigerant circuit - R744	89
3.33	Cleaning refrigerant circuit - R1234yf	91
4	Heat pump valve unit	95
4.1	Assembly overview - heat pump valve unit	95
4.2	Removing and installing heat pump valve unit	99
4.3	Removing and installing refrigerant expansion valve 1 N636	103
4.4	Removing and installing refrigerant expansion valve 2 N637	106
4.5	Removing and installing refrigerant expansion valve 3 N638	108
4.6	Removing and installing refrigerant shut-off valve 1 N696	108
4.7	Removing and installing refrigerant shut-off valve 2 N640	109
4.8	Removing and installing refrigerant shut-off valve 3 N641	112
4.9	Removing and installing refrigerant shut-off valve 4 N642	113
4.10	Removing and installing refrigerant shut-off valve 5 N643	117
5	Air conditioner compressor	118
5.1	Assembly overview - air conditioner compressor	118
5.2	Detaching and attaching refrigerant lines at air conditioner compressor - R134a/R1234yf	119
5.3	Detaching and attaching refrigerant lines at air conditioner compressor - R744	120
5.4	Removing and installing air conditioner compressor VX81 - R134a/R1234yf	123
5.5	Removing and installing air conditioner compressor VX81 - R744	126
5.6	Detaching/attaching air conditioner compressor [VX81] from/to bracket	129
6	Control motors	130
6.1	Overview of fitting locations - control motors (front)	130
6.2	Exploded view - control motors, PR number KC0	132
6.3	Exploded view - control motors, PR number KH7	134
6.4	Removing and installing front left temperature flap VX34	137
6.5	Removing and installing control motor for front right temperature flap VX35	139
6.6	Removing and installing control motor for defroster flap VX47	141
6.7	Removing and installing front left air distribution flap control motor VX93	142
6.8	Removing and installing control motor for front right air distribution flap VX94	144
6.9	Removing and installing control motor for rear temperature flap VX95	145
6.10	Removing and installing control motor for fresh air and air recirculation flap [VX96]	147
6.11	Removing and installing actuator for left air distribution flap	148
6.12	Removing and installing actuator for right air distribution flap	149
7	Front heater and air conditioning unit	151
7.1	Assembly overview - heater and air conditioning unit	151
7.2	Assembly overview - evaporator housing, R134a/R1234yf	151
7.3	Exploded view - evaporator housing, R744	152
7.4	Assembly overview - air intake box of heater and air conditioning unit	153
7.5	Removing and installing heater and air conditioning unit - R1234yf	155
7.6	Removing and installing heater and air conditioning unit - R744	159
7.7	Removing and installing evaporator - R134a/R1234yf	163
7.8	Removing and installing evaporator - R744	165
7.9	Dismantling and assembling heater and air conditioning unit - R134a/R1234yf	165

7.10	Dismantling and assembling heater and air conditioning unit - R744	165
7.11	Removing and installing dust and pollen filter	165
7.12	Removing and installing fresh air blower control unit [J126]	165
7.13	Removing and installing evaporator temperature sensor G308	166
7.14	Removing and installing condensation drain	167
7.15	Checking condensation drain	168
7.16	Removing and installing air intake box of heater and air conditioning unit	169
7.17	Removing and installing air intake cowling	171
7.18	Removing and installing high-voltage heater (PTC) ZX17	173
8	Air duct system	178
8.1	Exploded view - routing of air flow and air distribution in passenger compartment	178
8.2	Removing and installing footwell vent (driver side)	180
8.3	Removing and installing footwell vent (front passenger side)	181
8.4	Removing and installing rear footwell vent	182
8.5	Removing and installing fresh air intake	183
8.6	Removing and installing air duct for vent (defrost function)	183
8.7	Removing and installing air duct for centre dash panel vent	185
8.8	Removing and installing air duct for rear centre console vent	185
8.9	Removing and installing air duct intermediate piece for vent (rear)	186
9	Coolant circuit	187
9.1	Exploded view - high-voltage heater (PTC), vehicles with rear-wheel drive	187
9.2	Exploded view - high-voltage heater (PTC), vehicles with four-wheel drive	187
9.3	Removing and installing heater element 3 Z132 - vehicles with rear-wheel drive	188
9.4	Removing and installing heater element 3 Z132 - vehicles with four-wheel drive	191
10	Operating and display unit	194
10.1	Overview of fitting locations – operating and display unit	194
10.2	Removing and installing operating and display unit for front air conditioning system E87	194
10.3	Removing and installing operating and display unit for rear air conditioning system E265	196
11	Further control components	197
11.1	Removing and installing external air quality and air humidity sensor G935	197
11.2	Removing and installing ambient temperature sensor G17	197
11.3	Removing and installing humidity sender for air conditioning system [G260]	198
11.4	Removing and installing left vent temperature sender G150	198
11.5	Removing and installing right vent temperature sender G151	200
11.6	Removing and installing left footwell vent temperature sender [G261]	201
11.7	Removing and installing right footwell vent temperature sender [G262]	202
11.8	Removing and installing sensor for interior carbon dioxide concentration G929	203
11.9	Removing and installing heater and air conditioning system control unit J979	203
11.10	Removing and installing dash panel temperature sensor G56	204
11.11	Removing and installing rear vent temperature sender G174	204
12	Air quality improvement system	206
12.1	Overview of fitting locations - air quality improvement system	206
12.2	Removing and installing ioniser control unit J897	206
12.3	Removing and installing air conditioner sensor for fine particle concentration G930	207