

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety information	1
2 Repair instructions	2
2.1 Repair instructions	2
3 Identification	3
3.1 Motor number/motor data	3
4 Hazard classification of high-voltage system	5
4.1 Work that requires high-voltage system to be de-energised	5
5 Electrical components	8
5.1 Starting diagnosis	8
10 - Removing and installing engine	11
1 Safety and repair instructions	11
1.1 Safety information	11
1.2 Repair instructions	11
2 Removing and installing front motor	12
2.1 Assembly overview – front motor, left-hand drive vehicles	12
2.2 Assembly overview – front motor, right-hand drive vehicles	15
2.3 Removing front motor, left-hand drive vehicles	18
2.4 Removing front motor, right-hand drive vehicles	19
2.5 Securing motor to engine and gearbox support, front motor	22
2.6 Installing front motor - left-hand drive vehicles	24
2.7 Installing front motor - right-hand drive vehicles	25
3 Removing and installing rear motor	29
3.1 Assembly overview - rear motor	29
3.2 Removing rear motor	31
3.3 Securing motor to engine and gearbox support, rear motor	37
3.4 Installing rear motor	40
4 Assembly mountings	45
4.1 Removing and installing motor mountings	45
4.2 Removing and installing gearbox mountings	45
5 Rear assembly mountings	46
5.1 Removing and installing assembly mountings	46
19 - Cooling	47
1 Safety and repair instructions	47
1.1 Safety information	47
1.2 Repair instructions	47
2 Cooling system/coolant	48
2.1 Connection diagram - coolant hoses, refrigerant R744	48
2.2 Connection diagram - coolant hoses, refrigerant R1234yf	49
2.3 Checking cooling system for leaks	51
2.4 Checking filling quality	54
2.5 Removing and installing coolant expansion tank	56
2.6 Draining coolant	58
2.7 Filling cooling system	61
3 Coolant pump/coolant regulation	63
3.1 Overview of fitting locations - coolant pump/thermostat assembly	63
3.2 Assembly overview - electric coolant pump	63
3.3 Exploded view - coolant valves, four-wheel drive	64

3.4	Exploded view - coolant valves, rear-wheel drive	65
3.5	Exploded view - coolant temperature senders	66
3.6	Removing and installing coolant pump for high-voltage battery V590 - rear-wheel drive	68
3.7	Removing and installing coolant pump for high-voltage battery V590 - all-wheel drive	70
3.8	Removing and installing coolant pump for low-temperature circuit [V468]	72
3.9	Removing and installing mixing valve for high-voltage battery pre-heating V683 - rear-wheel drive	74
3.10	Removing and installing mixing valve for high-voltage battery pre-heating V683 - four-wheel drive	76
3.11	Removing and installing mixing valve 2 for high-voltage battery pre-heating V696 - heat pump	79
3.12	Removing and installing temperature sensor [G18]	81
3.13	Removing and installing coolant temperature sender 1 for high-voltage battery G898	82
3.14	Removing and installing coolant temperature sender 2 for high-voltage battery G899	84
4	Coolant pipes	86
4.1	Exploded view - coolant pipes	86
5	Radiator, radiator fan	88
5.1	Assembly overview - radiator/radiator fan	88
5.2	Assembly overview – radiator cowl and radiator fan	88
5.3	Removing and installing radiator module	89
5.4	Dismantling and assembling radiator module	91
5.5	Removing and installing radiator cowl with radiator fan	96
5.6	Removing and installing radiator fan [VX57]	97
5.7	Removing and installing control motor for radiator roller blind V711	98
93	Electric drive systems	101
1	Safety and repair instructions	101
1.1	Safety information	101
1.2	Repair instructions	101
2	High-voltage components	102
2.1	Overview of fitting locations – high-voltage components, all-wheel drive	102
2.2	Overview of fitting locations – high-voltage components, rear-wheel drive	104
3	Warning stickers	107
3.1	Checking warning stickers	107
4	High-voltage battery unit	114
4.1	Exploded view - installed high-voltage battery, 55 kWh	114
4.2	Assembly overview – high-voltage battery, installed, 82 kWh	115
4.3	Inspecting and classifying high-voltage battery 1 AX2	117
4.4	Checking high-voltage battery for leaks	118
4.5	Diagnosis of high-voltage battery 1 AX2	119
4.6	Leak test for high-voltage battery 1 AX2	120
4.7	Removing and installing high-voltage battery 1 AX2 - 55 kWh	125
4.8	Removing and installing high-voltage battery 1 AX2 - 82 kWh	136
4.9	Renewing high-voltage battery 1 [AX2]	148
4.10	Raising high-voltage battery 1 [AX2]	148
4.11	Opening high-voltage battery 1 AX2	150
4.12	Sealing high-voltage battery 1 AX2 - 55 kWh	152
4.13	Sealing high-voltage battery 1 [AX2], 82 kWh	155
4.14	Voltage and insulation measurement, 55 kWh	158
4.15	Voltage and insulation measurement, 82 kWh	161
4.16	Interrupting electrical circuit - 55 kWh	164
4.17	Opening electrical circuit, 82 kWh	167
4.18	Removing and installing battery regulation control unit J840	170
4.19	Determining mean cell voltage	172
4.20	Checking whether upper part of battery housing can be reused	173
4.21	Renewing lower part of battery housing	175

4.22	Charging and discharging battery modules	179
5	High-voltage battery components	181
5.1	Overview of fitting locations - battery modules, 55 kWh	181
5.2	Overview of fitting locations – battery modules, 82 kWh	182
5.3	Overview of fitting locations - battery connectors	184
5.4	Exploded view - removed high-voltage battery, 55 kWh	184
5.5	Assembly overview – high-voltage battery, removed, 82 kWh	187
5.6	Assembly overview – high-voltage battery, battery modules	190
5.7	Exploded view - switching unit for high-voltage battery, 55 kWh	191
5.8	Assembly overview – switching unit for high-voltage battery, 82 kWh	192
5.9	Exploded view - high-voltage battery, connector strip, 55 kWh	193
5.10	Assembly overview – high-voltage battery, connecting element, 82 kWh	195
5.11	Removing battery module	196
5.12	Installing battery module	200
5.13	Visually inspecting and classifying battery module	205
5.14	Removing and installing battery modules control unit	206
5.15	Removing and installing connector strip - 55 kWh	208
5.16	Removing and installing connecting element, 82 kWh	211
5.17	Removing and installing switching unit for high-voltage battery, negative terminal SX7 - 55 kWh	213
5.18	Removing and installing switching unit for high-voltage battery, negative terminal [SX7], 82 kWh	216
5.19	Removing and installing switching unit for high-voltage battery, positive terminal SX8 - 55 kWh	218
5.20	Removing and installing switching unit for high-voltage battery, positive terminal [SX8], 82 kWh	220
6	Power and control electronics for electric drive	224
6.1	Assembly overview – power and control electronics for electric drive, all-wheel drive	224
6.2	Assembly overview – power and control electronics for electric drive, rear-wheel drive	224
6.3	Removing and installing power and control electronics for electric drive - four-wheel drive	224
6.4	Removing and installing power and control electronics for electric drive - rear-wheel drive	244
7	Electric drive motor	257
7.1	Calibrating three-phase current drive [VX54-	257
7.2	Leakage test of electric drive motor, rear motor	257
7.3	Assembly overview ? electric drive motor	267
7.4	Removing and installing drive motor rotor position sender, all-wheel drive	272
7.5	Removing and installing drive motor rotor position sender, rear-wheel drive	277
8	Motor control unit	280
8.1	Exploded view - engine control unit	280
8.2	Removing and installing motor control unit J623	280
8.3	Removing and installing bracket for motor control unit J623	282
9	High-voltage wiring	284
9.1	Overview of fitting locations - high-voltage wires	284
9.2	Assembly overview - passage	287
9.3	Removing and installing high-voltage wiring harness for electric drive control units, four-wheel drive	288
9.4	Removing and installing high-voltage wiring harness for electric drive control unit, rear-wheel drive	293
9.5	Removing and installing high-voltage wiring harness for high-voltage heater	295
9.6	Removing and installing high-voltage wiring harness for voltage converter, high-voltage heater, air conditioner compressor, four-wheel drive	298
9.7	Removing and installing high-voltage wiring harness for voltage converter, high-voltage heater, air conditioner compressor, rear-wheel drive	302
9.8	Unplugging high-voltage connectors	308
10	De-energising high-voltage system	312
10.1	De-energising high-voltage system	312

11	Re-energise high-voltage system	314
11.1	Re-energising high-voltage system	314
12	Potential equalisation lines	316
12.1	General notes - potential equalisation lines	316
12.2	Potential equalisation measurement	316
12.3	Overview of fitting locations – potential equalisation lines, all-wheel drive	316
12.4	Overview of fitting locations – potential equalisation lines, rear-wheel drive	317
13	Charging socket	319
13.1	Assembly overview – charging socket	319
13.2	Removing and installing high-voltage battery charging socket 1 UX4	319
13.3	Removing and installing actuator for high-voltage charging socket lock 1 F498	323
14	Charging unit for high-voltage battery	326
14.1	Assembly overview – charging unit for high-voltage battery, all-wheel drive	326
14.2	Assembly overview – charging unit for high-voltage battery, rear-wheel drive	328
14.3	Removing and installing charging unit 1 for high-voltage battery [AX4], all-wheel drive ..	329
14.4	Removing and installing charging unit 1 for high-voltage battery [AX4], rear-wheel drive ..	333
15	Vehicle noise/engine sound	338
15.1	Overview of fitting locations – driving sound/motor sound	338
15.2	Removing and installing engine sound generator module (GM1)	339
15.3	Removing and installing engine sound generator module (GM3)	340
16	Accelerator pedal	343
16.1	Assembly overview - accelerator module	343
16.2	Removing and installing accelerator pedal module [GX2]	343
17	Voltage converter	345
17.1	Assembly overview – voltage converter, all-wheel drive	345
17.2	Assembly overview – voltage converter, rear-wheel drive	345
17.3	Removing and installing voltage converter, all-wheel drive	346
17.4	Removing and installing voltage converter, rear-wheel drive	349