

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Safety precautions	2
2.1 Safety information	2
3 Repair instructions	3
3.1 Repair instructions	3
4 Technical data	4
4.1 Capacities	4
34 - Controls, housing	5
1 Safety and repair instructions	5
1.1 Safety information	5
1.2 Repair instructions	5
2 Removing and installing gearbox	6
2.1 Removing gearbox	6
2.2 Installing gearbox	6
3 Gearbox housing, clutch housing	7
3.1 Assembly overview - gearbox housing	7
3.2 Removing and installing cap	7
4 Gear oil	9
4.1 Checking gear oil level	9
5 Selector mechanism	11
5.1 Exploded view - selector mechanism	11
5.2 Removing and installing selector mechanism	11
39 - Final drive - differential	13
1 Safety and repair instructions	13
1.1 Safety information	13
1.2 Repair instructions	13
2 Seals	14
2.1 Assembly overview ? seals	14
2.2 Renewing left seal	14
2.3 Renewing right seal	16